


Brief and handy:  
everything your dishwasher needs ...

Before using for the first time,  
read the Installation instructions  
and Operating instructions!

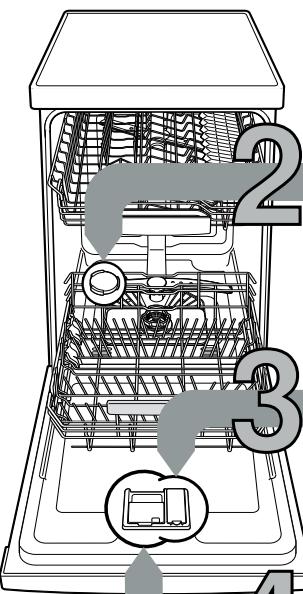


1

## Adjusting the water softening system \*

Ask your water supply company what the water hardness is and enter ...

\* only before the first wash or if the water hardness has been changed

Water hardness value °Clarke	Hardness range	mmol/l	Factory setting
0-8	soft	0-1.1	H:00
9-10	soft	1.2-1.4	H:01
11-12	medium	1.5-1.8	H:02
13-15	medium	1.9-2.1	H:03
16-20	medium	2.2-2.9	H:04
21-26	hard	3.0-3.7	H:05
27-38	hard	3.8-5.4	H:06
39-62	hard	5.5-8.9	H:07

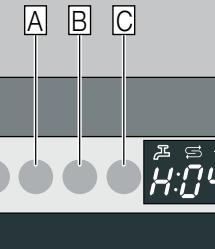


Quickly sorted ...

## How to adjust


- Switch on ON/OFF switch.
- Hold down programme button A and press START button until H:0 ... is indicated on the digital display.
- Release both buttons. The LED for button A flashes and the factory set value of H:04 is indicated on the digital display.
- Press programme button C. Each time the button is pressed the set value increases by one setting; when the value reaches H:07, the display jumps back to H:00 (off).
- Press START button. The chosen setting has now been stored.

2 Add special salt


Dissolves limescale (not necessary for set value 0!) ...

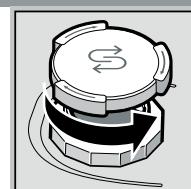


Unscrew cover.

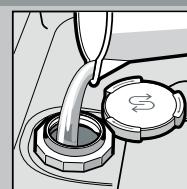

Fill the salt dispenser with water before the first wash only.

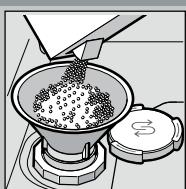


Add special salt (never add detergent!).

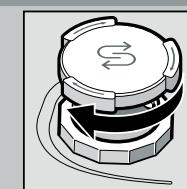


Screw on the cover. Wash immediately.

3 Add rinse aid


Spick and span ...

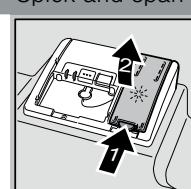

Press mark 1, lift up cover 2.

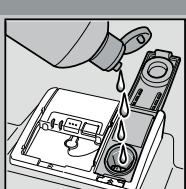


Fill in rinse aid.

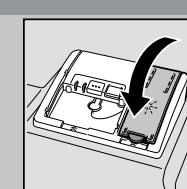

Screw on the cover. CLICK!

4 Add detergent



A lot of dirt, a lot of detergent ...

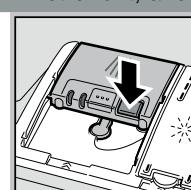


If required, open the cover (press button).



Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions.

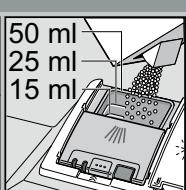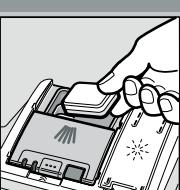

Pour detergent into the dry detergent dispenser only.

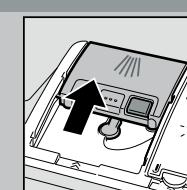

Slide cover shut, press. PLOP!

5 Switch on the appliance


6 Select programme

Quick, economical or intensive ...

## Overview of programmes

 The max. possible number of programmes is illustrated in this overview.  
The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice.  
\* half normal load




Intensive

70°



Auto

 45°-65°




Eco

50°




Gentle

 40°




Quick

 
45°




Prerinse

 


Duration: hs : mins

 


Energy consumption in kWh

 


Water consumption in litres

 

Intensive zone

 

Hygiene

 

Extra drying

... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes.)

Start programme Here we go ...

7

## Additional options \*\*



Express Wash/  
Speed Perfect  
... is obtained by increased energy consumption at a constant cleaning performance.



Half load  
... for a few items, saves water, energy and time.



Intensive zone  
... perfect for a mixed load. Washing pressure and washing temperature are increased slightly.



Hygiene  
... the temperature is increased during the final rinse process. This increases the hygiene status.



Extra drying  
... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes.)


8

9 Switch off the appliance Everything o.k. ...


\*\* depending on model

## Maintenance and care


Filters  
... check,  
if required,  
clean.

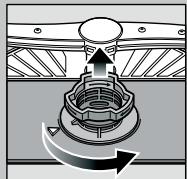


Rotate  
filter cylinder,  
remove filter  
system ...

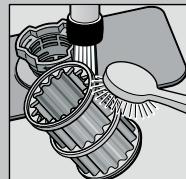

rinse under  
running water ...

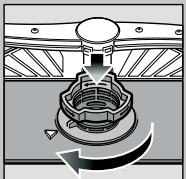


insert ...

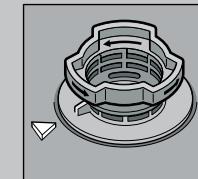

screw on  
filter system.  
NOTE MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms  
... remove  
blockages/deposits.

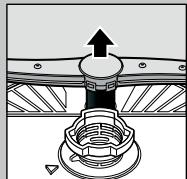


Pull lower arm  
upwards ...



unscrew upper  
spray arms ...

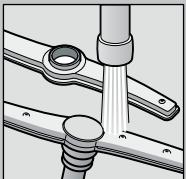


clean spray nozzles  
under running water  
(if required  
use toothpicks) ...

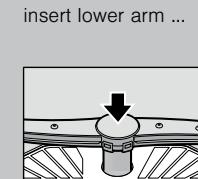

insert lower arm ...



screw on upper  
spray arms tightly.

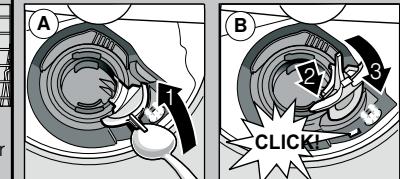

**Rectifying minor faults yourself ...**

... as it is worth doing it yourself!

More information can be found in the operating instructions

 
### Fault

### Possible causes

### Remedial action

Display "F" is lit

Supply fitting jammed  
or calcified



- ▶ Open supply fitting.
- ▶ 1. Unscrew water connection.  
2. Clean filter in the water connection.  
3. Flow rate must be min. 10 l/min.,  
when water supply is open.  
If the flow rate is less,  
replace the supply fitting.
- ▶ Install supply hose without kinks.

Display "E:22"

Filters are soiled or blocked

- ▶ Clean the filters (see above).

Display "E:24"  
and "F" are lit

Waste water hose is blocked  
or kinked  
Cover not attached to waste  
water pump

- ▶ Install waste water hose without kinks.
- ▶ Attach cover (see above).

Display "E:25"  
and "F" are lit

Waste water pump blocked

- ▶ Clean waste-water pump (see above).

Other fault display  
"E:XX" is lit

Appliance has technical defect

- ▶ Call factory customer service (state fault display).
- ▶ Unplug appliance.

Residual water  
in the appliance

The programme has not yet ended

- ▶ Switch on and close the appliance  
or terminate the programme  
(see Terminating the programme).

Rust on the cutlery

Cutlery not rust-resistant  
Hard knife blades are more susceptible  
Extraneous rust

- ▶ Use dishwasher-proof cutlery.
- ▶ Never wash rusting parts in the appliance.


### Fault

### Possible causes

### Remedial action

Utensils are not clean

Sand or gritty residue  
on the utensils

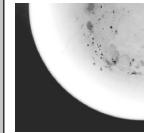

Utensils are situated close together  
or one above the other

Too little detergent

Unsuitable programme selected

Spray arm nozzles blocked

Filters dirty, not seated firmly

Spray arms blocked

- ▶ Separate the utensils, prevent contact points.

- ▶ Follow manufacturer's instructions (detergent).

- ▶ Select a more intensive programme.

- ▶ Clean the spray arms (see above).

- ▶ Clean the filters (see above).

- ▶ Arrange the utensils so that the spray  
arms can rotate freely.

Stains and streaks

Rinse aid dosage too high/  
too low

- ▶ Streaks: reduce dosage.

- ▶ Water or limescale stains: increase dosage.

Utensils not dry

Rinse aid

- ▶ Increase dosage.

- ▶ Change the product.

- ▶ Use rinse aid.

Milky deposits  
on the utensils  
(can be removed)

The combined detergent used  
has a poor drying performance  
Appliance setting

- ▶ Activate intensive drying (depending on model).

Milky deposits, glasses  
cloudy/tarnished  
(cannot be removed)

Water softening system incorrectly set

- ▶ Correctly set water softening system.

No salt

No salt

- ▶ Refill with special salt.

Plastic/utensils  
discoloured

Glasses not dishwasher-proof

- ▶ Use dishwasher-proof glasses.

- ▶ Use a detergent suitable for glasses.

Too little detergent

Discoloration caused by food colourings  
(tomato sauce)

- ▶ Follow manufacturer's instructions (detergent).

- ▶ Discoloration is harmless; subsequent rinse cycles  
will cause it to fade.

## Terminating the programme ...

While the programme is running,  
press the START button  
for approx. 3 sec. (Reset).



The numerical display  
indicates "0:01";  
approx. 1 minute after  
the programme ends,  
"0:00" is indicated.



Switch off the appliance.

## Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink  
or adhesive labels; remove large remnants of jam, milk products and food  
according to the operating instructions and check that the spray arms can rotate freely).