



H11WE60N0G  
H11WE60S0G  
Microwave

<b>Important safety information</b> .....	<b>2</b>	<b>Changing the signal duration</b> .....	<b>8</b>
Causes of damage .....	4	<b>Care and cleaning</b> .....	<b>8</b>
<b>Installation and connection</b> .....	<b>4</b>	Cleaning agents .....	8
<b>Energy and environment tips</b> .....	<b>5</b>	<b>Malfunction table</b> .....	<b>8</b>
Saving energy .....	5	<b>After-sales service</b> .....	<b>9</b>
Environmentally-friendly disposal .....	5	E number and FD number .....	9
<b>The control panel</b> .....	<b>5</b>	Technical data .....	9
Rotary selector .....	5	<b>Automatic programmes</b> .....	<b>10</b>
Accessories .....	5	Setting a programme .....	10
<b>Before using the appliance for the first time</b> .....	<b>6</b>	Defrosting using the automatic programmes .....	10
Setting the clock .....	6	Cooking with the automatic programmes .....	10
<b>The microwave</b> .....	<b>6</b>	<b>Test dishes in accordance with EN 60705</b> .....	<b>11</b>
Notes regarding ovenware .....	6	Cooking and defrosting with microwave .....	11
Microwave power settings .....	6		
Setting the microwave .....	7		
Cooling fan .....	7		
<b>Memory</b> .....	<b>7</b>		
Saving memory settings .....	7		
Starting the memory .....	7		

Additional information on products, accessories, replacement parts and services can be found at [www.neff-international.com](http://www.neff-international.com) and in the online shop [www.neff-eshop.com](http://www.neff-eshop.com)

## **Important safety information**

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person

responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always insert the accessories into the cooking compartment correctly. See "*Description of accessories*" in the instruction manual.

### **Risk of fire!**

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.
- Using the appliance for anything other than its intended purpose is dangerous and may cause damage. The following is not permitted: drying out food or clothing, heating slippers, grain or

cereal pillows, sponges, damp cleaning cloths or similar.

For example, heated slippers and grain or cereal pillows may catch fire, even several hours after they have been heated. The appliance must only be used for the preparation of food and drinks.

- Food may catch fire. Never heat food in heat-retaining packages. Do not leave food heating unattended in containers made of plastic, paper or other combustible materials. Do not select a microwave power or time setting that is higher than necessary. Follow the information provided in this instruction manual. Never use the microwave to dry food. Never defrost or heat food with a low water content, e.g. bread, at too high a microwave power or for too long.
- Cooking oil may catch fire. Never use the microwave to heat cooking oil on its own.

### **Risk of explosion!**

Liquids and other food may explode when in containers that have been tightly sealed. Never heat liquids or other food in containers that have been tightly sealed.

### **Risk of serious damage to health!**

- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food residue immediately. Always keep the cooking compartment, door seal, door and door stop clean; see also section *Care and cleaning*.
- Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.
- Microwave energy will escape from appliances that do not have any casing. Never remove the casing. For any maintenance or repair work, contact the after-sales service.

### **Risk of electric shock!**

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the

circuit breaker in the fuse box. Contact the after-sales service.

- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- Penetrating moisture may cause electric shock. Never subject the appliance to intense heat or humidity. Only use this appliance indoors.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The appliance is a high-voltage appliance. Never remove the casing.

### **Risk of burns!**

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.
- Foods with peel or skin may burst or explode during, or even after, heating. Never cook eggs in their shells or reheat hard-boiled eggs. Never cook shellfish or crustaceans. Always prick the yolk when baking or poaching eggs. The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.
- Heat is not distributed evenly through baby food. Never heat baby food in closed containers. Always remove the lid or teat. Stir or shake well after the food has been

heated. Check the temperature of the food before it is given to the child.

- Heated food gives off heat. The ovenware may become hot. Always use oven gloves to remove ovenware or accessories from the cooking compartment.
- Airtight packaging may burst when food is heated. Always observe the instructions on the packaging. Always use oven gloves to remove dishes from the cooking compartment.

### **Risk of scalding!**

- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.
- There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid may suddenly boil over and spatter. When heating, always place a spoon in the container. This will prevent delayed boiling.

### **Risk of injury!**

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- Unsuitable ovenware may crack. Porcelain or ceramic ovenware can have small

perforations in the handles or lids. These perforations conceal a cavity below. Any moisture that penetrates this cavity could cause the ovenware to crack. Only use microwave-safe ovenware.

### **Causes of damage**

#### **Caution!**

- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- Never use the microwave oven without the turntable.
- Creation of sparks: Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Foil containers: Do not use foil containers in the appliance. They damage the appliance by producing sparks.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Condensation in the cooking compartment: Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. To prevent corrosion, wipe off the condensation every time you cook.

---

## **Installation and connection**

This appliance is intended for domestic use only.

This appliance is only intended to be fully fitted in a kitchen.

Please observe the special installation instructions.

The appliance can be fitted in a 60 cm wide wall cabinet (min. 30 cm deep and 85 cm off the floor).

The appliance is fitted with a plug and must only be connected to a properly-installed earthed socket. The fuse protection must be rated at 10 amperes (L or B circuit breakers). The mains voltage must correspond to the voltage specified on the rating plate.

The socket must be installed and the power cable replaced by a qualified electrician only. If the plug is no longer accessible following installation, an all-pin disconnecting device must be present on the installation side, with a contact gap of at least 3 mm.

Multiple plugs, plug bars and extension leads must not be used. Overloading can result in a risk of fire.

# Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

## Saving energy

Only preheat the oven if you are asked to in the recipe or in the tables in the instruction manual.

Use dark-coloured, black-coated or enamelled baking tins. They absorb the heat particularly well.

Always keep the appliance door closed when cooking.

If you are baking more than one cake, it is best to bake them one after the other. The cooking compartment will still be warm. This can reduce the baking time for the second cake.

For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

## Environmentally-friendly disposal


Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

# The control panel

Here, you will see an overview of the control panel. Depending on the appliance model, individual details may differ.

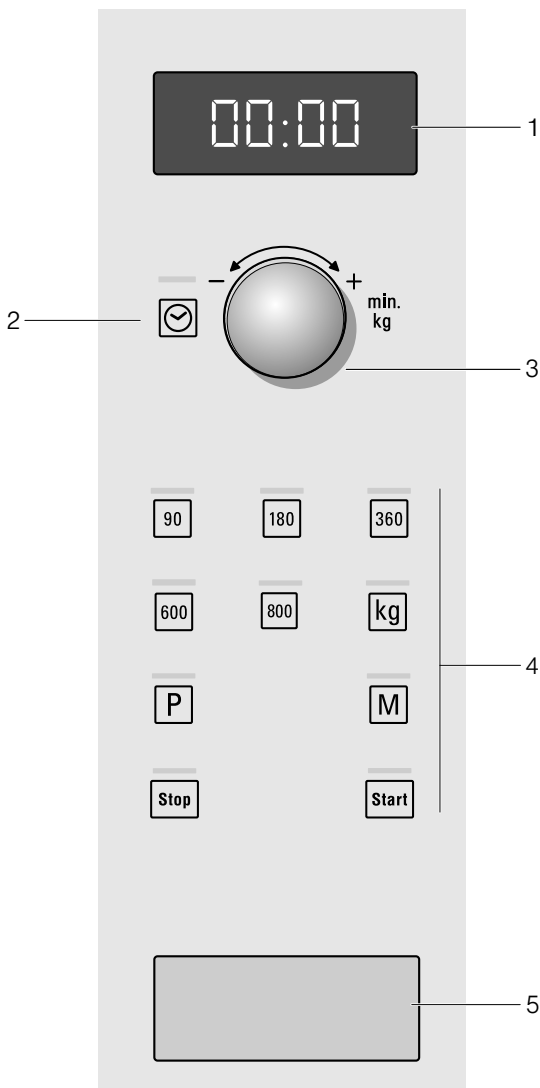

4	<b>Buttons</b>
5	<b>Door opener</b>

Buttons	Use
	Sets the clock
90	Selects 90 watt microwave power
180	Selects 180 watt microwave power
360	Selects 360 watt microwave power
600	Selects 600 watt microwave power
800	Selects 800 watt microwave power
	Selects the kilograms for the programmes
	Selects automatic programmes
	Selects the memory
	Starts operation
	Stops operation

## Rotary selector

The rotary selector is used to alter the default values and set values.


The rotary selector is retractable. Press on the rotary selector to lock it in or out.

## Accessories

### The turntable

#### How to fit the turntable:

1. Place the turntable ring **a** in the recess in the cooking compartment.
2. Let the turntable **b** slot in place in the drive **c** in the centre of the cooking compartment floor.

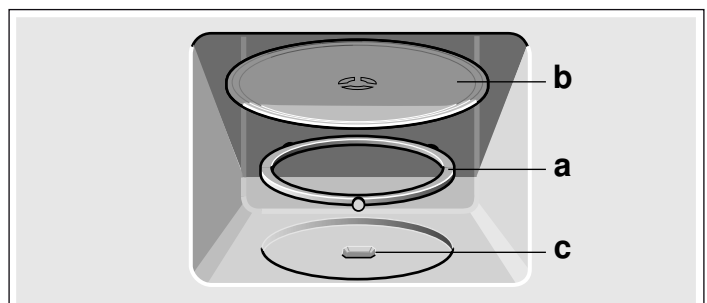

1	<b>Display</b> for clock and cooking time
2	<b>Clock button</b>
3	<b>Rotary selector</b> for setting the time and cooking time or for setting automatic programmes




**Note:** Do not use the appliance if the turntable is not in place. Ensure that it is properly slotted into place. The turntable can turn clockwise or anti-clockwise.

## Before using the appliance for the first time

Here you will find everything you need to do before using the microwave to prepare food for the first time. First read the section on *Safety information*.



### Setting the clock

When the appliance is first connected or after a power cut, three zeros will appear in the display panel.


1. Press the  button.  
*12:00h* appears in the display and the indicator lamp above the  button lights up.
2. Set the clock using the rotary selector.
3. Press the  button again.

The current time is set.

### Hiding the clock

Press the  button and then press the  button. The display is blank.

### Resetting the clock

Press the  button. The time *12:00* appears in the display. Then make the settings as described in steps 2 and 3.

### Change the clock, e.g. from summer to winter time

Set as described in point 1 to 3.


## The microwave

Microwaves are converted to heat in foodstuffs. You will find information about ovenware and how to set the microwave.

**Note:** In the *Tested for you in our cooking studio* section, you will find examples for defrosting, heating and cooking with the microwave oven.

Try out the microwave straight away. You could heat up a cup of water for your tea, for example.

Use a large cup without any decorative gold or silver trim and place a teaspoon in it. Place the cup containing the water on the turntable.

1. Press the 800 W button.
2. Set *1:30* minutes using the rotary selector.
3. Press the  button.

After 1 minute 30 seconds, an audible signal sounds. The water for the tea is hot.

As you are drinking your tea, please take time to read again the safety precautions that can be found at the front of the instruction manual. This is very important.

### Notes regarding ovenware

#### Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

#### Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

#### Caution!

Creation of sparks: metal – e.g. a spoon in a glass – must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

### Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

1. Heat the empty ovenware at maximum power for ½ to 1 minute.
2. Check the temperature occasionally during that time. The ovenware should still be cold or warm to the touch. The ovenware is unsuitable if it becomes hot or sparks are generated.

### Microwave power settings

Use the button to set the desired microwave power.


90 W	For defrosting delicate foods
180 W	For defrosting and continued cooking
360 W	For cooking meat and heating delicate foods
600 W	For heating and cooking food
800 W	For heating liquids

**Note:** You can set the 800 W microwave power setting for 30 minutes, 600 W for 1 hour, the other power settings for 1 hour and 39 minutes respectively.

## Setting the microwave

Example: microwave power 600 watts, 5 minutes

1. Press the required microwave power setting.  
The indicator light above the button lights up.
2. Set a cooking time using the rotary selector.

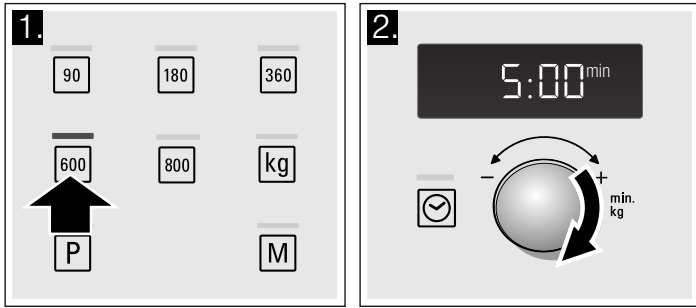

3. Press the **Start** button.

The cooking time counts down in the display.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press **Stop**. The clock reappears.

## Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

### Pausing

Press the **Stop** button once or open the appliance door. Operation is suspended. The display above the **Start** button flashes. After closing the door, press the **Start** button again.

### Cancelling operation

Press the **Stop** button twice or open the door and press the **Stop** button once.

**Note:** You can also adjust the cooking time first and then the microwave power setting.

## Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

### Notes

- The cooking compartment remains cold during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

# Memory


You can save the settings for a dish in the memory and call it up again at any time.

The memory is useful for if you frequently prepare a specific dish.

## Saving memory settings

Example: 360 W, 25 minutes

1. Press the **M** button.  
The indicator light above the button lights up.
2. Press the required microwave power setting.  
The indicator light above the button lights up and 1:00 min appears in the display.
3. Set the cooking time using the rotary selector.

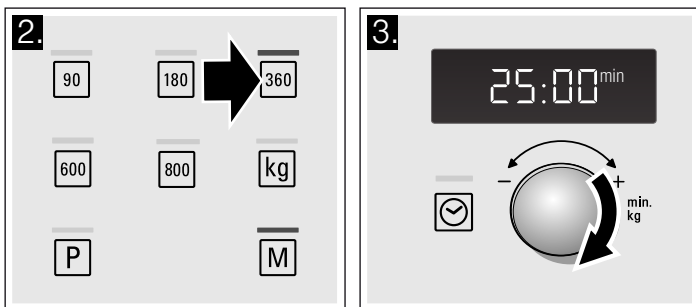

4. Confirm by pressing the **M** button.

The clock reappears. The setting is saved.

### Notes

- You can save the memory settings and start the appliance immediately. When finishing, instead of pressing **M**, press **Start**.

- You cannot save several microwave power settings one after the other.
- You cannot save automatic programmes.
- **Saving a new setting in the memory:** press the **M** button. The old settings appear. Save the new programme as described in steps 1 to 4.

## Starting the memory

It is very easy to start the saved programme. Place your meal into the appliance. Close the appliance door.

1. Press the **M** button.  
The saved settings are displayed.
2. Press the **Start** button.  
The cooking time counts down in the display.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press **Stop**. The clock reappears.

### Pausing

Press the **Stop** button once or open the appliance door. Operation is suspended. The display above the **Start** button flashes. After closing the door, press the **Start** button again.

### Cancelling operation

Press the **Stop** button twice or open the door and press the **Stop** button once.

# Changing the signal duration

You will hear an audible signal when the appliance is switched off. You can change the duration of the signal.

To do so, press the  button for approx. 6 seconds.

The new signal duration is adopted.  
The clock reappears.

The following are possible:  
Short signal duration - 3 tones  
Long signal duration - 30 tones.

# Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

### Risk of short circuit!

Never use high-pressure cleaners or steam cleaners to clean the oven.

### Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

### Risk of electric shock!

Do not immerse the appliance in water or clean under a jet of water.

Surfaces are different, and damage caused by using the wrong cleaning agent can be avoided by observing the information in the table below.

### Do not use

- sharp or abrasive cleaning agents.  
The surface could be damaged. If such a substance comes into contact with the front of the appliance, wash it off immediately with water.
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers for cleaning the seal.
- hard scouring pads or cleaning sponges.  
Wash new sponge cloths thoroughly before use.
- cleaning agents with high concentrations of alcohol.

## Cleaning agents

### Caution!

Before cleaning, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Clean the outside of the appliance and the cooking compartment with a damp cloth and mild detergent. Dry with a clean cloth.

Area	Cleaning agents
Appliance front	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning.
Cooking compartment made of stainless steel	Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth. If the oven is very dirty: use oven cleaner, but only when cooking compartment is cold. It is best to use a stainless-steel sponge. Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly.
Recess in cooking compartment	Damp cloth: Ensure that no water seeps through the turntable drive into the appliance interior.
Turntable and turntable ring	Hot soapy water: When putting the turntable back in place, make sure it slots in correctly.
Door panels	Glass cleaner: Clean with a dish cloth. Do not use a glass scraper.
Seal	Hot soapy water: Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning.

# Malfunction table

Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not turn out exactly as you wanted, refer to the *Tested for you in our cooking studio* section, where you will find plenty of cooking tips and tricks.









### Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

You can take remedial action yourself for some error messages.



## Troubleshooting

Error message	Possible cause	Remedy/note
The appliance does not work	The plug is not plugged in.	Plug the plug in
	Power failure	Check whether the kitchen light works.
	Faulty circuit breaker	Look in the fuse box to make sure that the circuit breaker for the appliance is in working order.
	Faulty operation	Switch off the circuit breaker in the fuse box. Switch it back on after approx. 10 seconds.
Three zeros light up in the display.	Power failure	Reset the time.
The appliance is not in operation. A cooking time appears in the display.	The rotary selector was actuated accidentally.	Press the  button.
	The  button was not pressed after setting.	Press the  button or cancel the setting with the  button.
The microwave does not work.	The door was not fully closed.	Check whether food residue or debris is trapped in the door.
	The  button was not pressed.	Press the  button.
It takes longer than before for the food to heat up	The microwave power level setting was too low.	Select a higher microwave power setting.
	A larger amount of food than usual has been placed in the appliance.	Double the amount – double the time.
	The food was colder than usual.	Stir or turn the food during cooking.
The turntable makes a scratching or grinding noise.	Dirt or debris in the area around the turntable drive.	Clean the roller ring and the recess in the cooking compartment.
Microwave operation has been cancelled for no apparent reason.	The microwave has a fault.	If this fault occurs repeatedly, please call the after-sales service.
"M" appears in the display.	The appliance is in demo mode.	Press and hold the  button and the  button for approx. 7 seconds. Demo mode is deactivated.

## After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

### E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate bearing these numbers can be found on the right-hand side when you open the appliance door. To save time, you can make a note of the number of your appliance and the telephone number of the after-sales service in the space below, should it be required.

E no.	FD no.

### After-sales service

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

**GB** 0344 892 8989

Calls charged at local or mobile rate.

**IE** 01450 2655

0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

This appliance corresponds to the standards EN 55011 and CISPR 11. It is a Group 2, Class B product.

Group 2 means that microwaves are produced for the purpose of heating food. Class B states that the appliance is suitable for private households.

### Technical data

Input voltage	AC 230 - 240 V, 50 Hz
Power consumption	1270 W
Maximum output power	800 W
Microwave frequency	2450 MHz
Fuse	10 A
Dimensions (HxWxD)	
- appliance	382 x 594 x 317 mm
- cooking compartment	221 x 308 x 298 mm
VDE approved	yes
CE mark	yes

# Automatic programmes

You can use the automatic programmes to defrost food with the greatest of ease and prepare dishes quickly and easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can select from 7 programmes.

## Setting a programme


Once you have selected a programme, make settings as follows:

1. Press the **[P]** button repeatedly until the required programme number appears.

The indicator light above the button lights up.


2. Press the **[kg]** button.

The indicator light above the button lights up and a suggested weight appears.

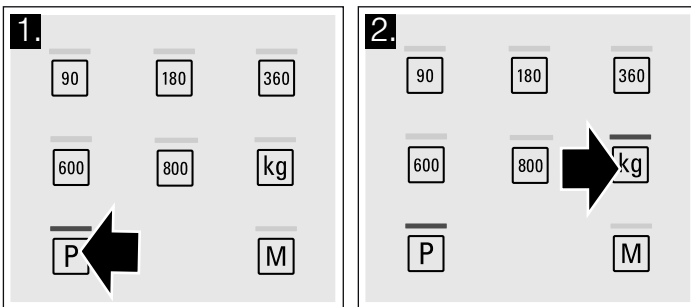

3. Turn the rotary selector to specify the weight of the dish.

4. Press the **[Start]** button.

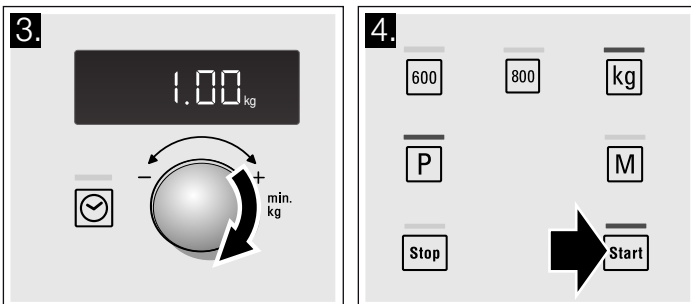

You will see the cooking time for the programme counting down.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press **[Stop]**. The clock reappears.

### Correction

Press the **[Stop]** button twice and reset.

### Pausing

Press the **[Stop]** button once or open the appliance door. Operation is suspended. The display above the **[Start]** button flashes. After closing the door, press the **[Start]** button again.

### Cancelling operation

Press the **[Stop]** button twice or open the door and press the **[Stop]** button once.

### Notes

- For some programmes, an audible signal sounds after a certain time. Open the appliance door and stir the food or turn the meat or poultry. After closing the door, press the **[Start]** button again.
- You can query the programme number and weight using "**[P]**" or "**[kg]**". The queried value is shown for 3 seconds in the display.

## Defrosting using the automatic programmes

You can use the 4 defrosting programmes to defrost meat, poultry and bread.

### Notes

#### ■ Preparing food

Use food that has been frozen at  $-18\text{ }^{\circ}\text{C}$  and stored in portion-sized quantities that are as thin as possible.

Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.

- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.

#### ■ Ovenware

Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.

#### ■ Resting time

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand.

After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

#### ■ Signal

For some programmes, a signal sounds after a certain time. Open the appliance door and separate the food out or turn the meat or poultry. Close the door and press the Start button.

Programme no.		Weight range in kg
	<b>Defrost</b>	
P 01	Minced meat	0.20 - 1.00
P 02	Pieces of meat	0.20 - 1.00
P 03	Chicken, chicken pieces	0.40 - 1.80
P 04	Bread	0.20 - 1.00

## Cooking with the automatic programmes

With the 3 cooking programmes, you can cook rice, potatoes or vegetables.

### Notes

#### ■ Ovenware

The food must be cooked in microwaveable cookware with a lid. For rice, you should use a large, deep dish.

#### ■ Preparing food

Weigh out the food. You need to know the weight to set the programme.

#### Rice:

Do not use boil-in-the-bag rice. Add the required amount of water, as specified on the packaging. This is usually two or three times the quantity of rice.

#### Potatoes:

For boiled potatoes, cut the fresh potatoes into small, even-sized pieces. Add one tablespoon of water for each 100 g boiled potatoes, and a little salt.

#### Fresh vegetables:

Weigh out the fresh, trimmed vegetables. Cut the vegetables into small, even-sized pieces. Add a tbsp water for each 100 g vegetables.

#### ■ Signal

While the programme is running, a signal sounds after some time. Stir the food.

#### ■ Resting time

Once the programme has finished, stir the food again. You should leave it to stand for another 5 to 10 minutes until it reaches an even temperature.

The cooking result will depend on the quality and consistency of the food.

Programme no.		Weight range in kg
	<b>Cooking</b>	
P 05	Rice	0.05 - 0.2
P 06	Potatoes	0.15 - 1.0
P 07	Vegetables	0.15 - 1.0

## Test dishes in accordance with EN 60705

The quality and correct operation of microwave appliances are tested by testing institutes using these dishes.

In accordance with EN 60705, IEC 60705, DIN 44547 and EN 60350 (2009)

### Cooking and defrosting with microwave

#### Microwave cooking

Dish	Microwave setting (watts) and cooking time in minutes	Notes
Custard, 565 g	180 watts, 25-30 mins + 90 watts, 20-25 mins	Place the 20 x 17 cm Pyrex dish on the turntable.
Sponge	600 watts, 8-10 mins	Place the Ø 22 cm Pyrex dish on the turntable.
Meatloaf	600 watts, 20-25 mins	Place the Pyrex dish on the turntable.

#### Microwave defrosting

Dish	Microwave setting (watts) and cooking time in minutes	Note
Meat	180 watts, 5-7 mins + 90 watts, 10-15 mins	Place the Ø 22 cm Pyrex dish on the turntable.



Constructa-Neff Vertriebs-GmbH  
Carl-Wery-Straße 34  
D-81739 München  
GERMANY



9000913627

(02)  
951222