


# Introduction to electronic Oven control

❑ Please refer to the detailed instructions supplied with the appliance.

## Heating-up monitor

## Electronic timer

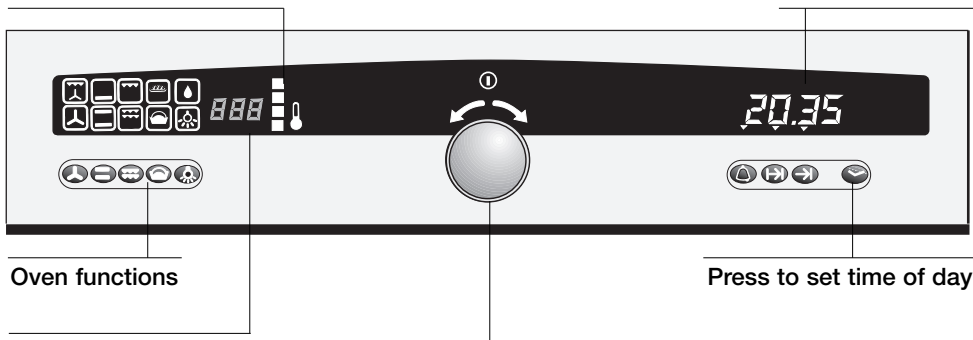

## Oven temperature



## Rotary control / main switch (pops out)

Control knob in (flush): All appliance functions, with the exception of the time of day, are disabled.

## Control knob out:

The appliance is ready to be used. The oven temperature selector and the electronic timer can now be programmed.

## Oven functions:

-  Circotherm and defrosting position
-  Circoroasting (press twice)
-  Conventional (top and bottom heat)
-  Bottom heat (press twice)
-  Radiant grill-full element
-  Radiant grill-centre element only, for small amounts of food (press twice)
-  Dough-proving setting
-  Bread-baking position (press twice)
-  Oven light
-  Hydroclean system (press twice)

## Note:

- ❑ The oven light switches on for every oven function. Exception: Oven cleaning.
- ❑ The heating-up monitor indicates how far the oven has heated up.