


**How to connect up,
build-in, set up, use and
look after your
B1691 oven**

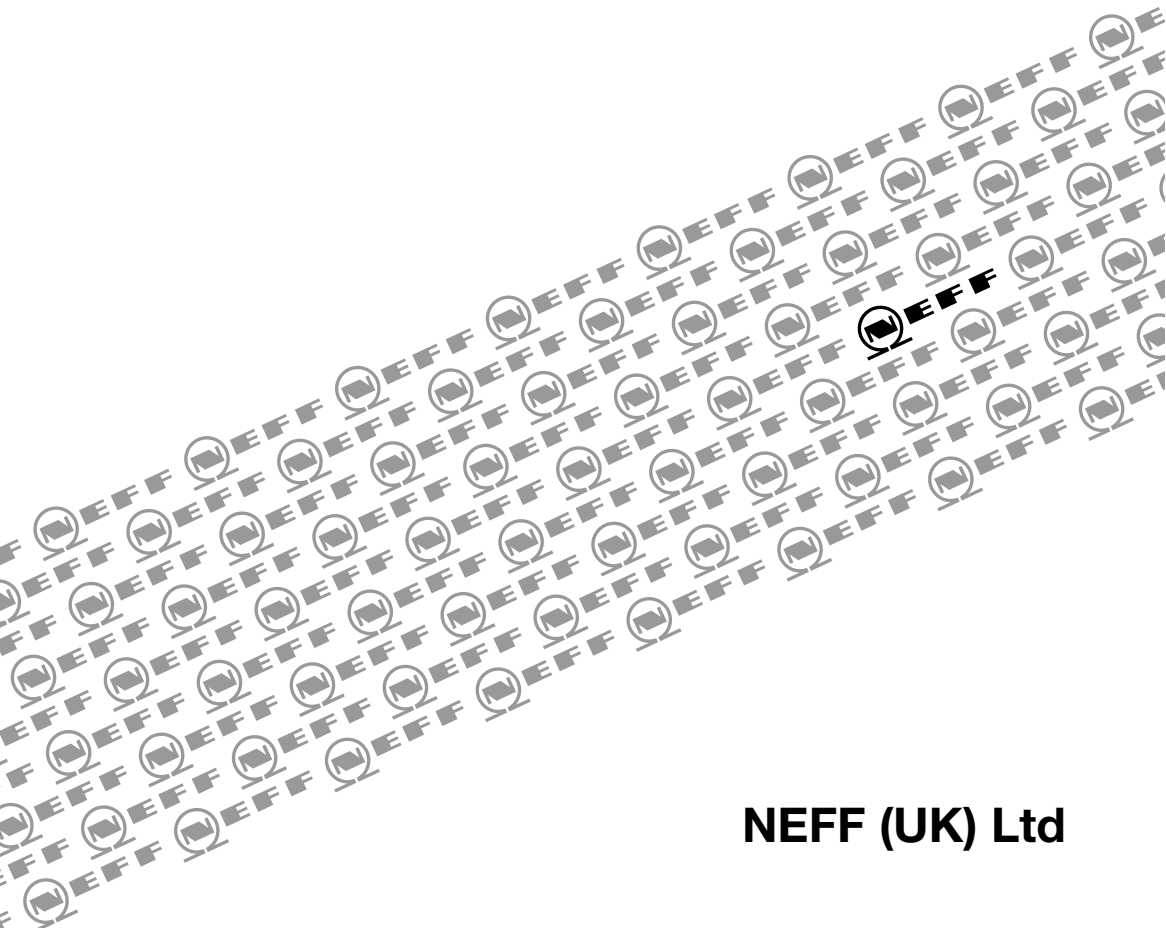

NEFF (UK) Ltd

Table of Contents

	Page		Page
Important Information		Cleaning and Care	
<input type="checkbox"/> Notes on disposal	3	<input type="checkbox"/> Important cleaning basics	24
<input type="checkbox"/> Before connecting your new appliance ...	3	<input type="checkbox"/> Enamel and glass	24
<input type="checkbox"/> Appliance safety considerations	4	<input type="checkbox"/> Stainless steel front	24
Introducing: Your New Cooker		<input type="checkbox"/> Oven interior	24
<input type="checkbox"/> Control panel overview	5	<input type="checkbox"/> Hydroclean system	25+26
<input type="checkbox"/> Accessories	6	<input type="checkbox"/> Removing/installing the oven door	27
<input type="checkbox"/> Shelf positions	6	<input type="checkbox"/> Oven light	27
Before Using Your Appliance for the First Time		<input type="checkbox"/> Removing the shelf railings	27
<input type="checkbox"/> Setting the time of day	7	<input type="checkbox"/> Heating element	27
<input type="checkbox"/> Preliminary cleaning	7	Service and Repair Information	28
<input type="checkbox"/> Initial burn-in	7	Trouble-shooting Guide	29
Electronic timer		Assembly Instructions	
<input type="checkbox"/> Minute timer	8	<input type="checkbox"/> For the installer and kitchen expert	30
<input type="checkbox"/> Automatic timer	9+10	<input type="checkbox"/> Installation of the built-in oven	31
<input type="checkbox"/> Special functions	11		
<input type="checkbox"/> Information	11		
Baking, Roasting and Grilling			
<input type="checkbox"/> Definition of Oven Features	12+13		
<input type="checkbox"/> Switching the oven ON and OFF	14+15		
<input type="checkbox"/> Safety features	16		
<input type="checkbox"/> Baking	17		
<input type="checkbox"/> Roasting	18		
<input type="checkbox"/> Grilling	19		
Cooking Tips and Helpful Hints	20		
Defrosting and Cooking	21+22		
Dough proving function	23		


Notes on disposal

- ❑ Old appliances still have some residual value. An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again.
Before you dispose of your old appliance, make sure that it has been rendered inoperable.
- ❑ Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environment-friendly and suitable for recycling. Please make a contribution to protecting the environment by disposing of the packaging appropriately.
Up-to-date information concerning options for disposing of your old appliance and the packaging from the new one can be obtained from your retailer or local government office.

Before connecting your new appliance

- ❑ Before using your new appliance, please read these Instructions for Use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance.
- ❑ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.
- ❑ Please keep the operating and installation instructions in a safe place; this important documentation may also be of use to a possible subsequent owner.
- ❑ Do not use the appliance if it is damaged in any way.
- ❑ Installation and connection of the appliance should be performed according to the instructions and connection diagram provided, and should be entrusted to a licensed specialist. In the event of a damage that occurs as a result of improper connection, the warranty will be void.
- ❑ Our appliances meet the applicable safety regulations for electrical appliances. Repairs may be performed only by customer service engineers trained by the manufacturer. Inexpert repairs may entail serious injury to you, the user.


Appliance safety considerations

- ☐ The appliance should only be used for the preparation of food.
- ☐ The surfaces of heating and cooking appliances get hot during operation. The interior oven walls and the heating elements get extremely hot. Always keep children away from the appliance.
- ☐ Never leave the appliance unattended when cooking with fat or oil. They can catch fire if overheated.
- ☐ Clean the oven regularly. Fatty or oily remnants could ignite when the oven is switched on.
- ☐ Make sure that the power cord does not get caught in the hot oven door. The plastic insulation could melt.
- ☐ In the case of a defect, switch off (or remove) the mains fuse in the building electrical system.
- ☐ Do not store combustible items in the oven. They could ignite if the oven is switched on accidentally.
- ☐ Do not clean the oven with steam or high-pressure cleaners.
- ☐ If using hot air , do not place greaseproof paper loosely in the oven (e.g. when heating the oven). The hot-air fan could draw in the paper which may damage the heater and fan.
- ☐ Do not insert a baking sheet at the bottom of the oven, or cover the base of the oven with aluminium foil, as this would result in heat build up. Roasting and baking times would change, and the enamel would be damaged.
- ☐ Never pour water directly into the hot oven. Damage to the enamel could result.
- ☐ Dripping juices may leave spots on the oven lining. Always place a baking tray below to prevent this from happening.
- ☐ Never stand or sit on the open oven door.
- ☐ The oven door must close properly. Keep the door seal surfaces clean.

Introducing: Your new Cooker

Heating-up monitor

Rotary control / main switch (pops out) for all temperature settings and for setting the electronic timer

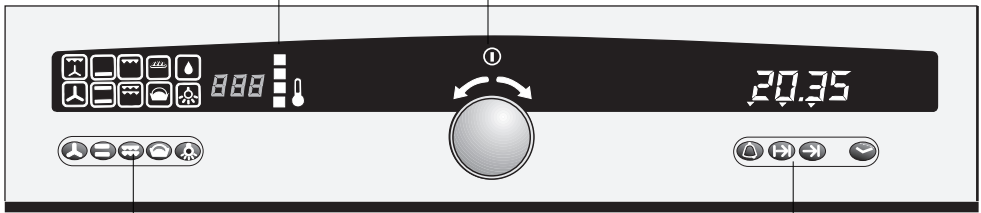










Oven functions

Electronic timer

Control panel:

 - ☐ The rotary control / main switch can be retracted.
- ☐ Press the middle of the knob to release or push it inwards.
- ☐ All appliance functions are disabled while the knob is retracted, with the exception of setting the time of day.
- ☐ Symbols on the control panel are illuminated. As soon as you select a particular function, the corresponding symbol lights up.

Oven functions:

-  Circotherm and defrosting position
-  Circoroasting (press twice)
-  Conventional (top and bottom heat)
-  Bottom heat (press twice)
-  Radiant grill-full element
-  Radiant grill-centre element only, for small amounts of food (press twice)
-  Dough-proving setting
-  Bread-baking position (press twice)
-  Oven light
-  Hydroclean system (press twice)

Note:

- ☐ The oven light switches on for every oven function. Exception: Oven cleaning.
- ☐ The heating-up monitor indicates how far the oven has heated up.

Introducing: Your new Cooker

Accessories

- ☐ Your appliance is supplied with:

2 Wire shelves
1 Roasting/grill pan with grid

- ☐ The following accessories can be obtained from the supplier of your oven:

Order no.

Deep roasting pan	Z 1270 X2
Baking tray, aluminium	Z 1330 X0
Baking tray, enamelled	Z 1340 X2
Small grill-set	Z 1240 X2
Supplementary equipment set – Telescopic	Z 1750 X0

Note:


- ☐ The baking tray or roasting pan may distort while the oven is operating. This is caused by major temperature differences on the utensil. These differences may occur if only one part of the utensil was covered or if deep-frozen food, e. g. pizza, was placed on the utensil.

The distortion will already subside again during baking, roasting or grilling.

Shelf positions

- ☐ Your oven features 4 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven.

⚠ When using **circotherm**, do not use shelf position »2«, in order not to block air circulation.

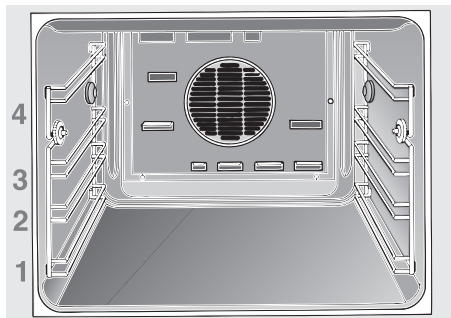


Before Using Your Appliance for the First Time

Time of day

- ☐ Before you use your appliance for the first time, it is necessary to set the current time on the electronic timer.
- ☐ After connecting to the mains, or after a power failure, the display **0:00** will blink.

Setting the time:

Setting the time of day:

1. Press the middle of the rotary control so that it pops out.
2. Press the  button for setting the time of day.
 - ☐ The arrows above the rotary control flash.

Note: The time cannot be set if an automatic function is active (see Electronic clock for cancelling automatic function).



3. Turn the rotary control to set the time of day (e.g. **15:00** Uhr).
 - ☐ The time setting has been programmed as soon as the light illuminating the arrows above the rotary control goes out.




Acknowledgement signal



- ☐ It is possible to set the appliance so that an acknowledgement signal is heard every time a button is pressed.

To activate the signal:

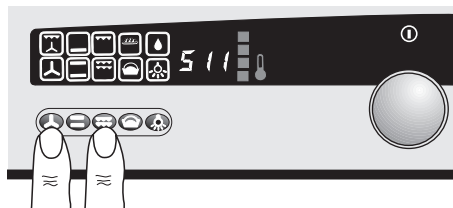- ☐ The rotary control must be pressed in.
- 1. Press the  and  buttons simultaneously for approx. 10 seconds until **5 11** appears in the display.
- 2. Press any of the buttons to confirm the setting.




To cancel the signal:

- ☐ The rotary control must be pressed in.
- 1. Press the  and  buttons simultaneously for approx. 10 seconds until **500** appears in the display.
- 2. Press any of the buttons to confirm the setting.


Preliminary cleaning:

1. Clean the appliance exterior with a soft moistened cloth.
2. Clean the oven and the accessories with a hot detergent solution.

Initial burn-in:

1. Preheat the empty oven for about 30 minutes. Select  heat at a setting of 190° C. During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours.

Electronic timer

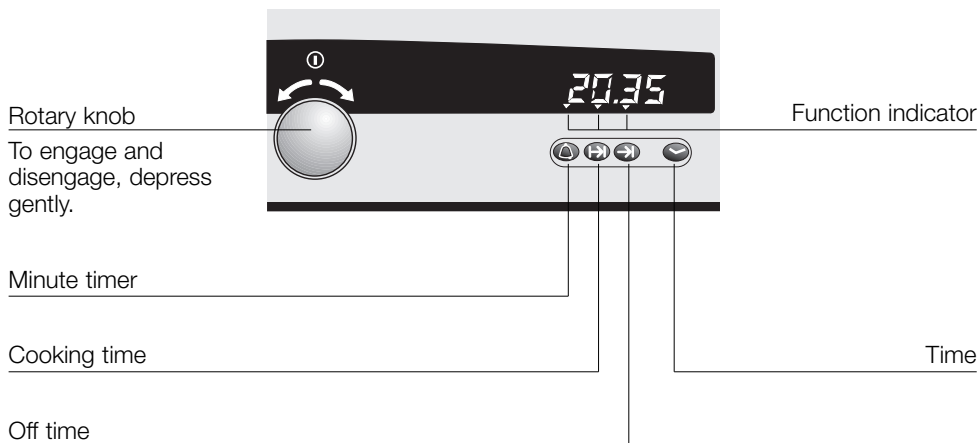




- ☐ The electronic timer can be operated with one hand; after pressing the button, set the time with the rotary knob. Adjustments can be made for as long as the display flashes (4 seconds).


☐ **Setting the time:**

See section "Before using your appliance for the first time".

Minute timer:

1. Press the  button and set the cooking time (e.g. 5 minutes). When the timer switches on, the remaining time is displayed.
2. If you want to display the current time, press the  button.
3. When the time has elapsed, a signal is emitted and the arrow display flashes. To stop the signal, press the  button.

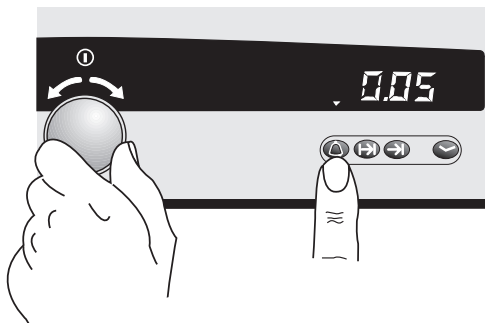


 
Setting the timer:




Automatic timer

- ❑ You can switch the oven on and off via the electronic clock.

Automatic switch off:



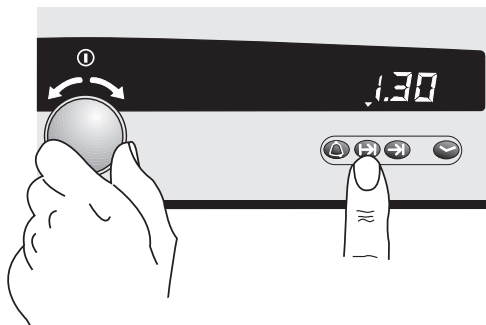


- ❑ If you wish to bake or roast food immediately, it is only necessary to set the cooking time.
1. Select the heating system and the oven temperature.
 2. Press the  button and set the cooking time with the rotary knob (e.g. 1 hour and 30 minutes).
When the cooking time has been set, the time of day is displayed.
The ▼ displayed above the  button indicates automatic mode.
 3. When the time has elapsed (e.g. 1 hour and 30 minutes), a signal is emitted and the ▼ flashes. The oven is automatically switched off. To stop the signal, press the  button.
 4. Switch the oven off.
 5. To end automatic mode, press the  button again.

Setting the length of cooking time:

 



Electronic timer


Automatic switch on and switch off:

- If the food is to be baked or roasted later on, both the cooking time and Off time must be set.
- 1. Select the heating system and the oven temperature.
When the settings have been made, the time of day is displayed.
- 2. Press the  button and set the cooking time with the rotary knob (e.g. 1 hour and 30 minutes).
- 3. Press the  button and set the Off time with the rotary knob. The ▼ displayed above the  button indicates automatic mode (e.g. 12:30).
- 4. The oven is automatically switched on and off at the preset times (e.g. 11:00 and 12:30).
- 5. When the time has expired, a signal is emitted and the ▼ flashes. To stop the signal, press the  button.
- 6. Switch the oven off.
- 7. To end automatic mode, press the  button.


Checking, correcting and cancelling settings:

1. To check your settings, press the  or  button.
2. If required, correct the settings with the rotary knob.
3. If you want to cancel your settings, turn the set time back to 0:00 and switch the oven off.

Setting the length of cooking time:

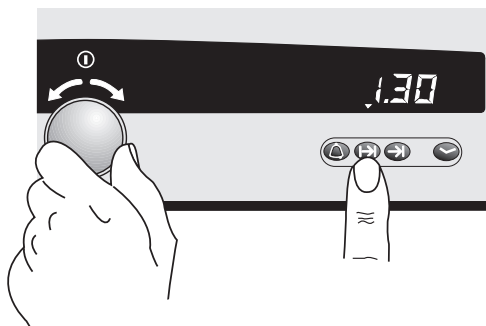

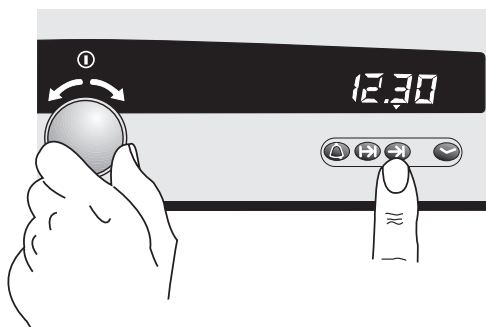

Setting the end of cooking time:



Special functions


Masking out the display:

1. Press the  button for 4 seconds.
The display then goes blank and the time continues running in the background.
2. To switch on the display, briefly press the  button.

Dimming the display:

- ☐ Between 22.00 and 6.00 the display is automatically dimmed.

Note:

- ☐ The automatic timer is best used with dishes which require little attention.
- ☐ The minute timer and OFF time can be pre-programmed up to a max. 24 hours.
- ☐ The settings can be displayed at any time by pressing the relevant button.
- ☐ To cancel the preset time:
Press the  button and reset the time to **0:00**.

Definition of Oven Features

Circotherm _____

Advantages:

- low soiling of oven interior
- cooking on up to 3 shelf levels at once is possible
- shorter preheating times
- low oven temperatures
- gentle defrosting
- bread baking

Circotherm grilling _____

A system by which foods, that would normally be grilled by direct heat from an element, are cooked using Circotherm. Temperatures between 180 and 190 °C are selected and the food is placed on the wire shelf, roasting on the roasting/grill pan.

Advantages:

- ideal for steaks, sausages, chicken joints, fish, kebabs and chops
- no turning of food is required
- three shelves of 'grilled' food can be prepared at one time
- very convenient

Circo-roasting _____

With Circo-roasting the fan and grill elements are activated alternately. The heat generated by the grill element is evenly distributed in the oven cavity by the fan. This method of cooking gives an effect similar to spit roasting (rotisserie).

Advantages:

- Particularly suitable for pork and poultry when a crisp skin is desired.

Conventional Cooking _____

(top and bottom heat)

The food being cooked is exposed to heat from heating elements located at the top and bottom of the oven cavity.

Cooking is possible on one shelf level only.

Advantages:

- Baking rich fruit cakes, pizza, quiche.

Bread-baking setting _____


Bread-baking setting with hot air.

Adjustable 180–220° C.

Bottom heat _____

With this setting on the heating element if the base of the oven cavity is activated.

Advantages:

- Particularly useful with dishes that require a distinctive bottom crust or browning e.g. casseroles, baking blind, quiches.
-  Use just before the end of the baking or roasting time.

Radiant grill _____

The food being cooked is exposed to heat from the grill element at the top of the oven cavity.

Advantages:

- Particularly suitable for flat, small cuts of meat, i.e., steaks and sausages, fish, vegetables and toast.

Full-width grill _____

Advantages:

- the entire grill element heats up
- especially useful with large amounts of food

Centre-area grill _____

- only the centre area of the grill element heats up
- especially useful with small amounts of food
- energy-saving operation.

Definition of Oven Features

Dough-proving setting _____

The dough proving function provides ideal conditions inside the oven for getting yeast dough to rise.

Temperature: 35 – 38° C
Humidity: 75 – 100%

Benefits:

- rapid and uniform increase in volume of dough
- dough does not dry out
- dough does not form a skin which means that it very easy to process and work into the required shape
- exclusion of unfavourable external influences (e.g. draughts).
- yoghurt can be made.

Hydroclean system _____

The hydroclean system featured in your oven is intended to help you keep your oven neat and tidy. An amount of cleaning solution is vaporised automatically. The combined effects of heat and steam soften the grease deposits on the oven enamel and facilitate their removal. For more information on this function, see the section on “Cleaning and Care” later in this booklet. Use this function with a cold oven only.


Advantages:

- takes the toil out of oven cleaning
- protects the enamel on interior surfaces
- constitutes an environmentally friendly cleaning method.

Switching the oven ON and OFF

Before you switch on your oven, decide which heating system you would like to use.


Switching on the oven:

1. Press the middle of the rotary control slightly so that the knob pops out.
2. Press the required function button (see illustration – example shows circotherm 160° C).
 - ☐ You can select a different oven function by pressing the function button more than once.
 - ☐ The preferred temperature setting blinks in the display, and the oven light illuminates.
 - ☐ You can increase or decrease the proposed temperature in 5° C steps by turning the rotary control while the arrows are still flashing.
 - ☐ The oven switches on automatically after 3 seconds.
 - ☐ To change the selected oven temperature, first briefly press the Function button.
 - ☐ **The dough-proving setting**  is a permanently set temperature and cannot be changed. – 5 – is displayed.
 - ☐ **The hydroclean system** is a permanently set temperature and cannot be changed. **ECO** is displayed.
 - ☐ See the "Defrosting and cooking" section for adjusting the "defrost" setting.

Example: Circotherm

Heating-up monitor

Temperature display

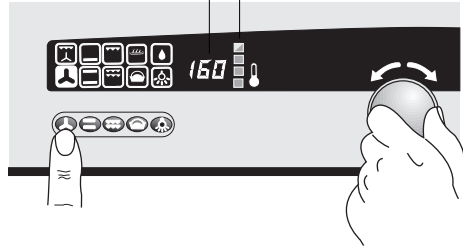











Heating-up monitor:

- ☐ The heating-up monitor indicates how far the oven has heated up.
- ☐ If the set temperature is not reached, a signal is emitted and the top light changes from red to green.
- ☐ If the top light changes from red to green, a signal is only emitted during the initial heating-up phase.


Switching the oven ON and OFF

Temperature ranges of the various heating systems

System	Preferred temperature in °C	Temperature range in °C
	160	40–200
"Defrost" setting 	— — —	no temperature setting
	170	50–275
	220	50–275
	180	50–275
	170	50–250
	200	180–220
	200	50–225
	– 0 –	Fixed setting
	EE5	Fixed setting

Switching OFF:


 
1. Press the button corresponding to the selected heating system until **000** appears in the temperature display.
 - ☐ You can also use the rotary control to switch off the oven by resetting the temperature to – 0 – while the arrows are flashing.
The oven switches off automatically after 3 seconds. **000** is displayed.
2. Lock the rotary control in position by gently pressing it in the middle.
The settings are stored for 7–8 seconds.

 When the rotary control has been locked in position, all appliance functions are disabled.
Exception: Time of day display.

Note:

- ☐ The appliance features a cooling fan which runs until the oven has cooled down.

Hot display for the oven:

-  up ~ 120° C.
-  120° down to ~ 80° C.

Safety features


Automatic safety off function:

- ☐ Depending on the setting, the oven automatically switches off after 6 or 12 hours.
- ☐ Safety off will not function if the setting on the appliance has been changed.

1. Setting the heating system and oven temperature:

- ☐ After the heating system and oven temperature have been selected, the settings are locked.
- ☐ In order to alter the heating system, it is necessary to press the button corresponding to the heating system that has already been selected until **000** appears in the temperature display.

2. Locking the oven:


- ☐  The oven must have been switched off.
- ☐ Press the rotary control for approx. 8 seconds longer than is normally necessary to switch off the appliance.
- ☐ **- 5 -** is displayed.
- ☐ All appliance functions are now disabled, with exception of setting the time of day.
- ☐ To switch on the appliance again, press the rotary control for approx. 8 seconds; **- 5 -** goes out.

Benefits:

- ☐ It is impossible to inadvertently change over to a different heating system.
- ☐ It is also impossible to alter the oven temperature, for example by children at play.

Benefits:

- ☐ The oven cannot be switched on inadvertently or by someone who is not supposed to, such as children at play.

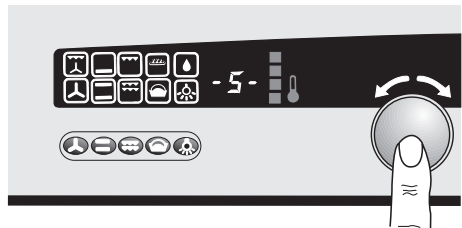

Using baking tins


- ❑ **Always place baking tins in the centre of the wire shelf.**

Circotherm:

- ❑ You can use baking tins of any material and of any colour, as long as they are oven-proof.
- ❑ Do not place baking tins or high cakes too close to the rear oven wall.

Conventional heat:

- ❑ Dark-coloured baking tins made of metal give the best results.
- ❑ The wire shelf may be turned upside down to accommodate different size tins.
- ❑ **If the cake base gets too dark:**
Check the shelf level. Shorten the baking time, and possibly use a lower baking temperature.
- ❑ **If the cake base stays too light:**
Check the shelf level. Increase the baking time, select a lower temperature, or use a dark metal baking tin.

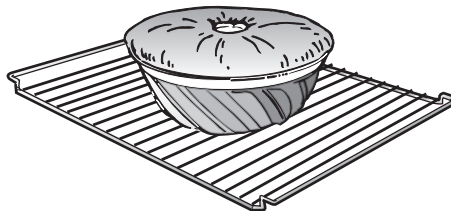

Notes:


- ❑ You can influence the degree of browning by changing the temperature setting.
- ❑ If a cake collapses after removing it from the oven, use less liquid on your next attempt, consider using a longer baking time, or use a slightly lower temperature setting.

Roasting

Roasting with Circotherm

Notes:

- ☐ Meat roasted using the Circotherm system will brown on all sides and stay moist without additional fat.
- ☐ Choose cuts of meat that weigh 150 grams (5 oz) or more.
- ☐ Place the shelf on top of the roasting pan.
- ☐ Place the meat on the shelf, season if desired.
- ☐ Slide the pan and shelf into the oven on the same shelf position.
- ☐ No pre-heating is required. Save energy by putting the roast into the cold oven.
- ☐ Use a Circotherm temperature of 160 °C.
- ☐ Let the meat rest for 10 minutes after roasting, this will allow the juices to settle and prevent them from running out of the meat when carved.

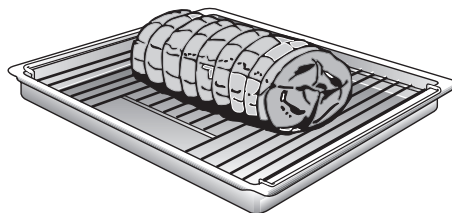

- ☐ Baste the meat if desired.
- ☐ Place in a cold oven to save energy or pre-heat if desired.

Casseroling or pot-roasting in a covered dish:

- ☐ Some meats should be prepared in liquid in a covered casserole. This type of cooking is suitable for less tender cuts of meat.
- ☐ Place the casserole on the wire shelf on a suitable shelf position.

Cooking tips:

- ☐ Only use ovenproof cookware.
- ☐ Extra large turkeys and joints can be placed directly in the roasting pan and not on the wire shelf.
- ☐ Cover large turkeys with foil during cooking. Remove foil during the last hour.


Roasting with Conventional heat

- ☐ Follow the steps above. With fatty meat 125–250 ml (4–8 fl oz) of water can be poured into the roasting pan.

Circo-roasting

Use this method for particularly crispy poultry or pork with crackling.

- ☐ Use the shelf and roasting pan together. Turn large roasts after about half of the total cooking time has elapsed. Use shelf 1 or 2 for circo-roasting.
- ☐ Some types of food (e.g. fatty meats) will spit during Circo-roasting. Therefore, to prevent burning-on of the stains, thorough cleaning of the oven is recommended after use.
- ☐ Whole poultry should be turned after approx. two-thirds of the cooking time has elapsed. With duck and goose, pierce the skin under the wings to allow excess fat to drain off.

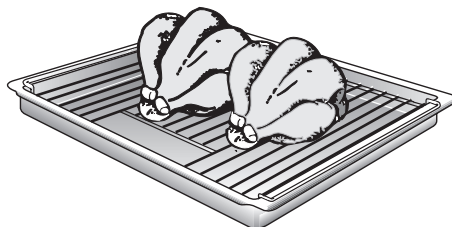

- ☐ After the end of the selected roasting time and with the oven switched OFF, leave the roast in the closed oven for approx. 10 minutes.

Grilling

! Exercise **CAUTION** when grilling.

- Always keep children away from the oven when it is in use.

Notes on grilling:

- ☐ Always close the oven door when grilling.
- ☐ The grilling temperatures are variable.
- ☐ Always use the shelf and the roasting pan.
- ☐ Always place the food to be grilled in the centre of the wire shelf.
- ☐ If the heating element switches off automatically, the overheating protection was activated. The element will be reactivated after a short period of time.

Circotherm grilling

Use this method for small cuts of meat – steaks, chops, sausages, bacon, chicken joints and fish.

- ☐ Use the shelf and roasting pan together.
- ☐ Season meat as required.
- ☐ Place on shelf.
- ☐ Do not turn food over – the hot air will circulate around the food cooking all sides.
- ☐ Use a temperature of 180–190 °C.

Radiant grilling and


Used for small cuts of meat or poultry.

 = centre-area grill for small amounts of food

 = full-surface grill for larger amounts of food

- ☐ Always use the shelf and roasting pan together.
- ☐ Turn the food after approx. two-thirds of the grilling time has elapsed.

- ☐ Lightly brush the wire shelf with oil and baste the food if desired.

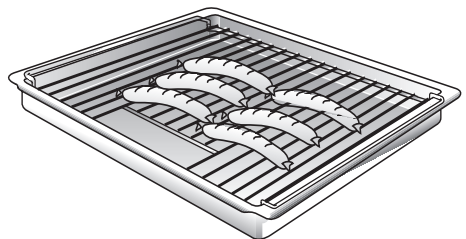

Cooking Tips and Helpful Hints

When cooking with Circotherm:

- ☐ Cakes baked in a tin get too dark at the back.
- ☐ Cakes remain doughy and collapse when removed from the oven.
- ☐ Uneven browning of small cakes or biscuits.
- ☐ With very moist foods steam develops and condenses on the oven door and drips onto the floor.

Avoid blocking the air vents at the rear wall of the oven with the cake tins.

Reduce the temperature for deep cakes. Bake for a longer period of time. Test with a skewer before removing.

Avoid placing trays too close to the back wall. Space food on the tray.

Several brief periods of opening the oven door during baking (1 or 2 times, more frequently with longer roasting times) will aid in venting the steam in the oven and reduce condensation.

When cooking conventionally:

- ☐ The bottom of a cake baked on a baking tray stays too light.
- ☐ The cake gets too dry.
- ☐ The inside of the cake remains spongy or doughy, or meat stays raw in the centre.

Ensure that no other pans or trays are in the oven. Lower shelf position. Place tin on wire shelf.

Select a slightly higher oven temperature. Cook for shorter period of time.

Use a slightly lower temperature and cook for a longer time. Reduce the liquid in the cake mixture.

To save energy:

- ☐ Preheat only if recommended by the recipe.
- ☐ Dark baking tins have a higher degree of heat absorption.

- ☐ **Residual heat:** In the case of longer baking times, you can switch off the oven 5–10 minutes before the full baking time has elapsed.

Defrosting and cooking using the Circotherm

Important heating system information:

- ☐ For defrosting and cooking of frozen foods, use circotherm.
- ☐ With all frozen foods, follow the food manufacturers instructions on the package.
- ☐ As a rule, **defrosted frozen foods** (especially meats) require less cooking time than fresh products, since freezing has a pre-cooking effect.
- ☐ If **frozen meat** is placed in the oven, the defrosting time must be added to the required cooking time.
- ☐ Always defrost **frozen poultry** before cooking because the giblets must be removed.
- ☐ For cooking **frozen fish**, use the same temperatures as for fresh fish.
- ☐ **Frozen ready-to-eat meals** in aluminium dishes may be placed into the oven several at a time.
- ☐ **Frozen vegetables** (i.e., when cooking complete meals) should be cooked in a covered pot together with the roast. Use only approximately half of the liquid specified in the recipe. Use fat only for adding flavour.

Standard defrosting of various foods:

Shelf-in levels:

With 1 baking sheet: Slide-in level 3


With 2 baking sheets: Slide-in levels 1 and 3


- ☐ **All stated times** are approximate guidelines that vary with the shape and volume of frozen products.
- ☐ **Raw frozen products or foods from a freezer** always defrost at 50° C. Higher defrosting temperatures may cause the food to dry out.
- ☐ Defrost **frozen meals packed in aluminium foil or closed aluminium containers** at a setting of 130 – 140° C.
- ☐ Place frozen meals **packed in plastic bags or plastic containers** in a pot filled with water. Cover the pot and defrost of 130 – 140° C.
Attention: Pot handles must be oven-proof.
- ☐ Defrost and warm up **frozen baked goods** at 100 – 140° C. Brush bread, rolls or yeast pastry lightly with egg to make the crust more appealing.
- ☐ Defrost **dry frozen yeast cakes** at 160 – 170° C for 20 – 30 minutes.
- ☐ Defrost **moist frozen yeast cakes** (with fruit topping) at 160 – 170° C for 30 – 50 minutes after wrapping in aluminium foil to prevent cake from drying out.
- ☐ Defrost and toast **frozen toast** (with topping) at 160 – 170° C for about 20 minutes.
- ☐ Defrost and bake **frozen pizzas** at 180 – 190 °C for 15 – 25 minutes. Place on wire grill covered with greaseproof paper. Please ensure that the greaseproof paper is suitable for use at these temperatures.

Gentle defrosting:


 

Recommended for delicate foods only (i.e., whipped-cream gateaus).

Switching ON:

1. Press the middle of the rotary control slightly so that the knob pops out.
2. Press the  function button.
3. Turn the rotary control to reduce the oven temperature setting until --- appears in the temperature display.
 - ☐ The circotherm fan operates without heat.
 - ☐ Depending on size and type of bakeware, defrost for 25–45 minutes. After this time, remove the food from the oven. Let it stand at room temperature for 30–40 minutes.
 - ☐ With smaller amounts (pastries) the defrosting time is reduced to 15–20 minutes and the subsequent standing time to 10–15 minutes.

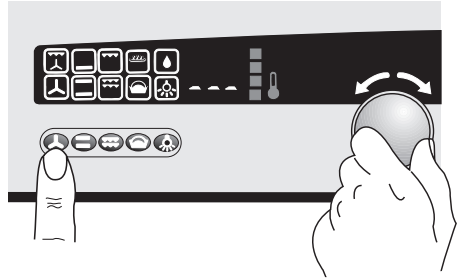

Switching OFF:

1. Press the  button until  appears in the temperature display.
2. Retract the rotary control by applying slight pressure to the middle of the knob.
 -  All appliance functions are disabled when the rotary control is pushed away, with the exception of setting the time of day.

Using the dough-proving setting

Warning:


- ☐ Do not use the dough-proving setting until **the oven has cooled down completely** (Room temperature).
- ☐ Use normal tap water only, **not distilled water**.





Switching ON:

1. Carefully pour 50 millilitres of water ($\frac{1}{4}$ glass) onto the floor of the oven cavity.
2. Place the bowl containing the dough onto the middle of a wire shelf positioned on level **1**.

 Do not cover the dough.

 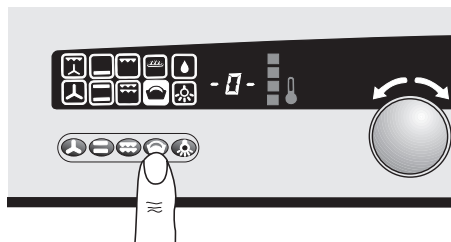3. Close the oven door.
4. Press the middle of the rotary control slightly so that the knob pops out.





5. Press the  function button.
 - ☐ The  indicator light comes on and  is shown in the display.
 - ☐ If the oven has not cooled down completely,  flashes.
 - ☐ The proving process is controlled automatically.


Yeast dough	Amount of flour	Shelf level	Proving period
Cakes up to	500 g.	1	20–25 min.
Cakes up to	500–750 g.	1	25–30 min.
Dough for plaited loaf	500 g.	1	30–35 min.
Dough for plaited loaf	750 g.	1	30–40 min.
Dough for normal loaf	1000 g.	1	35–60 min.
Yoghurt	1 litre milk	1	6 hours

Important:

- ☐ When making yoghurt, do not put any water in the oven.
- ☐ The details given in the table above are average values. They can vary according to the type and amount of dough, as well as the condition of the ingredients, e.g. age and quality of the yeast.
- ☐ Please read the enclosed cookery book for suggestions on how to make subsequent use of the dough.
- ☐ Before you start baking, remove the water left inside the oven. If any traces of lime are left behind, they can be dissolved with a little vinegar and wiped off using clear water.
- ☐ Never pour cold water into the oven while it is still hot.

Switching OFF:

1. Press the  button until  appears in the temperature display.
2. Retract the rotary control by applying slight pressure to the middle of the knob.

 All appliance functions are disabled when the rotary control is pushed inwards, with the exception of setting the time of day.

Cleaning and Care

Important cleaning basics:

- ☐ For cleaning, do not use abrasives, corrosive cleaners, aerosol cleaners or sharp objects.
 - ☐ Do not scratch off burnt-on food residues, but soak off them with a damp cloth and washing up liquid.
 - ☐ Oven cleaners must not be used on aluminium or plastic parts.
-

Stainless steel front:

- ☐ When using commercially available Stainless Steel cleaning agents, avoid cleaning any lettering, as this can become damaged!
 - ☐ Do not use any scouring pads or abrasive cleaners.
 - ☐ Use commercially available detergents applied with a soft, moistened cloth or a chamois.
-

Enamel and glass:


- ☐ Use hot detergent suds for cleaning.
 - ☐ Remove the oven door before cleaning the enamel surface.
-

Oven interior:

- ☐ Clean the oven after each use, especially after roasting or grilling. Food remnants burn in when the oven is reheated.

The baked in remnants are very difficult to remove once burnt in.

- ☐ You can reduce the degree of soiling by greater use of the circotherm.

 Do not clean the warm oven with any of the cleaning products specifically designed for this purpose.

- ☐ When baking very moist cake (e.g. rich fruit cake) that could drip over the top of the tin, place on the roasting pan or your own baking sheet.
- ☐ When roasting, ensure that the meat juices do not splash on to the base of the oven.
- ☐ Clean the oven before soiling becomes too heavy. Wash out the oven cavity with hot detergent suds. Leave the door open until the interior has dried.

Cleaning and Care

Hydroclean system:

The hydroclean system featured in your oven is intended to help you keep your oven neat and tidy. An amount of cleaning solution is vaporised automatically. The combined effects of heat and steam soften the grease deposits on the oven wall enamel and facilitate their removal.


Caution:

- ☐ Use this function only after the **oven has completely cooled** (Room temperature).
- ☐ Use normal water only, and **no distilled water**.


Activate hydroclean:


1. Remove the roasting pan from the oven. The wire shelf may remain in the oven.
2. Pour approx. 400 ml ($\frac{3}{4}$ pint) of water mixed with a little washing up liquid into the floor pan of the oven cavity. In the case of heavy soil build-up, you may wish to allow the cleaning solution to soak in for a while before you activate the cleaning function.
3. Close the oven door.



CAUTION:

- ☐ The hydroclean system can only be switched ON **when the oven has cooled down completely**.
4. Press the middle of the rotary control slightly so that the knob pops out.
 5. Press the  function button for the oven light **twice**.
 - ☐ The top light of the heating-up monitor illuminates.
 - ☐ **ECS** is displayed.
 - ☐ If **ECS** flashes, the oven has not cooled down completely.
 - ☐ When the heating-up time (4 minutes) has expired, the top light of the heating-up monitor changes from red to green. The programme ends after a further 17 minutes. A signal sounds.

Switching OFF:

1. Press the  button until **000** appears in the temperature display.
2. Retract the rotary control by applying slight pressure to the middle of the knob.

 All appliance functions are disabled when the rotary control is pushed inwards, with the exception of setting the time of day.

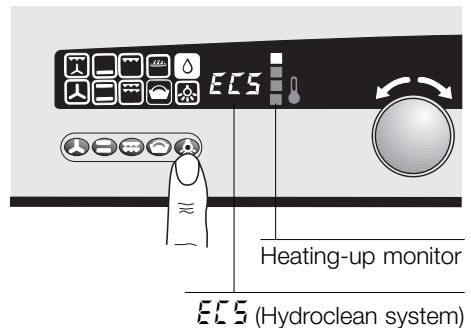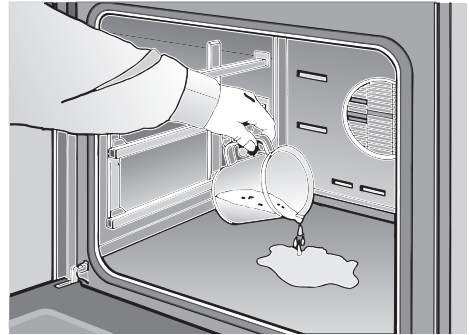

Cleaning and Care


After deactivating the hydroclean system:

Cleaning tips:


- ☐ Never leave the residual water in the oven for any length of time, e.g. overnight.
- 1. Open the oven door and remove the remaining water with the sponge provided.
- 2. Using the detergent-soaked sponge cloth, a soft brush or a nylon scrubber, wipe off the oven interior. Stubborn soil remnants can be removed with a nylon scourer.
- 3. Lime deposits may be removed with a cloth soaked in vinegar.
- 4. Wipe clean with clear water and dry with a soft cloth (do not forget to wipe under the oven door seal).

Cleaning tips:

- ☐ If the oven is heavily soiled, the procedure may be repeated after the oven has cooled.
- ☐ If the oven is heavily soiled with grease, e.g. after roasting or grilling, we would recommend rubbing any stubborn dirt with detergent before activating the oven cleaning function.
- ☐ After cleaning, leave the oven door ajar, i.e., at a 30-degree angle, to allow the interior enamel surfaces to dry thoroughly.

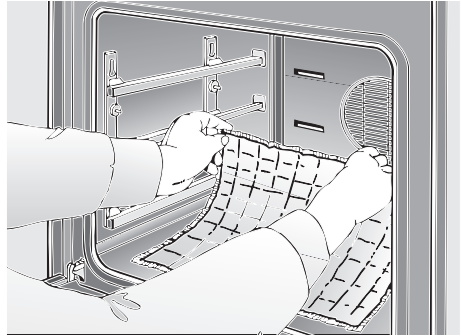

Rapid drying:

1. Leave the oven door ajar, at an angle of approximately 30 degrees.
2. Press the  function button.
3. Using the rotary knob, set the oven temperature downward until **50° C** appears in the display.
4. Duration: about 5 minutes.
5. Switch off the oven at the end of this period.


Cleaning and Care

Manual cleaning steps:

Note: To make the manual cleaning steps following the automatic oven cleaning function more convenient, the appliance features the following options:


Removing the oven door:

1. Fully open the oven door.
2. Move the catch levers on the right and left-hand sides to the fully open position.
3. Placing the door at an upward angle toward you, grasp the door with both hands and lift it out of the hinges toward you.

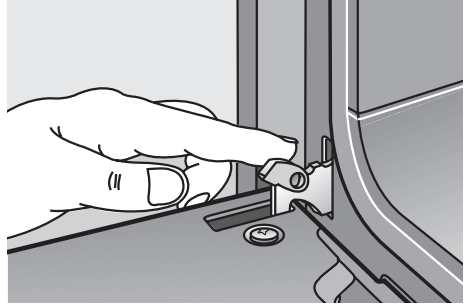


Replacing the oven door:

1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward.
2. Close the catch levers on the left and right.
3. Close the oven door.

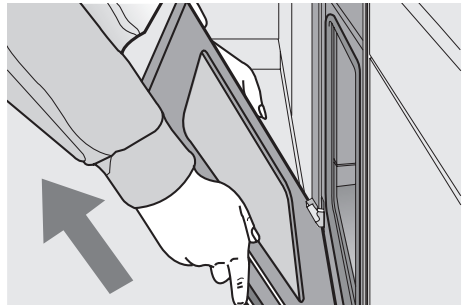


Switching on the oven light:

- ☐ Turn the function selector one setting to the left. The  symbol illuminates.

Removing the shelf railings:


1. On both left and right sides, remove the one milled screws.
2. Carefully remove the suspended grids.

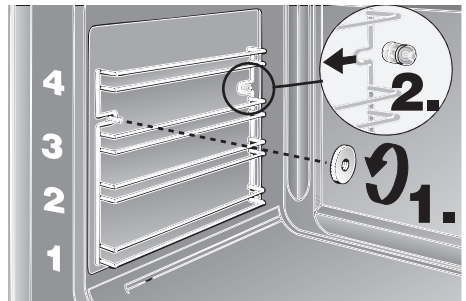

Lowering the heating element:

Caution: The heating element must have been allowed to cool.

1. Unlock the heating element by turning the ratchet at the ceiling of the oven cavity.
Caution: in the lowered position, never switch on the heating element or place any weight on it.
2. After cleaning, swing the heating element upwards, and latch it into place.

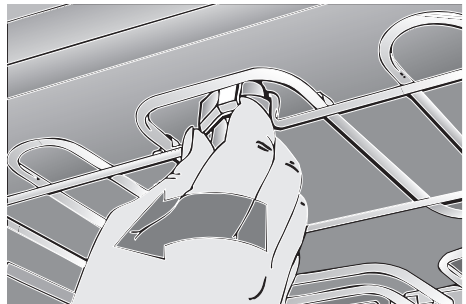

Service and Repair Information

In the event of problems or repairs that you cannot solve yourself, our customer service will be happy to help. Check the customer service directory for an office facility in your area.

Caution: Calling the customer service because of an operator error can be very costly! In the event of a service request, please have the following information handy:



E-Number	FD
-----------------	-----------

You can find this information on the appliance's nameplate. The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven.

Replacing the oven light:

Caution: Disconnect the appliance or remove the fuse!

1. To prevent damage, place a dish cloth into the cold oven.
2. Remove the glass cover by inserting a knife or similar object between the glass and the frame.
3. Replacing the lamp:
 - Type: Incandescent bulb E 14, 230 - 240 V, 25 W, heat resistant to 300° C.
 - You can obtain this lamp from our spares department.

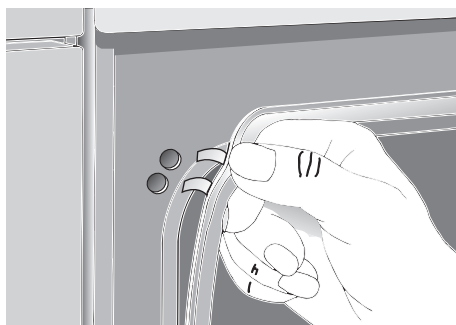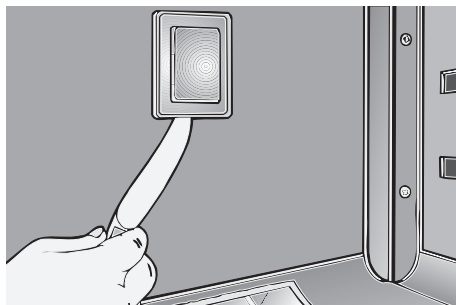

Replacing the oven door seal:


1. Remove the defective oven door seal by simply unhooking it.
You may obtain the new oven door seal from our spares department.

Trouble-shooting Guide

Calling the customer service is not always really necessary. In some cases, you can remedy the situation yourself. The following table may contain some helpful tips.

Important general safety guidelines:


Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains. This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your home.

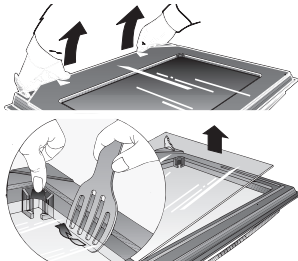Problem	Possible cause	Remedy
... if there is a general failure of all electrical functions, i.e., the control lamps have suddenly ceased to function.	Defective fuse.	Check the fuse in the fuse box, and replace if required.
... if liquids or thin viscous dough are distributed at a visibly uneven thickness.	The appliance has not been placed or installed plumb-and-level.	Level the appliance using the leveling feet, or check the installation.
... if the oven suddenly stop functioning.	The electronic timer is set to an automatic timing cycle.	Set electronic timer to operation without automatic timer: 1. Reset ON time (⏸) to 0:00. 2. Press the (▶) button.
... if the oven suddenly stops functioning and the electronic timer flashes 0:00?	The power supply was briefly interrupted.	Reset the time of day.
... if □□□ is displayed?	The power supply was briefly interrupted.	Re-activate the electronic timer and oven control.
... if -5- is displayed?	The oven is locked (childproof lock).	Press the rotary knob for approx. 3 seconds. Oven light -5- goes out.
... if the symbols on the control panel illuminate, but the oven is not heating up?	The oven was locked to prevent unauthorised use (safety off function).	□ The rotary control must be pressed in. 1. Press the (⏸) and (▶) buttons simultaneously for approx. 10 seconds until 333 appears in the display. 2. Press any button to confirm.
... if electronically controlled functions fail?	Energy pulses (e.g. lightning flash).	Reset the relevant functions.
... if E C S flashes when the hydroclean system has been switched on?	Temperature inside oven cavity is still too high.	Prior to using the hydroclean system, the oven must be allowed to cool completely.
... if enamelled slide-in parts have dull, light blotches?	Normal occurrence due to dripping meat juices.	Not possible.
... if after prolonged use, the oven window panes are soiled from the inside.	This kind of soiling is normal. 	Remove the oven door and lay front side down on a soft, clean base. Grip the door glass near the hinges, pull up and remove. Doors with 3 panels: Disengage inner door glass at the corner pieces and lift it up using, for example, a pair of frying tongs made of plastic or wood. Installing the cleaned glass: Insert the inner door glass and lock into position. Attach the door glass and lock into position by pressing the glass near the hinges.

For the installer and kitchen expert!

Important installation notes:

 - ☐ Properly dispose of **packaging materials**.
- ☐ Do not use **oven door handle** for transporting or handling the unit during installation.
- ☐ **WARNING:** Connection and first start of the appliance may only be performed by an authorised specialist.
- ☐ Connection must be made using an H05VV-F mains connection cable.
- ☐ **Nominal connected loading, nominal voltage and model number of the appliance:**
see the rating plate, located behind the oven door, fixed to the lower left facing edge of the oven.
- ☐ **The unit's nameplate is located at on the right sidewall of the unit.**
- ☐ **Electrical safety** of the appliance can be ensured only if the equipment earth in the building installation has been installed according to regulations.
- ☐ On the installation side a isolating device shall be provided.
Any switch with a contact gap exceeding 3 mm may be considered a separating device.
Other examples are LS switches, fuses and contactors.
- ☐ **In the case of repairs** interrupt all power connections to the unit.
- ☐ **Connection diagram**





Kitchen furniture

Oven housing units from virtually all lines of kitchen furniture are suitable for installing the built-in oven. However, the veneers or plastic laminates on the housing unit must be applied with heat-resistant glue (90 °C). If plastic laminate or glue are not sufficiently heat-resistant, warping, bubbling or detachment of the finish may result.

Installation of the built-in oven

- ❑ Push the built-in oven into the housing unit and align the unit until it is in a **level position**.
- ❑ Open the oven door and, using one screw on each side, fasten the built-in oven to the side strips of the housing unit (see illustration).
The two screws (supplied with the built-in oven) must be started slightly outward.
- ❑ Verify that the built-in oven is positioned securely and in a **level position**, and that the required installation dimensions have been maintained.
- ❑ **In units featuring automatic oven cleaning, after filling 0,4 l of cleaning solution into the recess in the oven floor, the liquid must not spill toward the front.**
- ❑ The properly installed appliance must be covered on all sides in such a fashion that not even components with rough insulation are exposed to the touch. The cover must be removable with tools only.

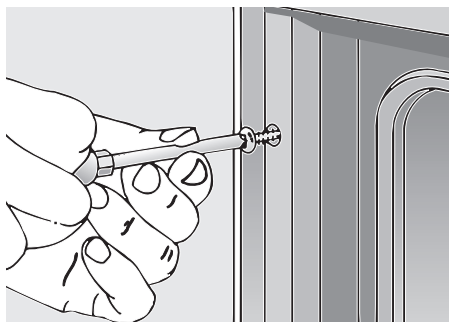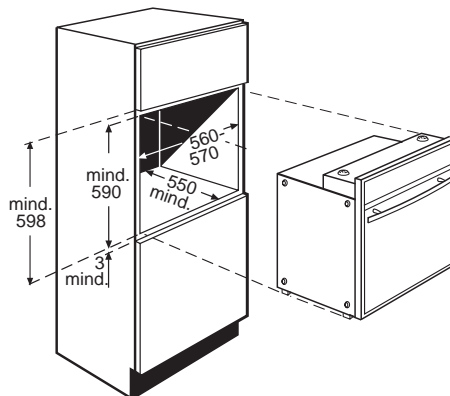

NEFF (UK) Ltd.
Grand Union House,
Old Wolverton Road,
Old Wolverton
Milton Keynes, MK12 5PT
Tel: 01908 328300
Fax: 01908 328399

5750 201 849

Printed in Germany 0703 Es.