


Instruction Manual and Installation Instructions

Washing machine

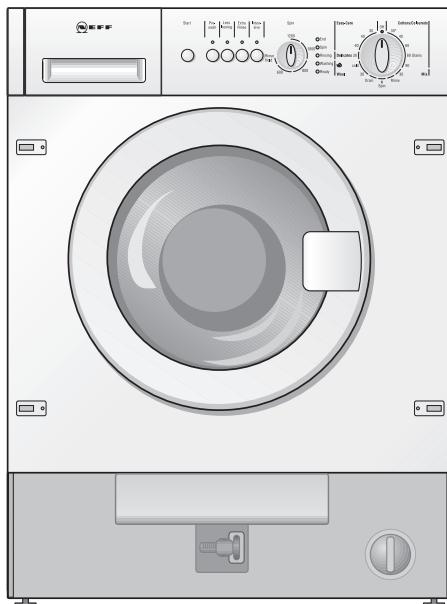

W 5320 X0 GB



Table of Contents

Operating Instructions

Information concerning waste disposal	5
Disposing of the packaging	5
Disposing of your old appliance	5
Protection of the environment / Hints and tips ..	6
General safety instructions	7
Introducing your washing machine	8
Control panel	9
Before using your washing machine for the first time	10
Preparing your washing machine	10
Preparing, sorting and loading the washing	11
Preparing the washing	11
Sorting the washing	12
Degrees of dirt	12
Loading the washing	15
Detergents and cleaning products	16
Dosing detergent	16
Adding detergent/cleaning product	17
Programmes and functions	18
Programme selector	18
Additional option – buttons	21
Wash	23
After washing	25
Remove the washing	25
Signal	26
Special applications	27
Soaking	27
Starching	27
Dyeing	28
Bleaching	28
Cleaning and Care	29
Clean housing, fascia and supply lines	29

Installation Instructions

Appendix

Cleaning the drum	29
Cleaning the detergent dispenser	30
Cleaning the drain pump	31
Cleaning water inlet strainers	33
Descaling the washing machine	33
Help with minor problems	34
Fault displays	34
Consumption values	38
Customer service	39
Installing, connecting and transporting the appliance	40
Safety instructions	40
Removing the transportation protection devices	41
Installation surface	42
Connecting the water	43
Aligning the washing machine	43
Connecting the power	44
Transport, e.g. when moving	45
Aqua Stop warranty	46
Index	47

The new washing machine which you have just purchased is a modern, high-quality domestic appliance.

Your washing machine is distinguished by its economical consumption of energy, water and detergent.

Each washing machine which leaves our factory is checked carefully to ensure that it functions properly and is in perfect condition. If you have any questions – especially with respect to installing and connecting your washing machine – please do not hesitate to contact our customer service department.

Further information and a selection of our products can be found on our Internet page:
<http://www.neff.de>

Please read these operating and installation instructions and all other information enclosed with the washing machine and act accordingly.

Retain all documentation for subsequent use or for the next owner of the appliance.

Information concerning waste disposal

Disposing of the packaging

The shipping package has protected your new appliance on its way to your home. All utilised materials are ecologically harmless and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner.

Please ask your dealer or inquire at your local authority about current means of disposal.

⚠ Risk of choking!

Do not let children play with packaging and associated parts. Risk of choking on plastic film and collapsible cardboard boxes.

Disposing of your old appliance

Old appliances are not worthless rubbish! Environment-conscious recycling can reclaim valuable raw materials.

⚠ Danger of death!

Unplug mains plug on redundant appliances. Cut off mains cable and discard with mains plug.

Destroy the lock on the door. To prevent playing children from becoming trapped and endangered, ensure that the door locking mechanism is disabled.

Protection of the environment / Hints and tips

Your washing machine uses water, energy and detergent efficiently, thereby protecting the environment and reducing your household costs. See Page 38 for consumption values of your appliance.

Hints and tips

Using your washing machine in an efficient and environmentally friendly manner:

- Take advantage of recommended load quantity.

Cottons/Coloureds	6.0 kg / 13.2 lb
Easy-Care	3.0 kg / 6.6 lb
Delicates	2.0 kg / 4.4 lb
Wool	2.0 kg / 4.4 lb

With smaller amounts of laundry, the load adjust reduces the water and energy consumption.

- Select the **Cottons/Coloureds 60 °C Stains** programme instead of **Cottons 90 °C**. The longer washing time in this 60 °C programme means that the cleaning effects are comparable with those of a 90 °C programme, although the power consumption is considerably lower.
- Do not use prewash for lightly to normally soiled washing.
- Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer's instructions.
- If washing is then to be dried in the tumble dryer, select spin speed in accordance with the instructions supplied by the dryer manufacturer.

General safety instructions

Your washing machine is intended for

- use in the household only,
- For washing machine-washable fabrics in washing lye.
- operation with cold drinking water and commercially available detergents and cleaning products which are suitable for use in washing machines.

Do not leave children unsupervised near the washing machine.

Keep pets away from the washing machine.

Do not insert/pull out the mains plug with wet hands.

Do not pull out the mains plug by tugging the cable.


Do not touch the loading door when washing at high temperatures.

Caution when draining hot water.

Do not climb onto the washing machine.

Do not lean on the open washing machine door.

Introducing your washing machine

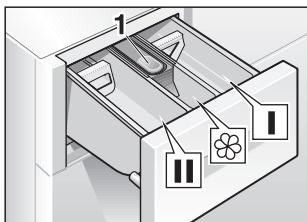

Adding detergent/cleaning product

Dispenser I:

Detergent for prewash or starch.


Dispenser II:

Detergent for main wash,
soaking agent, water softener,
bleach or stain remover.


Dispenser ☈:

Additives, e.g. fabric softener
or former.


(fill up to the **max** mark on insert
1).

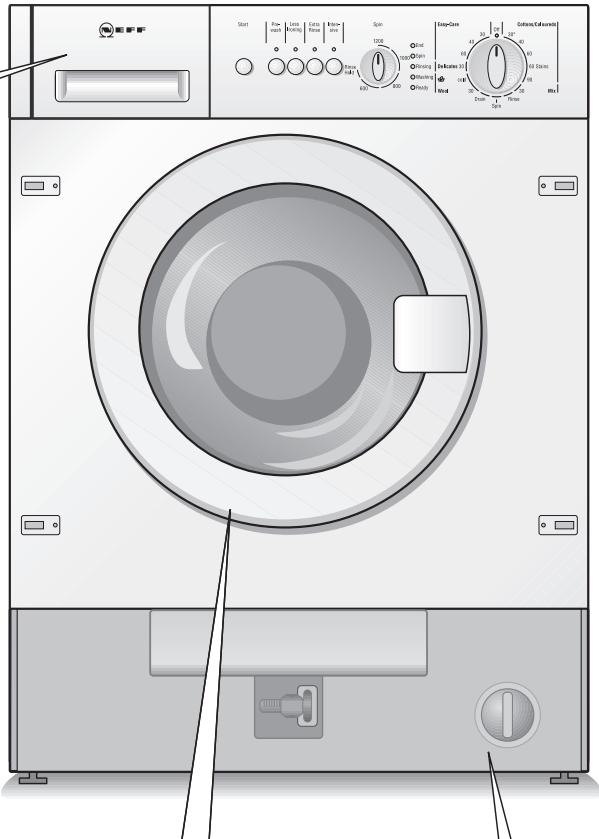

Opening ...

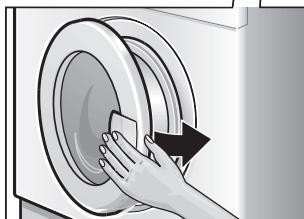

and closing the door

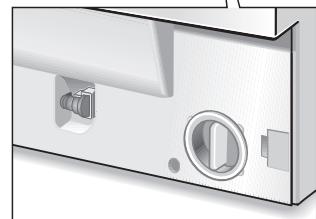


Service division

Control panel

Start button

For starting the wash cycle
(programme must have been selected).

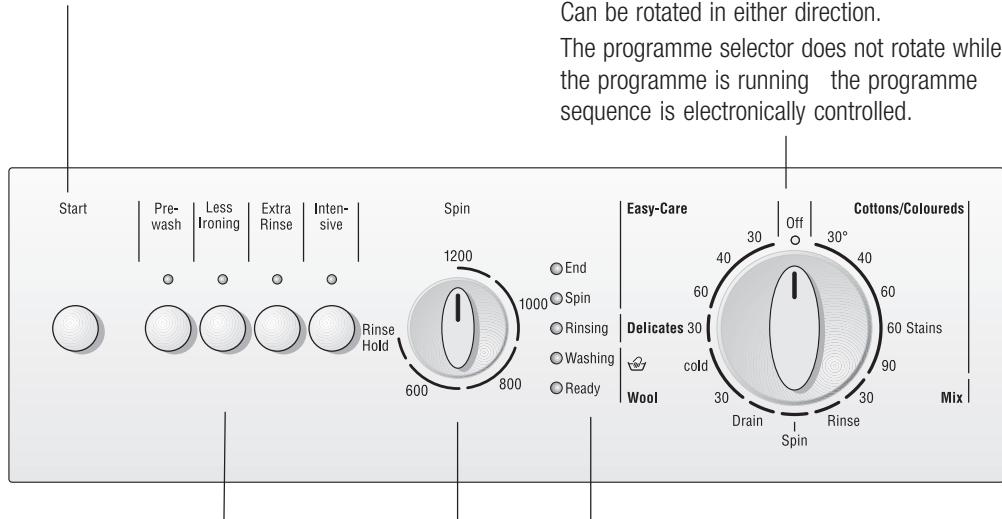

Buttons for additional options

(in addition to the programme if required)

Prewash: actuate Prewash

Less Ironing: Gentle spin

Extra Rinse: Additional rinsing cycle

Intensive: Intensive wash

Additional options can be combined.

The indicator lights of the buttons come on, if the additional options are active.

Switching off the additional option: Press the button again. Indicator light goes out.

Programme selector

For switching the machine on and off and for selecting the programme.

Can be rotated in either direction.

The programme selector does not rotate while the programme is running – the programme sequence is electronically controlled.

Indicator lights for the programme status

Ready illuminate, if the programme is selected.

Washing, Rinsing, Spin illuminate when the **Start** button is pressed and the particular programme section is running.

End is lit when the programme has ended.

Indicator lights flash: Operation error.

Spin speed selector (if required)

For stepless setting of the spin speed; must click in place at **Rinse Hold**.

See chapter **Signal**, page 26, for switching off acoustic signal or changing the volume.

Before using your washing machine for the first time

Preparing your washing machine

Attention

The washing machine must have been installed and connected properly refer to Page 40.

i The washing machine was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out **without** laundry in the machine.

- Turn the tap on.
- Pull out the detergent drawer all the way.
- Pour approx. 1 litre / 1 ¾ pt of water into chamber **II** of the detergent dispenser.
- ½ Half fill the measuring beaker with detergent and pour into chamber **II**.

i Do not use any special detergents for delicates or woollens (excessive foam).


- Close the detergent drawer.
- Close the washing machine door.
- Set the programme selector to **Cottons 90 °C**.
- Press the **Start** button.
The programme starts.

The programme has ended when the **End** indicator light is lit:

- Turn the programme selector to **Off**.

Preparing, sorting and loading the washing

Preparing the washing

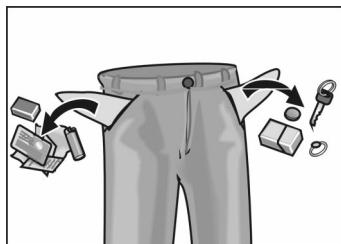


Attention

Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washing machine (e.g. drum).

- Empty all pockets on items of clothing.
- Brush sand out of pockets and cuffs/turn-ups.
- Close zips, fasten pillow cases/cushion covers.
- Remove curtain runners or tie up in a net/bag.
- Wash in a net/cushion cover:
 - delicates, e.g. tights, curtains,
 - small laundry items, e.g. socks or handkerchiefs,
 - underwired bras (underwire may become detached during washing and cause damage).
- Trousers, knitwear and knitted textiles, e.g. jersey garments, T-shirts or sweatshirts should be turned inside out.

Sorting the washing

According to colour and degree of dirt

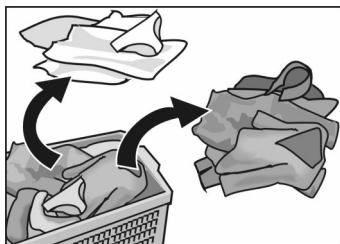

Attention

Washing may become discoloured. Do not wash new coloured washing with other washing.

Degrees of dirt

lightly soiled

No visible soiling or stains. Washing has probably absorbed body odour.

- Light-weight summer clothing and sportswear worn for several hours.
- T-shirts, shirts, blouses worn for up to one day.
- Bed linen, guest towels used for one day.

normally soiled

Visible soiling and/or a few light stains.

- T-shirts, shirts, blouses soaked in sweat or worn several times.
- Underpants, briefs worn for one day.
- Tea towels, hand towels, bed linen used for up to one week.
- Curtains (without nicotine soiling) used for up to six months.

very soiled

Visible soiling and/or stains.

- Kitchen towels used for up to one week.
- Fabric serviettes.
- Baby bibs.
- Children's outer clothing or football jerseys and shorts soiled with grass and/or earth.
- Work clothes, e.g. mechanic's overalls, baker's and butcher's clothing.

Typical stains

- Skin grease, cooking oil/fat, sauces, mineral oil, wax (containing fat/oil).
- Tea, coffee, red wine, fruit, vegetables (which can be bleached).
- Blood, egg, milk, starch (containing protein, carbohydrate).
- Soot, earth, sand (pigments), tennis clothing soiled with red clay.

Removing stains


Remove/pretreat stains as soon as possible after they have occurred.

First dab with a soapy solution. Do not rub.

Then select the appropriate programme and wash the item.

Stubborn/dried in stains can sometimes only be removed by washing several times.

Sorting washing according to the instructions on the care labels

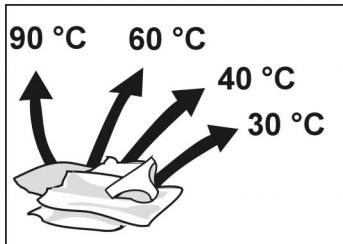

Only wash laundry that is labelled with the following care symbols:



hard-wearing textiles, heat-resistant textiles
e.g. made from cotton or linen,



for easy-care textiles
e.g. cotton, linen, synthetic materials or blended fabrics



for easy-care, washable textiles
e.g. silk, satin, synthetic materials or blended fabrics
(e.g. curtains)



for hand and machine washable wool or wool-rich textiles

e.g. cashmere, mohair or angora,
also suited for hand washable silk

Do not wash laundry items which bear the following care label in the washing machine:



Loading the washing

⚠ Risk of explosion!

Items of clothing that have been pretreated with solvent-based cleaning agents, e.g. stain remover and dry cleaning spirit, represent an explosion hazard once loaded into the washing machine. Before loading the laundry, rinse thoroughly by hand.

Attention

Foreign objects in the drum may damage the laundry. Before loading the laundry, check that there is no debris in the drum.



- ❑ Open the washing machine door.



- ❑ Unfold the sorted items of clothing and place them loosely into the drum. Mix large and small items. Laundry items which vary in size are more evenly distributed during the spin cycle.

- i** Do not exceed recommended loads. Overloading will cause poor wash results and encourage creasing.

- ❑ Close the washing machine door. Take care not to trap any items of clothing between the loading door and rubber seal.



Detergents and cleaning products

Dosing detergent

⚠ Risk of poisoning!

Keep detergents and additives out of the reach of children.

Dose detergent according to

- the water hardness. You can find out the water hardness from your water utility company.
- the amount of laundry.
- the degree of soiling.
Information on soiling can be found on Page 12.
- the specifications of the detergent manufacturer.
The correct dosage reduces the impact on the environment and produces a good washing result.

Pour liquid detergent into the corresponding dispenser.


Too little detergent:

- The laundry is not washed clean and eventually becomes grey and hard.
- Greyish-brown dots (grease spots) may stain the laundry.
- The heating elements are calcifying.

Too much detergent:

- The environment is loaded.
- Excessive froth may be generated during the wash cycle causing a reduction in the washing mechanism. This may be the cause of poor washing and rinsing results.

Adding detergent/ cleaning product

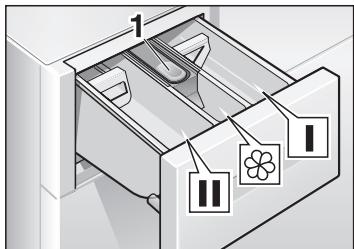

Dispenser I

Detergent for prewash or starch.

Dispenser II

Detergent for main wash, water softener, pre-soaking agent, bleach and stain removal product.

Dispenser III

Cleaning product, e.g. fabric softener or fabric conditioner (fill up to the **max** mark on insert 1).

- i** Concentrated or viscous fabric softener or fabric conditioner must be diluted with a little water before it is poured into the dispenser (prevents the overflow from becoming blocked).
 - Pull out the detergent drawer all the way.
 - Pour in detergent and/or cleaning product.
 - Close the detergent drawer.

Programmes and functions

Programme selector

Basic programmes

Select the desired programme - see also the separate programme overview.

- i** Programmes wash lightly soiled textiles in the shortest possible time. For heavily soiled textiles reduce the load or press the **Intensive** button!

Cottons/Coloureds 30, 40, 60 °C

For hard-wearing textiles, e.g. made of cotton or linen.

Cottons/Coloureds 60 °C Stains

For stained, heavily soiled textiles, e.g. cotton or linen. Energy and water saving programme. The longer washing time in this 60 °C-programme means that the cleaning effects are comparable with those of a 90 °C-programme, although the power and water consumption is considerably lower.

Cottons 90 °C

Energy-intensive programme for heat-resistant textiles, e.g. made of cotton or linen.

To protect the waste-water pipes, the hot water is mixed with approx. 7 litres of cold water and cooled before being drained.

Easy-Care 30, 40, 60 °C

For easy-care textiles, e.g. made of cotton, linen, synthetic or blended fabrics.

- i** Also suitable as **short programme**.

Mix 30 °C

Time-optimised programme for lightly soiled cotton textiles and easy-care textiles. Different types of washing can be washed together.

Even suitable for washing new textiles before they are worn for the first time.

- i** Wash white and coloured items separately.

Do not wash new coloured washing with other washing.

Short washing time.

Delicates 30 °C

For delicate, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains).

Delicates cycle at 30 °C for hand and machine washable silk.

- i** We do not recommend washing these textiles with other rougher textiles.

Wool cold, 30 °C

For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora.

Also suited for hand washable silk.

Programme options

Rinse

Rinse cycle with subsequent spin cycle for rinsing hand-washed items or for starching.

Press the **Extra Rinse** button for an additional rinse cycle.

Spin

Spin cycle after a programme with setting **Rinse Hold** or for spinning hand-washed washing with selection of the required speed. Washing water or rinsing water is drained before the spin cycle.

Drain

Water is drained after a programme with the **Rinse Hold** setting on display panel for gentle treatment of delicate laundry.

Spin speed selector

Basic setting

The spin speed selector is pointing up.
In the **Cottons/Coloureds** programme the fabrics will be spun at the maximum possible spin speed.

In the **Easy-Care, Mix, Delicates** and **Wool** programmes, a lower spin speed will automatically be used, irrespective of the position of the button – gentle treatment of delicate fabrics.

- i** Between the rinse cycles the washing is given an intermediate spin only (not for **Delicates**).
This improves the rinsing results.

Maximum spin speeds

Revolutions per minute	Type of laundry / Programme options
1200	Cottons/Coloureds
800	Easy-Care
800	Mix
600	Delicates
800	Wool
800	Rinse
800	Spin

Additional option

Rinse Hold

For delicate textiles and net curtains.
All programmes can be run without final spin.
The laundry is left in the final rinsing water.
The **Spin** indicator light is lit.
Before the washing can be removed, the **Drain** or **Spin** programme must be run by setting the speed selector to the required speed.

Additional option – buttons

Prewash

For very dirty, hard-wearing laundry, e.g. cotton or linen.

The washing temperature of the prewash is 30 °C.
Prewash cannot be selected for woollens programme.

- i** If the prewash is cancelled, the detergent solution is pumped out and the programme continues with the main wash cycle.

Less Ironing

Gentler reduced spin cycle with subsequent fluffing.
After the spin cycle, the laundry is loose in the drum – creasing is reduced.

Extra Rinse

Additional rinsing of laundry.
Programme duration is extended accordingly.

Recommended application:
in areas with very soft water.

Intensive

The washing time is extended so that highly soiled washing or 6 kg of cottons/coloureds are washed more intensively.


Press the button in addition to the programme for the following combinations of load and degree of soiling:

Amount of laundry	Programme and button Intensive	Degree of soiling
6 kg	Cottons/Coloureds 30, 40, 60 °C	lightly to normally soiled
	Cottons/Coloureds 60 °C Stains	normally soiled with stains
	Cottons 90 °C	normally soiled
up to 5 kg	Cottons/Coloureds 30, 40, 60 °C	normally to heavily soiled
	Cottons/Coloureds 60 °C Stains	normally to heavily soiled with stains
up to 3 kg	Easy-Care 30, 40, 60 °C	
	Mix 30 °C	normally to heavily soiled
up to 2 kg	Delicates 30 °C	
	Wool cold, 30 °C	


See the separate programme table for further information.

Wash


Example of **Easy-Care 40 °C** programme:

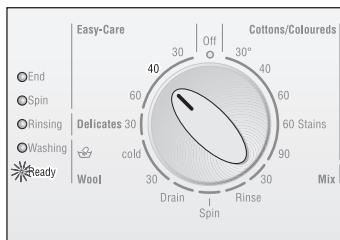

- Turn the programme selector to the desired programme (see also the programme overview).
The **Ready** indicator light comes on.

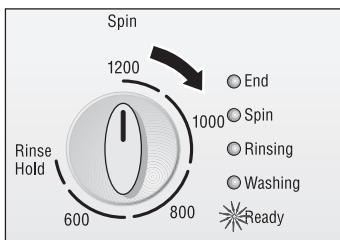

- If required, select spin speed or **Rinse Hold**.

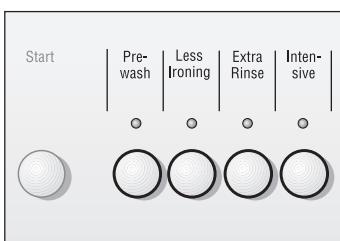

- If required, press the button(s) for additional option(s).
The indicator light of the selected button is on.



- Press the **Start** button.
The programme starts.

Changing the programme

If you have accidentally selected the wrong programme:


- ❑ Turn the programme selector to the desired programme.
If prewash is selected subsequently, set the programme selector to **Off** and reselect the programme.
 - ❑ If required, change other settings.
 - ❑ Press the **Start** button.
The programme starts.
- i** The newly selected programme starts at the programme section at which the previous programme was cancelled, however with the new settings.

Cancelling the programme

If you would like to terminate a programme and remove the washing:

- ❑ Turn the programme selector to **Drain, Spin or Rinse**.
If required, select spin speed (not **Rinse Hold**).
i If a programme is interrupted at a high temperature, **Rinse** should be selected to cool down the washing.
 - ❑ Press the **Start** button.
 - ❑ Wait until programme ends.
 - ❑ Turn the programme selector to **Off**.
 - ❑ Open the washing machine door.
 - ❑ Remove the washing.
- i** If a programme was interrupted at a high temperature, the washing machine door may remain locked until the appliance has cooled down.

After washing

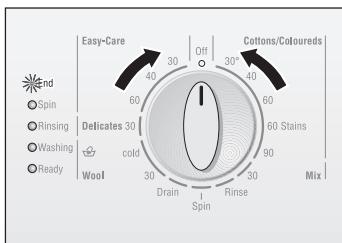

The **End** indicator light comes on.

- Turn the programme selector to **Off**.

or

Setting selected Rinse Hold (without final spin)

- i** The programme has ended and the **Spin** indicator light is lit.

- Select an additional programme (**Drain** or **Spin**).
- Press the **Start** button.
- At the end of the programme option, turn the programme selector to **Off**.

- Open the washing machine door.

If the loading door cannot be opened:
Wait 2 minutes (safety function is active)

or

there is still water in the washing machine if the **Rinse Hold** option was selected.

Select the **Drain** or **Spin** programme and press the **Start** button.

- Unload the laundry.

Attention

Remove any foreign objects (e.g. coins, paper clips) from the drum and rubber seal – **Risk of corrosion and damage to the drum and rubber seal!**

- Leave the washing machine door and detergent drawer open to allow the interior of the washing machine to dry.



Signal

Signal for switching buttons on and off

The acoustic signal indicates:

- that the additional functions (buttons) have been switched on or off,
 - individual programme statuses (e.g. start of programme, end of programme), operating errors and faults.
- Press the **Start** button and set the programme selector to **Cottons/Coloureds 30 °C**. Hold down the **Start** button until the signal is emitted.
The selected setting is saved.
- i** When the additional functions are switched on, a long signal is emitted; when the additional function is switched off, the signal is short.
The volume of the signal cannot be changed.

Signal for programme status

The signal can be switched on and off and the volume set before the start or after the end of the programme.

- Press the **Intensive** button and hold down until the signal is emitted and the volume of the signal changes.
- Release the button when the required volume is reached.
The selected setting is stored.

Special applications

Soaking

- Load laundry of the same colour.
 - Pour soaking agent into dispenser **II** according to the manufacturer's instructions.
 - Set the programme selector to **Cottons/Coloureds 30 °C**.
 - Press the **Start** button.
The programme starts.
 - After approx. 10 minutes, turn the programme selector to **Off**. The laundry is left to lie in the water.
 - Select a programme according to the required soaking time, the detergent solution is pumped out.
- i** Only little detergent to be dispensed for the main wash.

Starching

The laundry must not be treated with fabric softener.

- Insert the washing.
- Dose a quantity of starch for approx. 15 litres of water. Dissolve starch according to the manufacturer's instructions.
- Turn the programme selector to **Rinse**.
- Set the spin speed; **Rinse Hold** is possible.
- Press the **Start** button.

As soon as the water runs in:

- Pull out the detergent drawer a little and
- Pour starch solution into dispenser **I**.
- Close the detergent drawer.

If the **Rinse Hold** option has been selected, select the **Drain** programme.

Dyeing

Only use dyes that are environmentally compatible and suitable for use in washing machines.

Attention

Washing in subsequent wash cycles may become discoloured.

- Apply dyes according to the manufacturer's instructions.

After dyeing:

- Pour approx. ½ measuring beaker of detergent into dispenser **II**.
- Without any laundry in the drum, allow the **90 °C Cottons** programme to run through.
- Wipe out the rubber seal.

Bleaching

Attention

Bleaches may contain sulphur or chlorine which can corrode components of the washing machine. Do not bleach washing in the washing machine.

Cleaning and Care

⚠ Risk of electric shock!

First, always disconnect the appliance from the power supply.

Never clean the washing machine with a water jet.

⚠ Risk of explosion!

Never clean the appliance with solvents.

As required:

- Use hot soapy water or a mild, non-abrasive cleaning agent.
- Wipe dry with a soft cloth.

Clean housing, fascia and supply lines


Cleaning the drum

If metal items (e.g. coins, paper clips, needles, nails) left in the drum have caused rust spots:


- Use chlorine-free cleaning agents; comply with the manufacturer's instructions. Never use steel wool.

Cleaning the detergent dispenser


In the event that residual detergents or additives have accumulated:

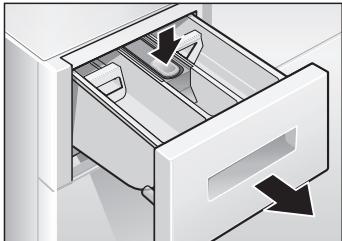

- Pull out the detergent drawer all the way,
- Press down the insert and
- remove the detergent drawer.

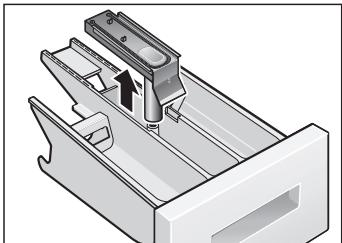

- Lift out the insert.
- Clean the detergent drawer and insert under running water and dry.

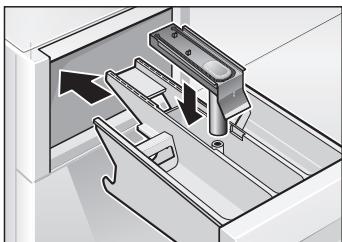

- Attach the insert and lock into position.
- Slide in the detergent drawer.

Cleaning the drain pump

Drain the water


This is necessary if the washing solution has not been completely drained. The pump is blocked by either loose debris or fluff which accumulates if fluff-giving fabrics are washed.

(Up to 20 litres. Have a suitable container ready.)


⚠ Risk of scalding!

Allow the hot water to cool down beforehand.
Keep children and pets away from the washing machine.

- ❑ Turn the programme selector to **Off**.
- ❑ Remove the drain hose from its holder and pull the hose out of the housing.

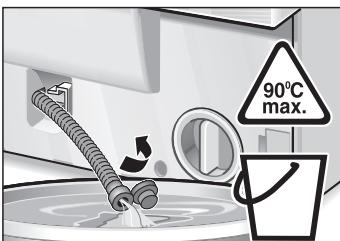


- ❑ Pull down the closing cap and allow the washing lye to flow into a suitable container.

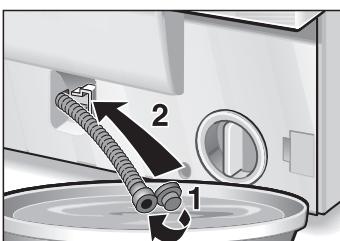

- ❑ Push up the closing cap (**1st**) and place the drain hose back in its holder (**2nd**).



- Carefully remove the pump cap.
A little more residual water will flow out.

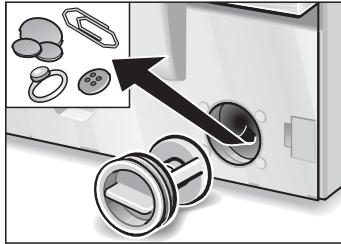

- Remove foreign objects/fluff from inside and clean the interior. The pump impeller wheel must be able to rotate.
Clean any residual lye or fluff from the thread of the pump cap and pump housing.
- Insert the pump cover and screw tight.
To prevent unused detergent from flowing into the drain during the next wash cycle:
 - Pour 1 litre / 1 ¾ pt of water into chamber **II**.
 - Select the **Drain** programme.


Cleaning water inlet strainers

This is necessary if very little or no water flows into the washing machine.

First, reduce the water pressure in the inlet hose:

- Turn off the tap.
- Turn the programme selector to any programme (except **Spin** and **Drain**).
- Press the **Start** button, and allow the programme to run for approx. 40 seconds.
- Turn the programme selector to **Off**.
- Disconnect the hose from the water tap.
- Clean the filter with a small brush or paint brush.
- Connect the hose.
- Turn the tap on.
- Check whether water is leaking out of the end of the hose connected to the tap.

If water is still discharged, check that the strainer is attached properly.

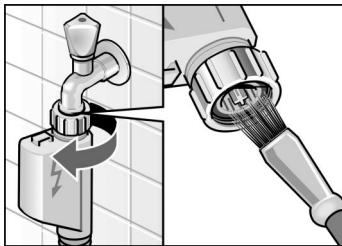

Descaling the washing machine

Attention

Descaling agents contain acids which may corrode the components of the washing machine and discolour the washing.

Provided that you use the correct amount of detergent, it is not necessary to descale the washing machine.

If descaling is nevertheless required, please follow the instructions supplied by the manufacturer of the descaling agent.

Help with minor problems

If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid the following table

- Turn the programme selector to **Off**.
- Disconnect the washing machine from the mains.
- Turn off the tap.
- Call customer service, see Page 39.

⚠ Risk of electric shock!

Repairs may be carried out by customer service or authorised technicians only.

Fault displays

Indicator light flashes and a signal sounds	Possible cause	Remedial action
Washing	Door not closed properly.	Check whether laundry is trapped in door; Close the washing machine door.
Rinsing	Tap not turned on. Inlet hose kinked or pinched. Filter blocked in water inlet hose. Water pressure too low.	Turn the tap on. Eliminate cause. Clean filter, see Page 33. Eliminate cause.
Spin	Loose debris is blocking the pump. Drainage pipe and/or drainage hose blocked.	Clean the pump, see Page 31. Clean drainage pipe and/or drainage hose.

Problems	Cause	Remedial action
Washing machine door cannot be opened.	There is still some water in the appliance, Rinse Hold selected. Safety function is active.	Select Drain or Spin . Wait for 2 minutes.
Detergent residue in the detergent drawer.	Damp or lumpy detergent.	Clean and dry the detergent dispenser; see Page 30.
	Difficult-to-dissolve detergent tablets used.	Use the dosing aid for liquid detergent.
Odour in the appliance.	Washing mainly at low temperatures and/or with liquid detergents.	Before filling dispenser II , crush the tablets in the packet.
Control lights do not come on.	A fuse has triggered.	Start Cottons 90 °C programme without washing. Use a standard detergent.
	Power failure.	Switch on/replace the fuse. If the fault occurs repeatedly, call Customer Service.
	Plug is loose or not plugged in.	An interrupted programme will be resumed when the power returns. If you wish to unload the laundry, proceed as in Cleaning the drain pump , page 31.
Programme does not start.	Loading door not closed properly.	Check whether laundry is trapped in door.
		Close the loading door (a click should be heard).
Programme does not start.	Start button not pressed.	Press the Start button.
Water does enter the machine or detergent is not washed away.	Tap not turned on. Inlet hose kinked or pinched.	Turn the tap on. Clean the strainer; see from Page 33.
	Filter blocked in water inlet hose.	
Detergent in chamber I is not washed away.	A programme without Prewash was selected.	Select programme with Prewash.

Problems	Cause	Remedial action
Water not visible in the drum.	Not a fault. The water lies below the visible part of the drum.	
Washing solution is not completely drained.	Pump blocked by foreign objects. Fluff-producing laundry was washed. The water drainage pipe or drain hose is blocked.	Clean the pump refer to page 31. Clean drainage pipe and/or drainage hose.
Programme does not continue running and an indicator light is lit.	Water in the base pan; Appliance leaking.	Call Customer Service.
Water runs out from under the appliance.	Screw fitting of the inlet hose is leaking. Drainage hose is leaking.	Tighten the screw-fitting. Replace the drain hose.
Foam comes out of the detergent drawer.	Too much detergent or detergent not suitable for use in washing machines used.	Mix 1 tablespoon of fabric softener with $\frac{1}{2}$ litre pt of water and pour into chamber II of the detergent dispenser.
The washing has not been spun correctly.	Large laundry items have become entangled and are not evenly distributed in the drum. For safety reasons, the high-speed final spin cycle was automatically cancelled.	Reduce detergent dosage for next wash cycle or use detergent which is suitable for use in washing machines.
Spin result unsatisfactory.	Less Ironing button pressed – for reduced spin speed see page 21. The Rinse or Spin programme selected maximum spin speed: see Page 20.	
Spin cycle actuated several times.	Not a fault. Unbalanced load detection system is attempting to compensate the imbalance by spinning the washing several times.	

Problems	Cause	Remedial action
The programme takes longer than usual.	Not a fault. Imbalance compensation system attempts to balance the laundry by repeated distribution.	Wash large and small items together in order to reduce the imbalance.
	The foam detection feature has activated an additional rinsing cycle to reduce the amount of foam.	Adjust the detergent dosage for the next wash cycle.
Washing result not satisfactory.	Soiling is greater than expected or recommended load has been exceeded.	Select suitable programme and press the Intensive button or reduce load.
	Detergent was underdosed.	Dose detergent according to the manufacturer's instructions.
Detergent residue on the washing.	Some phosphate-free detergents contain water-insoluble residue which may appear as light stains on the washing.	Select Rinse immediately or brush out the washing after drying.
Grey residue on the washing.	Soiling caused by ointment, grease or oil.	Select maximum detergent dosage and maximum permitted temperature for the next wash cycle.

If the fault recurs, call Customer Service, see Page 39.

Consumption values

Normal programme	Additional option	Load	Consumption values **		
			Power	Water	Programme duration
Cottons/Coloureds 40 °C	Intensive *	6 kg	0.65 kWh	60 l	2:10 h
Cottons/Coloureds 60 °C	–	5 kg	0.95 kWh	60 l	1:17 h
Cottons/Coloureds 60 °C Stains	Intensive *	6 kg	1.02 kWh	49 l	2:15 h
Cottons 90 °C (the hot washing solution is mixed with approx. 7 litres of cold water before being drained)	Intensive	6 kg	2.1 kWh	67 l	2:10 h
Easy-Care 40 °C	Intensive *	3 kg	0.5 kWh	50 l	1:18 h
Easy-Care 40 °C (Also suitable as short programme)	–	3 kg	0.5 kWh	38 l	0:47 h
Delicates 30 °C	–	2 kg	0.3 kWh	42 l	0:35 h
Wool 30 °C	Intensive *	2 kg	0.2 kWh	35 l	0:50 h

* Programme setting with **Intensive** option for test in accordance or in conformity with EN 60 456 and IEC 60 456.

** Consumption values will differ from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type and quantity of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional options.


Customer service

Before you call customer service, please check whether you can eliminate the fault yourself (see from Page 34).

A technician who is called out to give advice will charge you, even if the appliance is still under guarantee.

You can find your nearest customer service in the enclosed address list. Please provide customer service with the product number (E-Nr.) and the production number (FD) of the appliance.

Rating plate

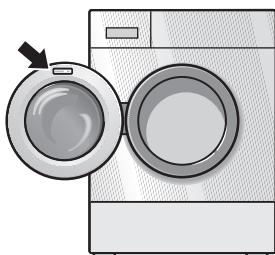

These numbers are shown on the rating plate which can be found on the frame of the open door and also on the identification plate, enclosed by a thick line, on the front of the machine behind the nameplate.

E-Nr. _____	FD _____
-------------	----------

Product number

Production number

Please note the two numbers in the space provided above.

In specifying the product number and production number of your appliance, you help us in our attempt to prevent unnecessary travelling and the associated extra costs.

Installing, connecting and transporting the appliance

Please install and connect the washing machine in accordance with the enclosed installation and assembly instructions. Be sure to read the information contained in this chapter!

Safety instructions

⚠ Risk of injury!

The washing machine is very heavy. Take care when lifting it.

Attention

Frozen hoses may tear/burst. Do not install the washing machine in an area where there is a risk of frost or outdoors.

The worktop must not have any cut-outs in the area of the washing machine.

In addition to the safety information listed here, the local water and electricity supplier may have special requirements.

If in doubt, have the appliance connected by a specialist.

Removing the transportation protection devices

Removing the transportation protection devices

⚠ Caution


The transport bolts must always be removed before using the appliance for the first time.

- Release screws **1**, **2** and **3** using the A/F 13 wrench until they can be moved freely.
- Completely remove all transportation protection devices (**A** and **B** screw together with washer and bushing; **C** screw together with spring, washer and bushing).
- Insert the covers.

Storing the transportation protection devices

Always keep the transport bolts for subsequent transportation of the appliance (e.g. when moving house).

- Store transport bolts **1** and **2** (screw washer and bushing onto bolt).

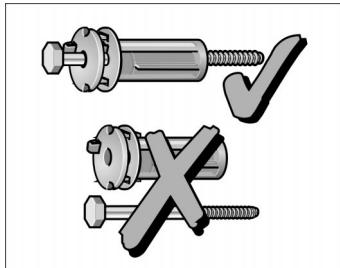

Installation surface

Appliance stability is important so that the washing machine does not “wander” during the spin cycles.

The installation surface must be solid and level. Soft floor coverings, e.g. carpets or floor coverings with a foam backing are not suitable.

Always place the washing machine on the supplied slide plates.

If the washing machine is to be aligned with the height-adjustment kit WZ 20270 / Z 7040X0 / WMZ 2270:

- Moisten the slide plates with a mixture of water and washing-up liquid before pushing in the washing machine. Do not use grease and/or oil!

If the washing machine is to be installed on a base:

- Do not use slide plates.
- Secure the front feet of the washing machine with holding brackets*.

If the washing machine is to be installed on a wooden floor:

- If possible, install the washing machine in a corner.
- Screw a water-resistant wooden board (at least 30 mm thick) to the floor.
Take into account the height of the worktop in your kitchen!
- Do not use slide plates.
- Secure the front feet of the washing machine with holding brackets*.

* Holding brackets (set) can be obtained from a specialist store or the Customer Service order no. CZ 110600.

Connecting the water

Water inlet hose

⚠ Risk of electric shock!

Do not immerse Aqua-Stop safety device in water (contains electrically operated valve).

To prevent leaks or water damage, it is essential to follow the instructions in this chapter!

Attention

Operate the washing machine with cold drinking water only. Do not connect to the mixer tap of an unpressurised hot-water apparatus.

If in doubt, have the appliance connected by a specialist.

The water inlet hose must not be

- kinked or crushed,
- modified or severed (strength is no longer guaranteed).

Check the mains water pressure:

- The water pressure should be between 1 and 10 bars (when the tap is turned on, at least 8 litres of water is discharged per minute).
- If the water pressure is higher, install a pressure reducing valve.

Water drainage hose

Aligning the washing machine

Attention

Do not bend or pull the water drainage hose.

Level the washing machine with the assistance of the four adjustable feet and a spirit level:

All four feet must be firmly on the floor. The washing machine must not wobble.

The locknuts on the front feet of the appliance must be screwed against the housing!

Attention

Loud noise generation, vibrations and "wandering" may be due to incorrect alignment!

Connecting the power

Attention

Connect the washing machine only to an alternating current via a correctly installed earthed socket.

The mains voltage must correspond to the voltage specification on the washing machine (nameplate). Connection specifications as well as the required fuses are stipulated on the appliance nameplate.

Ensure that:

- The mains plug and socket are compatible.
- The cable cross-section is adequate.
- The earthing system has been installed correctly.

The mains cable may be changed (if required) by an electrician only.

Replacement mains cable available from customer service.

Do not use multiple plugs/sockets or extension cables.

In the event that an earth-leakage circuit breaker is to be used, only use types marked with the following symbol: .

Only this symbol can guarantee compliance with all current regulations.

Do not insert/pull out the mains plug with wet hands.

Do not pull out the mains plug by tugging the cable.

Transport, e.g. when moving


Before transporting the washing machine

- Turn off the tap,
- Reduce the water pressure in the water inlet hose (see Page 33),
- Drain any residual washing solution (refer to Page 31).
- Disconnect the washing machine from the power supply,
- remove the hoses,
- install the lower 2 transport bolts.

Having transported the appliance and ensured proper installation and connection, allow the **Drain** programme to run through before starting the first wash programme.

Preparing and inserting the transport bolts

- Remove the 2 lower covers.
- Prepare the transport bolts:
Loosen the screw in the sleeve until the end of the screw is level with the end of the sleeve.
- Through the open washing machine door have a second person pull the top of the drum forwards.
Now insert transportation protection devices **1** and **2** and tighten the screws. The washer lugs must be located in the groove in the rear panel of the housing.

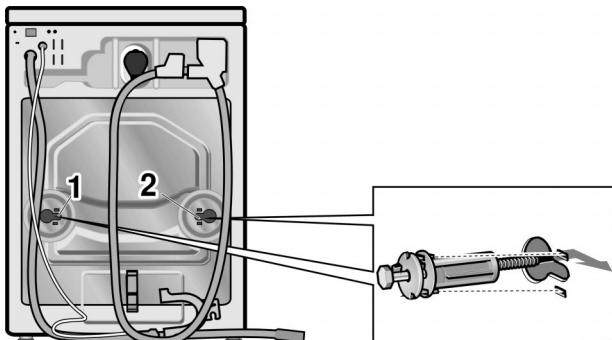

Aqua Stop warranty

In addition to warranty claims against the seller based on the sales contract and in addition to our appliance warranty we shall be liable for payment of damages under the following conditions:

- 1.** If damage is caused by water due to a fault of our Aqua Stop system, we shall compensate the private user for the damage.
- 2.** This liability guarantee is valid for the service life of the appliance.
- 3.** A claim under the warranty can only be considered provided Aqua-Stop has been properly installed and connected to the appliance according to our instructions, including a properly installed Aqua-Stop extension (original accessory). Our warranty does not apply to defective supply lines or fittings up to the Aqua Stop connection on the tap.
- 4.** If your washing machine features Aqua Stop, you do not need to keep your eye on the washing machine during operation or turn the tap off afterwards. You should only turn the tap off if you intend being away from home for a prolonged period, e.g. on holiday.

Index

A

Additional options, 9, 21
Extra Rinse, 9, 21
Intensive, 9, 22
Less Ironing, 9, 21
Prewash, 9, 21

Aligning the washing machine, 43

Aqua Stop, 46

B

Basic programmes, 18
Bleaching, 28

C

Cancelling the programme, 24
Care labels, 14
Changing the programme, 24
Cleaning and care, 29
Control panel, 29
Detergent drawer, 30
Drain pump, 31
Drum, 29
Housing, 29
Strainer, 33
Supply lines, 29
Closing cap, 31
Connecting the power, 44
Connecting the water, 43
Consumption values, 38
Control panel, 9
Cottons/Coloureds, 18–20
Stains, 18
Customer service, 39

D

Degrees of dirt, 12
Delicates, 19
Descaling, 33
Disposal, information, 5
Dosing detergent, 16
Drain, 19
Dyeing, 28

E

Easy-Care, 18
End of the programme, 9, 25

F

Fault display, 34
Functions, 18

H

Hints and tips, 6

I

Indicator lights, 9
End of programme, 9
Ready, 9
Rinsing, 9
Spin, 9
Washing, 9

Insert transportation protection devices, 45

Installation surface, 42

Internet, 4

L

Loading the detergent, 17
Loading the washing, 11, 15

M

Mix, 19

O

Old appliance, 5

P

- Packaging, 5
- Preparing the washing, 11
- Problems, 34
- Product number, 39
- Production number, 39
- Programme duration., 38
- Programme options, 19
- Programme selector, 9, 18
- Programmes, 18
- Protection of the environment, 6
- Pump cap, 32

R

- Rating plate, 39
- Remove the washing, 25
- Removing stains, 13
- Removing the transportation protection devices, 41
- Rinse, 19
- Rinse Hold, 20

S

- Safety instructions, 7, 40
- Signal, 26
- Soaking, 27
- Sorting the washing, 12
- Spin, 19
- Spin speed selector, 9, 20
- Starching, 27
- Start button, 9
- Start programme, 23
- Storing the transportation protection devices, 41

T

- Take out the drain hose., 31
- Transporting the washing machine, 45

W


- Wash, 23
- Washing machine, 8
- Wool, 19

0304 en
9000 004 036


Programmes ¹⁾²⁾ Type of laundry	Amount of laundry	Degree of soiling	Required button, additional function	
Cottons/Coloureds				
Hard-wearing textiles, heat-resistant textiles e.g. cotton or linen				
30, 40 ³⁾ , 60 °C	6 kg	light to normal	Intensive	
60 °C Stains ³⁾		normally with stains	Intensive	
90 °C		normal	Intensive	
30, 40, 60 °C	up to 5 kg	light	–	
30, 40, 60 °C		normal to heavy	Intensive	
60 °C Stains		normally to heavily with stains	Intensive	
Easy-Care				
Easy-Care textiles e.g. cotton, linen, synthetic materials or blended fabrics (also suitable as a short programme)				
30, 40, 60 °C	up to 3 kg	light	–	
30, 40 ³⁾ , 60 °C		normal to heavy	Intensive	
Mix				
For cotton washing and easy-care textiles – different types of washing can be washed together				
30 °C	up to 3 kg	light	–	
30 °C		normal to heavy	Intensive	
Delicates				
Delicate, washable textiles, e.g. silk, satin, synthetic or blended fabrics without wool component (e.g. curtains)				
30 °C	up to 2 kg	light	–	
30 °C		normal to heavy	Intensive	
Wool				
hand and machine washable wool or woolrich textiles, e.g. cashmere, mohair or angora. Also suited for hand washable silk.				
cold, 30 °C	up to 2 kg	light	–	
cold, 30 °C ³⁾		normal to heavy	Intensive	
Programme options		Rinse, Spin, Drain		

- The following **additional options** can be selected in addition to the programmes:
Spin speed selector: **Spin speeds** or **Rinse Hold**,
Buttons: **Prewash**, **Less Ironing**, **Extra Rinse**, **Intensive**.
- Pour detergent into dispenser **II** (on left) for programme without prewash;
distribute detergent between dispensers **I** and **II** for programmes with prewash.
- Programme setting for test in accordance or in conformity with EN 60456 and IEC 60456.


Quick-reference instructions

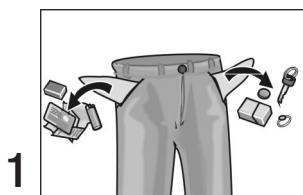

1

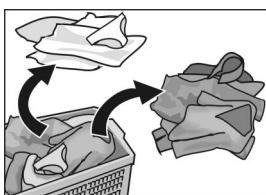

2

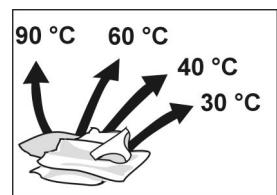


3



4




5

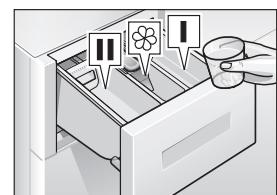


6


If required:

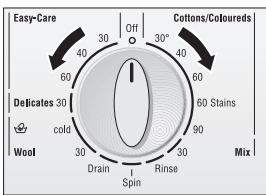


7

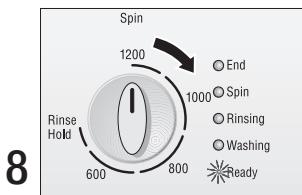

8

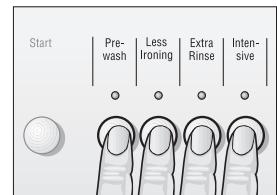


9

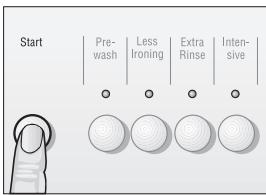


10

At the end of the programme:

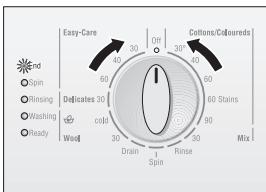

1

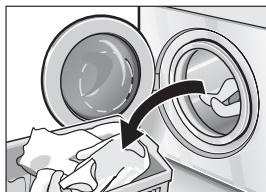

2

