




Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.




1

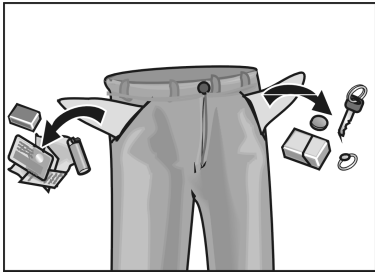

2

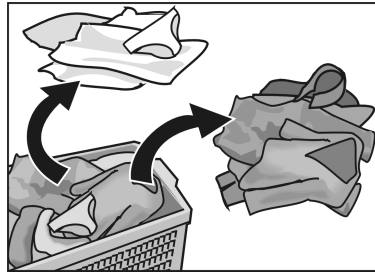


3

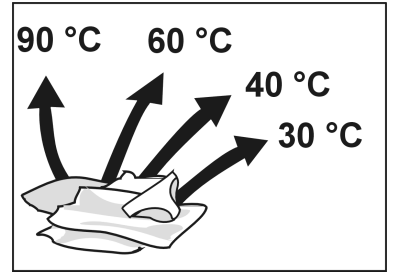


4



5

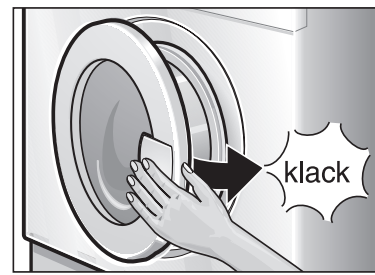


6

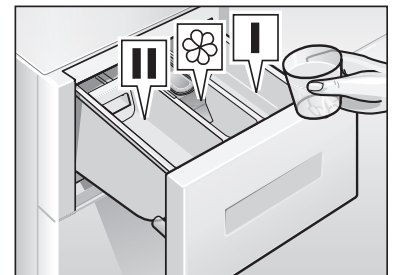


If required:

If required:


7

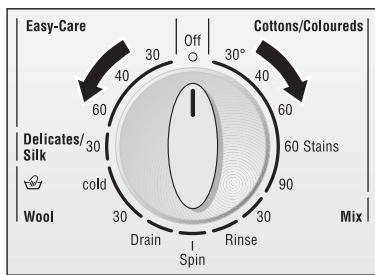

8

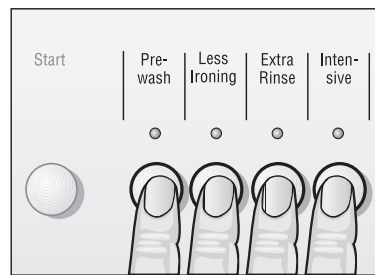


9

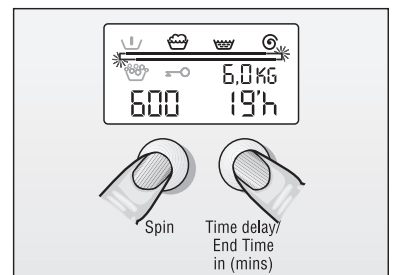

Symbols on the display panel:


- Prewash
- Washing
- Rinse
- Final spin/Drain
- Overdosage
- Childproof lock
- Recommended load

10

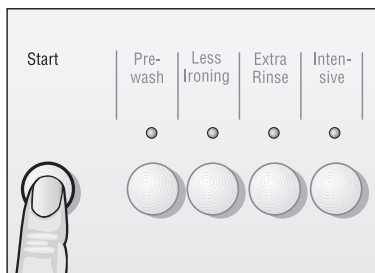


At the end of the programme:

1

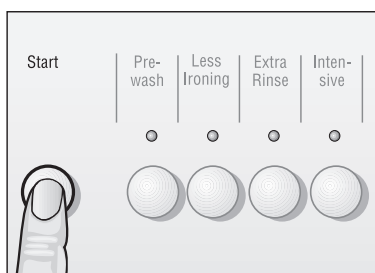

2

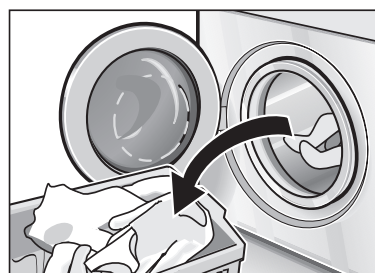

Overview of programmes

You can change the programme with the following **settings in the display field and/or additional functions**:

- Can be set in the display panel: **Spin speeds or “---”** (No final spin, the washing remains in the final rinsing water).
Select start time,
- Additional function/buttons: **Prewash:** Switch on prewash, **Less Ironing:** Gentle spin,
Extra Rinse: Additional rinse cycle, **Intensive:** Intensive wash.

| Type of laundry Comply with care labels! | Amount of laundry | Programme* | Degree of soiling | Required additional option button |
|---|-----------------------------|--|--|-----------------------------------|
| Hard-wearing textiles, heat-resistant textiles e.g. made from cotton or linen | 6 kg | Cottons/Coloureds 30, 40**, 60 °C | lightly to normally soiled | Intensive |
| | | Cottons/Coloureds 60 °C Stains** | normally soiled with stains | Intensive |
| | | Cottons 90 °C | normally soiled | Intensive |
| | up to 5 kg | Cottons/Coloureds 30, 40, 60 °C | lightly soiled | – |
| | | Cottons/Coloureds 30, 40, 60 °C | normally to heavily soiled | Intensive |
| | | Cottons/Coloureds 60 °C Stains | normally to heavily soiled with stains | Intensive |
| For easy-care textiles, e.g. cotton, linen, synthetic materials or blended fabrics (Also suitable as a short programme) | up to 3 kg (or 8 shirts) | Easy-Care 30, 40, 60 °C | lightly soiled | – |
| | | Easy-Care 30, 40**, 60 °C | normally to heavily soiled | Intensive |
| For cotton washing and easy-care textiles – different types of washing can be washed together | up to 3 kg | Mix 30 °C | lightly soiled | – |
| | | Mix 30 °C | normally to heavily soiled | Intensive |
| For easy-care, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics without wool (e.g. curtains) | up to 2 kg | Delicates/Silk 30 °C | lightly soiled | – |
| | | Delicates/Silk 30 °C | normally to heavily soiled | Intensive |
| For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora, also suited for hand washable silk | up to 2 kg | Wool cold, 30 °C | lightly soiled | – |
| | | Wool cold, 30 °C** | normally to heavily soiled | Intensive |

Programme options

| Programme selector | Notes/Application |
|--------------------|---|
| Rinse | Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the spin speeds as specified in the operating and installation manuals. |
| Spin | Spin cycle after a programme with setting “---” (without final spin) or for spinning hand-washed washing. Washing water or rinsing water is drained before the spin cycle. Please comply with the spin speeds as specified in the operating and installation manuals. |
| Drain | Water is drained after a washing programme with the “---” (Without final spin) setting. For gentle treatment of delicate laundry. |

* Pour detergent into dispenser II (on left) for programmes without prewash; distribute detergent between dispensers I and II for programmes with prewash.

** Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456