



Short and precise:  
everything your dishwasher  
needs...

However, before using the  
device for the first time, read  
the **Installation and Instruction  
Manual** thoroughly!

1

 
## Interesting Facts For The Operation

### Before first use

- Select the display language (see instruction manual)
- Fill in salt and rinse aid (see below)
- Set Softening System (see instruction manual)

This dishwasher is equipped with touch buttons.  
A gentle touch starts the function. A signal will sound on  
setting the buttons.

The display gives optical character information on the programmes,  
options, and settings as well as actions available.




- ⚡ Main switch : Switch on the device
- Menu/OK : Select options, store changed value
- and + : Select programmes and settings
- Start : Start programme.

The luminous arrows indicate whether you are able to select among other options using – or +.


2

### Fill in salt


Not required if softening system set to "0". Required if "Refill salt" is displayed

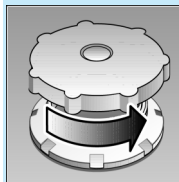


Unscrew  
the lid.

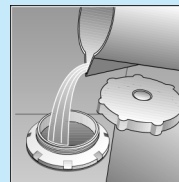

**Only before using  
the dishwasher  
for the first time  
pour approx. 1 l /  
2 pt water into the  
salt opening.**

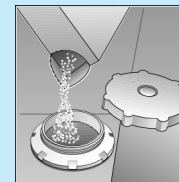

Pour in max.  
1.5 kg / 3 lb 5 oz  
**salt** (never deter-  
gent!)

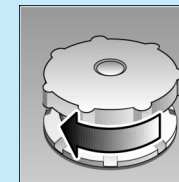

Screw on the  
lid. Switch on  
dishwasher  
immediately.


3

### Fill in rinse aid


Required if "Refill rinse aid" is displayed.



Press the  
marking,  
Lift the  
lid

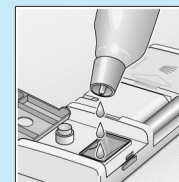

**Pour in  
the rinsing  
agent**

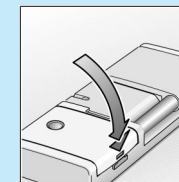


Close the  
lid.  
CLICK


4

### Fill in cleaning product


Little dirt, little cleaning agent

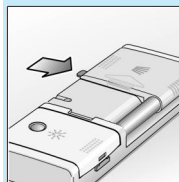

**Warning,**  
combination  
products are not  
suitable for all  
programmes,  
follow manufac-  
turer's instructions.

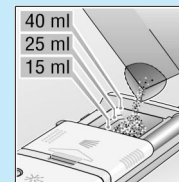

**Pour in the  
cleaning agent**

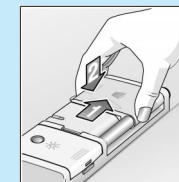

Push the lid  
too, press.  
PLOP

5

### Open mains water tap Switch on the device

Switch on by pressing main switch ⚡ (approx. 2 seconds)

6

### Select programme In the Main Menu by pressing –/+



### Programme Overview

The programme data are laboratory read-outs  
according to European Standard EN 50242.  
In practice, deviations are possible.

|                           | Prerinse<br>Only | Quick<br>Wash | Auto<br>Delicate<br>Wash | Auto Wash | Auto Super<br>Wash |
|---------------------------|------------------|---------------|--------------------------|-----------|--------------------|
| Duration: hs/mins         | 0:19             | 0:30          | 1:20-1:40                | 1:30-2:30 | 1:50-2:10          |
| Energy Consumption: kWh   | 0,05             | 0,70          | 0,70-0,90                | 1,00-1,30 | 1,40-1,70          |
| Water Consumption: litres | 4                | 10            | 10-18                    | 10-19     | 14-22              |

### Options/Basic Settings (Menu)

Select and store: Menu/OK; Set: –/+.

1. Timer programming
2. Reduce Time
3. Onboard computer \*
4. Drying Level
5. Buzzer Volume
6. Adding Rinse Aid
7. Water Hardness
8. Language
9. Standard Programmes

\* not included with all models

### Standard Programmes

|                             | Extra | Eco<br>50 | Eco<br>45 | Normal<br>45 |
|-----------------------------|-------|-----------|-----------|--------------|
| Duration: hs/mins           | 2:20  | 2:20      | 2:20      | 2:15         |
| Energy Consumption: kWh     | 1,05  | 1,05      | 1,05      | 0,60         |
| Water consumption in litres | 15    | 14        | 10        | 13           |

### Start programme Here goes ...

Press Start button.

7


### Switch off the device All done ...

Open the door when the buzzer has sounded 5 times  
(programme stop). "Ready" is briefly displayed, the  
appliance automatically switches off after 5 seconds.


Maintenance and care

Strainers ...


Check, if required, clean

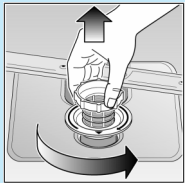


Rotate filter cylinder, remove filter system ...

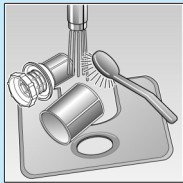

rinse under flowing water ...

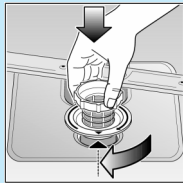

Insert ...

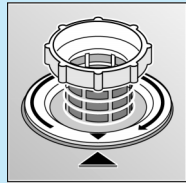


Screw in filter system NOTE MARK!

Cleaning the waste-water pump \*


- \* With some models
- Ladle out water and remove filters
- Unscrew cover (Torx T20)
- Check area of fan impeller for foreign objects
- Screw in cover and insert filters

Spray arms ...


Remove blockages/deposits

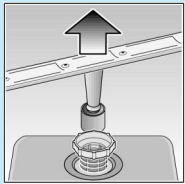




Pull lower arm upwards ...

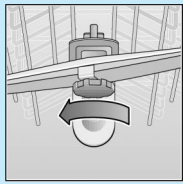


Unscrew upper arm ...

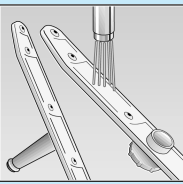

Clean spray nozzles under flowing water (perhaps with toothpick) ...

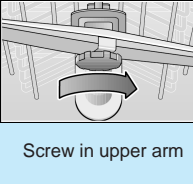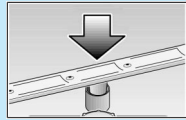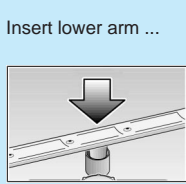

Screw in upper arm

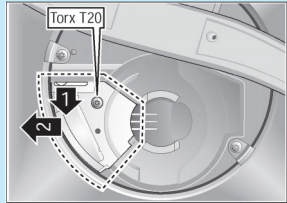

Eliminating minor faults yourself ...

... Self-help pays!

| Fault                                       | Possible Cause   | Remedy   | Fault   | Possible Cause  | Remedy   |
|---|--|--|---|---|--|
| Display in wrong language                   | Language changed                                       | ▶ Switch off and on the device. Press the button M/OK repeatedly until the display shows the language selection. Select the language using –/+, and store the selection using M/OK.                          | Dishes not clean                                      | Utensils are situated too close to each other or on top of each other | ▶ Spread out the utensils, avoid contact between the utensils.   |
|   |  |  | Sand or grainy residues on dishes                     | Too little cleaning product   | ▶ Follow manufacturer's specifications (detergent).              |
|   |  |  |   | Unsuitable programme selected   | ▶ Select more intensive programme.                               |
|   |  |  |   | Spray nozzles blocked   | ▶ Clean spray arms (see above).                                  |
|   |  |  |   | Filters dirty, not installed securely                                 | ▶ Clean the strainers (see above).                               |
|   |  |  |   | Spray arms blocked  | ▶ Arrange the utensils so that the spray arms can rotate freely. |
|   |  |  |   |   |  |
| Residual water in the device                | Waste-water pump blocked                               | ▶ Clean waste-water pump (see above)   |   |   |  |
| Programme does not start, does not run on   | Programme has not been started                         | ▶ If necessary, start programmes.  |   |   |  |
|   | Door was opened before end of programme                | ▶ Close the door. Wait for programme stop (buzzer sounding 5 times).   |   |   |  |
|   |  |  |   |   |  |
| Device does not work/stops                  | Supply fitting not open                                | ▶ Open supply fitting.   | Stains and streaks                                    | Rinse aid dosage too high / too low                                   | ▶ Streaks: Reduce dosage.  |
|   | Supply hose kinked                                     | ▶ Lay supply hose without kinks.   |   |   | ▶ Water or limescale stains: Increase dosage.                    |
|   | Supply fitting jammed or calcified                     | ▶ 1. Unscrew water connection.<br>▶ 2. Clean filter in the water connection.<br>▶ 3. Flow rate must be min. 9 l/min when the water inlet is open.<br>▶ If the flow rate is less, replace the supply fitting. | Milky residues on dishes (can be removed)             | Water softening system incorrectly set; no special salt               | ▶ Set water softening system correctly.                          |
|   |  |  |   |   | ▶ Refill with special salt.                                      |
|   |  |  | Milky film, glasses cloudy / dull (cannot be removed) | Glasses not dishwasher-proof.   | ▶ Use dishwasher-proof glasses.                                  |
|   |  |  |   |   | ▶ Use glass-friendly cleaning products.                          |
|   |  |  |   |   |  |
| Plastic parts / parts of dishes discoloured | Too little cleaning product                            | ▶ Follow manufacturer's specifications (detergent).  | Cutlery rusty   | Cutlery not rust-proof<br>Hard knife blades are more susceptible      | ▶ Use dishwasher-proof cutlery.                                  |
|   | Discoloration caused by food colourings (tomato sauce) | ▶ Discoloration is quite safe; fades after subsequent rinse cycles.  |   | Extraneous rust   | ▶ Never wash rusting parts in the appliance.                     |

Further advice can be found in the instruction manual

Interrupting the programme ...

- Open the door.
- To continue the programme, close the door.

Terminating the programme ...

- Open the door and press the (–) "Terminate programme" button.
- Close the door.
- Open the door when the buzzer has sounded 5 times (programme stop). "Ready" is briefly displayed, the appliance automatically switches off after 5 seconds.

Arranging utensils correctly ...

Arrange dishwasher-proof utensils (having removed any ash, wax, grease or ink. Coarsely remove sticky labels, large remnants of jam, milk products or food) according to the operating instructions and check that the spray arms can rotate freely.