



Short and handy: everything your dishwasher needs...
Before using for the first time, read the Installation and Operating Instructions!




Setting the water softening system *

Find out the water **hardness** at your water utility company and **enter below**

Blank box for entering water hardness information.

Read off the setting

| °dH | °fH | °Clarke | mmol/l | Setting |
|-------|-------|---------|---------|----------|
| 0-6 | 0-11 | 0-8 | 0-1,1 | 0 |
| 7-16 | 12-29 | 9-20 | 1,2-2,9 | 1 |
| 17-21 | 30-37 | 21-26 | 3,0-3,7 | 2 |
| 22-35 | 38-60 | 27-44 | 3,8-6,2 | 3 |

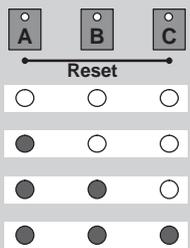

Quickly sorted


and then select a setting

- Hold down programme button **B** and switch on the main switch, then release the buttons. The display flashes and buttons **A** and **B** illuminate (water hardness setting was set to 2 at the factory).
- Each time button **B** is depressed, the setting increases by one (0-3). If buttons **A**, **B** and **C** illuminate, the maximum water hardness setting has been reached. If the water hardness setting is now increased again, the lights go out and the water hardness setting is set to 0.
- Switch off the main switch. The selected setting has been stored in the appliance.


* only before using the dishwasher for the first time or if the water hardness changes

1 Add salt.


Dissolves limescale (not required for set value 0!)

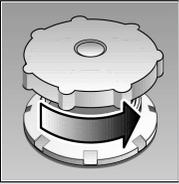


Unscrew the lid.

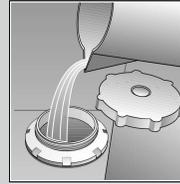

Only before using the dishwasher for the first time pour approx. 1 l / 1 1/4 pt water into the salt opening.

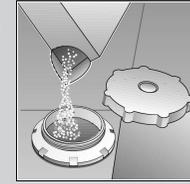


Pour in max. 1.5 kg / 3 lb 5 oz salt (never detergent!)

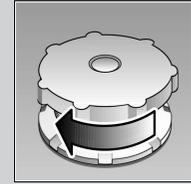

Screw on the lid. Switch on dishwasher immediately.

2 Add rinse-aid.


Everything is sparkling clean ...

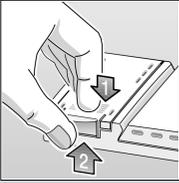


Press mark 1, lift up lid 2.



Refill whenever level indicator is light!

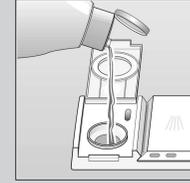


Pour in rinse aid.

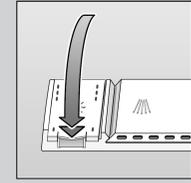

Close the lid. CLICK!

3 Add detergent.


Very dirty dishes, a lot of detergent ...

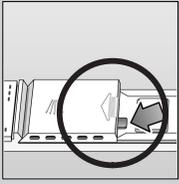


If required, open the lid (press the pin).



Warning, combination products are not suitable for all programmes, follow manufacturer's instructions.

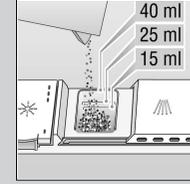

Pour in detergent.

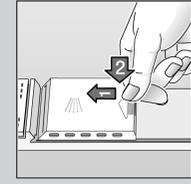

Push the lid shut, press. PLOP!

5 Select programme.

Quick, economical or intensive ...

Overview of programmes

This overview indicates the max. possible number of programmes. The programmes which correspond to your appliance can be found on your appliance fascia.

The programme data are values measured in the laboratory in compliance with Standard EN 50242. Deviations in practice are possible.

| | Intensive 70° | Normal 65° | Eco 50° | Gentle 40° | Quick 35° | Pre-rinse |
|-----------------------------|----------------------|-------------------|----------------|-------------------|------------------|---------------|
| Duration in minutes | 115 | 140 | 140 | 75 | 30 | 19 |
| Power consumption in kWh | 1,70 | 1,60 | 1,05 | 0,90 | 0,70 | 0,10 |
| Water consumption in litres | 21 | 19 | 14 | 15 | 10 | 4 |

Additional programmes **

Increased flexibility ...

Extra dry
... improves the drying result by increased temperature in the final rinse (Please take care with delicate dishes)

Upper basket cleaning
... Only the crockery in the upper basket is cleaned

Half load
... for a few items, saves water, energy and time

** on some models

Switch appliance ON, off we go...

Press main switch, choose programme. Close door.

6 Switch appliance OFF, everything OK...

Signal sounds, open door. End-of-programme indicator flashes, press main switch.

Maintenance and care


For perfect rinsing results

Filters


Check and, if required, clean:




Rotate filter cylinder, remove filter system

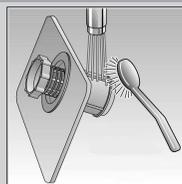

Rinse under running water

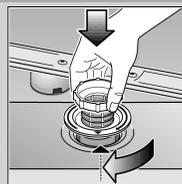

Insert

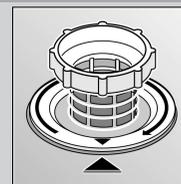


Screw on filter system. NOTE MARK!

Waste water pump *

* some models



- Set main switch to OFF
- Scoop out any water
- Remove the filters
- Remove the cover (⇒A)
- Check the inner compartment for foreign objects and, if required, remove foreign objects
- Re-insert the cover (⇒B)
- Re-insert the filters and screw into position

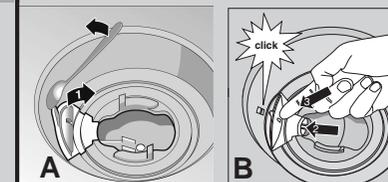


Spray arms

Remove blockages/deposits

  
Pull up lower arm




Unscrew upper arm

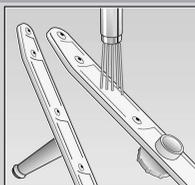

Clean under running water (if required, use a toothpick)

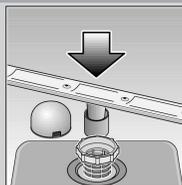

Insert lower arm

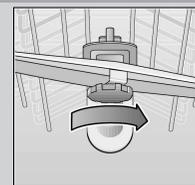

Screw on upper arm

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

| Fault | Possible causes | Remedial action |
|--|--|---|
| "Check water supply" display lights up | Supply fitting jammed or calcified | <ul style="list-style-type: none"> ▶ Open supply fitting. ▶ 1. Unscrew water connection. ▶ 2. Clean filter in the water connection. ▶ 3. Flow rate must be min. 9 l/min. when water supply is open. If the flow rate is less, replace the supply fitting. ▶ Install supply hose without kinks. |
| Residual water in the appliance and "Check water supply" display lights up | Waste water pump blocked | ▶ Clean waste-water pump (see above). |
| | The programme has not yet ended | ▶ Close the appliance and wait until the programme ends (end of programme display is lit) or terminate the programme (see Terminating the programme). |
| | Waste water hose is blocked or kinked | ▶ Install waste water hose without kinks. |
| Plastic/utensils discoloured | Too little detergent | ▶ Follow manufacturer's instructions (detergent). |
| | Discoloration caused by food colourings (tomato sauce) | ▶ Discoloration is harmless; subsequent rinse cycles will cause it to fade. |

| Fault | Possible causes | Remedial action |
|---|--|--|
| Utensils are not clean | Utensils are situated close together or one above the other | ▶ Separate the utensils, prevent contact points. |
| Sand or gritty residue on the utensils | Too little detergent | ▶ Follow manufacturer's instructions (detergent). |
| | Unsuitable programme selected | ▶ Select a more intensive programme. |
| | Spray arm nozzles blocked | ▶ Clean the spray arms (see above). |
| | Filters dirty, not seated firmly | ▶ Clean the filters (see above). |
| | Spray arms blocked | ▶ Arrange the utensils so that the spray arms can rotate freely. |
| Stains and streaks | Rinse-aid dosage too high/too low | <ul style="list-style-type: none"> ▶ Streaks: reduce dosage. ▶ Water or limescale stains: increase dosage. |
| Milky deposits on the utensils (can be removed) | Water softening system incorrectly set; No salt | <ul style="list-style-type: none"> ▶ Correctly set water softening system. ▶ Refill with salt. |
| | Milky deposits, glasses cloudy/tarnished (cannot be removed) | <ul style="list-style-type: none"> ▶ Glasses not dishwasher-proof ▶ Use dishwasher-proof glasses. ▶ Use a detergent suitable for glasses. |
| Rust on the cutlery | Cutlery not rust-resistant | ▶ Use dishwasher-proof cutlery. |
| | Hard knife blades are more susceptible | ▶ Never wash rusting parts in the appliance. |
| | Extraneous rust | ▶ |


More information can be found in the operating instructions

Interrupting the programme ...

Terminating the programme ...

- Open the door.
- Press the START/STOP button.
- To continue, press the START/STOP button again.
- Close the door.

- Open the door.
- Press the two **RESET** buttons **simultaneously** (approx. 3 seconds) (**RESET**).
- Close the door.

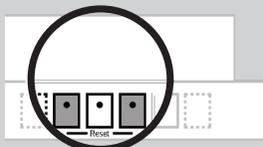

After 1 minute the programme ends. The "signal sounds and the standby indicator illuminates".

Switch off the appliance.

Arranging dishes correctly ...

Arrange dishwasher-proof dishes in accordance with the operating manual (without residual ash, wax, lubricating grease, ink, sticky labels; remove any large remnants of jam, milk products or food) and check that the spray arms can rotate freely.