

Dear customer,

You have decided to purchase a new microwave oven from Neff. We would like to thank you for your confidence in us and we hope that you will have many years of enjoyment and cooking pleasure with your new appliance at the heart of your kitchen.

Please read the instruction manual to ensure that you make full use of all the technical benefits your microwave oven has to offer.

The detailed table of contents guides you quickly to all the important information:

- It will provide you with important safety information.
- You will be familiarised with the individual components of your new appliance.
- And we will show you how to make settings step by step.
- The tables list numerous well-known dishes and typical settings. All these dishes are tested in our cooking studio.
- In the unlikely event of a malfunction, look here for information on how to rectify minor faults yourself.

Have fun cooking.

Table of contents

Safety information	4
Before installation	4
Safety information	4
Information on the microwave	6
Causes of damage	8
Environmentally-friendly disposal	9
Your new appliance	9
Control panel	9
Operating controls	10
Cooking compartment	10
Before first use	11
Setting the clock	11
Cleaning the accessories before use	12
Switching the appliance on and off	12
The microwave	13
Notes regarding ovenware	13
Microwave power settings	14
Setting the microwave	14
1,2,3 series of operations	15
Setting a series of operations	15
Automatic programmes	17
Setting the programme	17
Notes on automatic programming	19
Memory	21
Storing settings in the memory	21

Table of contents

Electronic clock	23
Clock display	23
Timer	24
Cooking time	25
Setting the clock	26
Changing the basic settings	27
Basic settings	27
Care and cleaning	28
Cleaning agents	28
Faults and repairs	30
Malfunction table	30
After-sales service	32
Technical data	32
Dishes tested for you in our cooking studio	33
Defrosting, heating up and cooking with the microwave	34
Tips for microwave operation	39
Test dishes in accordance with FN 60705	40

Read this instruction manual carefully. Only then will you really be able to operate your appliance safely and correctly.

Please keep the instruction and installation manuals in a safe place. Please include these manuals if you pass on the appliance to a new owner.

Before installation

Transport damage

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged during transportation.

Electrical connection

Only allow a licensed professional to connect the appliance. Warranty claims for damage caused by incorrect connection will not be accepted.

Installation and connection

Please observe the special installation instructions.

Safety information

This appliance is intended for domestic use only. It must only be used for food and drinks preparation.

Adults and/or children must not operate the appliance without supervision

- if they are not physically or mentally capable of so doing or
- if they lack the knowledge and experience to operate it correctly and safety.

Never let children play with the appliance.

Hot cooking compartment

Risk of burning.

Never touch the hot surfaces of heating and cooking appliances. Open the cooking compartment door carefully. Hot steam may escape. Small children must be kept at a safe distance from the appliance at all times.

There is a risk of fire.

Never store combustible items in the cooking compartment.

Never open the cooking compartment door if smoke can be seen in the appliance. Switch off the appliance. Pull out the mains plug or switch off the circuit breaker in the fuse box.

There is a risk of a short-circuit.

Never trap cables of electrical appliances in the cooking compartment door when it is hot. The cable insulation could melt.

Risk of burning.

Never use to prepare food containing large quantities of drinks with a high alcohol content. Alcohol vapours may ignite in the cooking compartment. Use only small quantities of drinks with a high alcohol content and open the cooking compartment door carefully.

Hot accessories

Risk of burning.

Always use an oven cloth or oven gloves to remove hot accessories from the appliance.

Damaged cooking compartment door or door seal

There is a risk of serious damage to health

Never use the appliance if the cooking compartment door or the door seal is damaged. Microwave energy may escape. Do not use the appliance again until it has been repaired.

Heavily corroded surfaces

There is a risk of serious damage to health

The surface of the appliance could rust through over time if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis.

Casing open

There is a risk of electric shock.

Never remove the casing. The appliance is a

high-voltage appliance.

There is a risk of serious damage to health Never remove the casing. It prevents microwave energy from escaping.

Hot or humid environment

There is a risk of a short-circuit.

Never expose the appliance to excessive heat or moisture.

Incorrect repairs

There is a risk of electric shock.

Incorrect repairs are dangerous. Repairs may only be carried out, and damaged power cables replaced, by one of our experienced after-sales engineers.

You must not open the casing. The appliance is a high-voltage appliance. The casing prevents microwave energy from escaping.

If the appliance is faulty, switch off the circuit breaker in the fuse box or disconnect the appliance at the mains. Call the after-sales service.

Information on the microwave

Preparing food

There is a risk of fire.

Only use the microwave to prepare food which is fit for consumption. Using the microwave for other purposes may be dangerous and may result in damage,

e.g. heated slippers and grain or cereal pillows could catch fire, even several hours later.

Ovenware

There is a risk of injury.

Porcelain or ceramic ovenware can have small perforations in the handles or lids. These perforations conceal a cavity below. Moisture that has penetrated this cavity could cause the ovenware to crack.

Only use ovenware that is suitable for use in a microwave.

There is a risk of burns.

Hot food can heat up ovenware. Always use an oven cloth or oven gloves to remove ovenware and accessories from the cooking compartment.

Microwave power and time

There is a risk of fire.

Do not select a microwave power or time setting that is higher than necessary. The food could catch fire and cause damage to the appliance. Follow the information provided in this instruction manual.

Packaging

There is a risk of fire.

Never heat food in heat-retaining packages.

Do not leave food heating unattended in containers made of plastic, paper or other combustible materials.

There is a risk of burns.


Airtight packaging may burst when food is heated. Follow the information provided on the packaging. Always use an oven cloth or oven gloves to remove meals

Drinks

There is a risk of scalding

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. If the container is only shaken a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the

container. This will prevent delayed boiling.

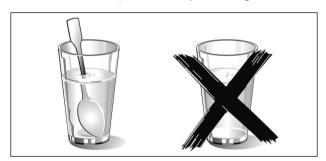

There is a risk of explosion.

Never heat drinks or other food in containers that have been tightly sealed.

Never overheat alcoholic drinks.

Baby food

There is a risk of burns.

Never heat baby food in closed containers. Always remove the lid or teat.

Stir or shake well after the food has been heated. This ensures even heat distribution.

Check the temperature of the food before it is given to the child.

Foods with a shell or skin

There is a risk of burns.

Never cook eggs in their shells. Never reheat hard-boiled eggs as they can explode even after microwave operation has ended. The same applies to shellfish and crustaceans.

Always prick the voke when baking or poaching eggs.

Always prick the skin of foodstuffs with solid peels or skins such as apples, tomatoes, potatoes and sausages before cooking to prevent the peel or skin from bursting.

Drying food

There is a risk of fire.

Never use the microwave to dry food.

Food with a low water content

There is a risk of fire.

Never defrost or heat food with a low water content, e.g. bread, at too high a power or for too long.

Cooking oil

There is a risk of fire.

Never use the microwave to heat cooking oil on its own.

Causes of damage

Water in the hot cooking compartment

Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage to the ceramic floor panel.

Cooling with the appliance door open

Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.

Heavily soiled seal

If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.

Operating the microwave without food

Do not switch on the microwave unless there is food in the cooking compartment. The appliance may be overloaded if it is switched on without any food inside. An exception to this rule is for brief testing of ovenware (see notes on ovenware).

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2002/96/EU on Waste Electrical and Electronic Equipment - WEEE.


The directive gives a framework for the collection and recycling of old appliances, which is valid across the EU.

Your new appliance

In this section, you will find information on

- the control panel
- the operating controls
- the accessories

Control panel

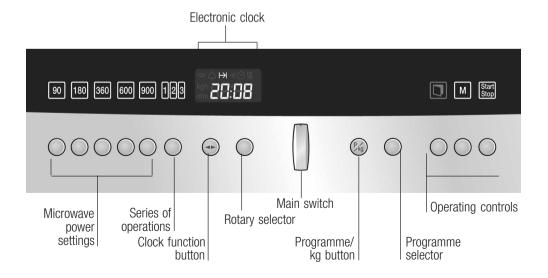

Operating controls

Operating controls	Use	
90	Selects 90 watt microwave power setting.	
180	Selects 180 watt microwave power setting.	
360	Selects 360 watt microwave power setting.	
600	Selects 600 watt microwave power setting.	
900	Selects 900 watt microwave power setting.	
123	Selects a series of operations.	
Clock function button	Selects the desired clock function.	
Rotary selector	Makes settings within a clock function.	
Main switch	Switches your appliance on and off.	
Pkg	Selects automatic programmes.	
Programme selector	Sets the programme or weight.	
	Opens the appliance door.	
M	Selects a memory function.	
Stort Story	Press briefly = starts/pauses operation Press and hold = cancels operation	
Microwave power settings and operating controls	When you press a button, the relevant item lights up in the display.	
Pop-out selectors	Rotary and programme selectors can be pushed in and popped out. Press the selector to push it in or pop	

it out.

Cooking compartment

Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

Notes

The cooking compartment remains cold during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.

Condensation may appear on the door panel, interior walls and floor. This is normal and does not affect microwave operation. Wipe away the condensation after cooking.

Before first use

This section explains all that you need to do before using your appliance for the first time to prepare food. First of all, please read the section entitled *Safety precautions*.

 How to set the clock once your appliance has been connected to the mains

Setting the clock

 $\mathcal{L}:\mathcal{D}\mathcal{D}$ and the $\triangleleft \triangleright \bigcirc$ symbols light up in the display.



- **1.** Set the current time using the rotary selector.
- Press the → clock function button. Your setting is then applied.

Changing the clock

To change the clock subsequently, press the ← clock function button repeatedly until the ▷ and ♡ symbols light up. Use the rotary selector to change the time.

Note

In order to reduce the energy consumption of your appliance in standby, you can switch off the clock display. Refer to the section entitled *Electronic clock*.

Cleaning the accessories before use

Before using the accessories, clean them thoroughly using a cloth and soapy water.

Switching the appliance on and off

Switch your microwave oven on and off using the main switch.

Switching on

Press the switch

The ① symbol lights up. Your appliance is ready for use.

Select a function:

- Buttons 90, 180, 360, 600 or 900 W for selecting a microwave power setting
- 123 button = series of operations
- M button = memory programme

Please refer to the individual sections for information on how to make the settings.

Switching off

Press the switch.

The appliance switches off. The ① symbol goes out.

The microwave

Microwaves are converted to heat in foodstuffs. You will find information about cookware and how to set the microwave

Note

In the *Tested for your in our cooking studio* section, you will find examples for defrosting, heating and cooking with the microwave oven.

Notes regarding overware

Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable ovenware

Metal ovenware is unsuitable.

Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

Ovenware test

Do not switch on the microwave unless there is food inside.

The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave: Heat the empty ovenware at maximum power for between 30 and 60 seconds. Check the temperature of the ovenware during this period. The ovenware should still be cold or warm to the touch. The ovenware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the button to set the desired microwave power.

90 watts	for defrosting delicate foods
180 watts	for defrosting and continued cooking
360 watts	for cooking meat and heating delicate foods
600 watts	for heating and cooking food
900 watts	for heating liquids

When you press a button, the selected power lights up.

Note

The microwave power can be set to 900 watts for a maximum of 30 minutes. A cooking time of 90 minutes is possible with all other power settings.

Setting the microwave

Example: microwave power 600 W, cooking time 10 minutes

- Press the main switch.
 The symbol lights up. The appliance is ready for use.
- Press the button for the microwave power setting you require.The selected power setting lights up and a
- 3. Set the cooking time using the rotary selector.

suggested cooking time is displayed.

Press the button.
 Operation begins. You will see the cooking time counting down.

The cooking time has elapsed

A signal sounds. Microwave operation has finished. You can stop the audible signal early by pressing the Lock function button. Switch off the main switch or make new settings.

Opening the appliance door during cooking

Operation is suspended. Press the 🖫 button after closing the door. Operation will then continue.

Changing the cooking time

This is possible at any time. Change the cooking time using the rotary selector.

Changing the microwave power setting

Press the button for the new microwave power setting. Use the rotary selector to set the cooking time and restart the microwave.

Cancelling operation

Press and hold the **button** for a few seconds and switch off the main switch.

Notes

When you switch on the appliance with the main button, the highest microwave power always appears in the display as a suggestion.

If you open the appliance door during cooking, the fan may continue to run.

1,2,3 series of operations

When setting a series of operations, you can set up to three microwave power settings and times.

In this section, you will learn how to set a series of operations.

Ovenware

Always use heat-resistant cookware which is suitable for microwaves.

Setting a series of operations

Prerequisite: press the main switch. Your appliance is ready for use.

- 1. Press the 1019 button.
 The 19 lights up for the first operation in the series.
- 2. Set the first microwave power and cooking time.
- 3. Press the Del button again.

 The lights up for the second operation in the series.
- **4.** Set the second microwave power and cooking time.
- 5. Press the 100 button again.

 The 10 lights up for the third operation in the series.
- **6.** Set the third microwave power and cooking time.
- 7. Press the button. Operation begins. The total cooking time is shown in the display and the currently activated operation is lit

The cooking time has elapsed

A signal sounds. The series of operations has finished. You can stop the audible signal early by pressing the Lock function button. Switch off the appliance or make new settings.

Opening the appliance door during operation

Operation is suspended. The cooling fan may continue to run. Press the button again after closing the door. Operation will then continue.

Changing the setting

Changes can only be made before operation begins. Press the 🕮 button to go to the desired setting and make the changes.

Cancelling operation

Press the illuminated button for the set microwave power setting. Make new settings or switch off the appliance.

Pausing operation

Press the \$\mathbb{m}\$ button briefly. Press the \$\mathbb{m}\$ button again to resume the operation.

Automatic programmes

The automatic programmes enable you to prepare food very easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can select from 7 programmes.

Setting the programme

Once you have selected a programme, make the settings as follows. Switch on the main switch.

Example in the diagram: programme 2 with 1 kg weight.

Press the ¼ button.
 The first programme number appears in the clock display.



2. Use the programme selector to select the required programme.



3. Press the % button again. \$\mathcal{U}\$.5\$\mathcal{U}\$ kg is suggested in the clock display.



4. Set the weight using the programme selector.



5. Press the button. The programme starts. The cooking time counts down in the display and the symbol appears.

The programme has finished

A signal sounds. The appliance stops heating. 00:00 is shown in the display.

Press the button and switch off the main switch.

You can stop the audible signal early by pressing the clock function button.

Changing the programme

Once the programme has started, you cannot change the programme number or weight.

Cancelling the programme

Press and hold the **button** for a few seconds and switch off the main switch. The appliance is switched off.

Notes on automatic programming

Take the food out of its packaging and weigh it. If it is not possible to enter the exact weight, you should round it up or down.

Place the food in a shallow, microwaveable dish, e.g. a glass or china plate. Do not cover the dish.

Place the food in the cold appliance.

A table of suitable food with weight ranges and accessories required can be found after the tips.

It is not possible to set a weight outside the weight range.

With many dishes, a signal sounds after a certain time. Turn or stir the food.

If possible, freeze and store food flat and in portions at $-18\,^{\circ}\mathrm{C}$.

Put the frozen food on a flat dish, e.g. a glass or porcelain plate.

After defrosting, allow the food to defrost for a further 10 to 30 minutes until it reaches room temperature.

Liquid will be produced when defrosting meat, poultry or fish. Drain off this liquid when turning and under no circumstances should it be used for other purposes or be allowed to come into contact with other foods.

Place beef, lamb and pork on the dish fatty-side down first.

Bread should only be defrosted in the required amounts, as it quickly becomes stale.

After turning, remove any minced meat that has already defrosted.

Whole poultry should be placed in the dish breast-side down and poultry pieces skin-side down.

Boiled potatoes: cut into pieces of a uniform size. Add 2 tablespoons of water per 100 g potatoes, and add salt to taste.

Jacket potatoes: use potatoes of equal size. Wash the potatoes and prick them all over. Place the wet potatoes in a dish. Do not add water.

Defrosting

Potatoes

ᅟ	п	\sim	\sim
п	ı	u	C

Rice foams a lot during cooking. Therefore, use a high-sided dish with a lid. Enter the uncooked weight (without liquid).

Add two to two and a half times the amount of liquid to the rice.

Do not use boil-in-the-bag rice.

Vegetables

Vegetables, fresh: cut into pieces of equal size. Add two tablespoons of water for every 100 g vegetables.

Vegetables, deep-frozen: this program is only suitable for blanched, not pre-cooked vegetables. The program is not suitable for frozen vegetables in cream sauce. Add 1 to 2 tablespoons of water per 100 g. Do not add water to spinach or red cabbage.

Standing time

Some dishes need some cooling down time in the cooking compartment after the program has ended.

Meal	Standing time
Vegetables	approx. 5 minutes
Potatoes	approx. 5 minutes. Strain the remaining water.
Rice	5-10 minutes

Observe the signals for stirring and turning.

Food	Programme number	Weight range	Cookware/ accessories
Defrosting			
Meat and poultry - Joints - Flat pieces of meat - Mince - Chicken, poulard, duck	P1	0.2 - 2.0 kg	Flat cookware without lid.
Fish Whole fish, fish fillet, fish cutlet	P2	0.1 - 1.0 kg	Flat cookware without lid.
Bread and cake* Bread, whole, round or long, bread in slices, sponge cake, yeast cake, fruit flan	P3	0.2 - 1.5 kg	Flat cookware without lid.

Food	Programme number	Weight range	Cookware/ accessories
Cooking			
Potatoes Boiled potatoes, jacket potatoes	P4	0.2 - 1.0 kg	Dish with lid.
Rice	P5	0.05 - 0.3 kg	High-sided dish with lid.
Fresh vegetables Cauliflower, broccoli, carrot, kohlrabi, leek, pepper, courgette	P6	0.15 - 1.0 kg	Dish with lid.
Frozen vegetables Cauliflower, broccoli, carrot, kohlrabi, red cabbage, spinach	P7	0.15 - 1.0 kg	Dish with lid.
Cream cakes, buttercream cakes, cakes with frosting, icing or gelatine are unsuitable.			

Memory

Memory gives you the option to store your own programmes and call them up again. You have two memories for storing programmes: "M1" and "M2". Memory is useful for dishes that you prepare particularly often.

In this section, you will read about

- How to store programmes in the memory
- How to start the memory function

Storing settings in the memory

Example: storing in memory location "M1".

- Press the main switch.
 The symbol lights up. Your appliance is ready for use.
- Press the button for the microwave power setting you require.The power setting lights up and a suggested
 - The power setting lights up and a suggested cooking time is displayed.
- **3.** Set the duration using the rotary selector.

4. Press and hold the M button for a few seconds. A signal sounds and "M1" appears in the clock display for the first memory location.

You can select "M1" or "M2" using the programme selector.

5. Press and hold the M button for a few seconds. A signal sounds. The setting is stored and can be started at any time.

Storing a different setting

Make the new settings and store. The old settings are overwritten.

Notes

The programmes which have been set remain stored even if there is a power cut.

You can also store the Series of operations.

Starting the memory function

The stored settings for your dish can be started at any time.

- Press the main switch.
 The symbol lights up. Your appliance is ready for use.
- 2. Press and hold the M button for a few seconds.
- **3.** Select "M1" or "M2" using the programme selector.
- 4. Press the start button.

The memory function starts. You can see the cooking time \rightarrow counting down in the display.

Note

Once the appliance has been started, you can no longer change the memory location.

The cooking time has elapsed

A signal sounds. The memory function has finished. You can stop the audible signal early by pressing the Lock function button. Press the main switch to switch off the appliance, or make new settings.

Pausing	Press the button or open the appliance door.
	Operation is suspended. After closing the door, press
	the 🖫 button again. Operation will then continue.

Press and hold the button for a few seconds. The setting is cancelled. Make new settings or switch the main switch off.

Electronic clock

Cancelling the setting

Your appliance has various clock functions. In this section, the following are explained:

- The clock display
- How to set the timer
- How to switch off your appliance automatically (cooking time)
- How to set or change the clock

Clock display



Clock function		Use
\bigcirc	Timer	You can use the timer as an egg timer or a kitchen timer.
		The appliance does not switch on or off automatically.
 →	Cooking time	The appliance switches off automatically after a set cooking time (e.g. <i>I</i> :30 hours).
9	Clock	Setting the clock.

Notes:

- Between 22:00 and 5:59, the clock display is dimmed if no settings are made or no clock functions are activated during this time.
- When using the timer \(\triangle \) and cooking time I\(\rightarrow \)I clock functions, a signal sounds and the corresponding symbol flashes when the set time has expired. To stop the audible signal early, press the clock function button.
- If required, you can correct the setting using the rotary selector.
- If you wish to cancel a setting, turn the set time down to $\square:\square\square$ and switch the appliance off.
- Press and hold the → clock function button for a few seconds.
 - The clock display switches off. If a clock function is activated, the corresponding symbol remains lit.
- Press and hold the → clock function button for a few seconds.
 - The clock display switches on.

Timer

off and on

Switching the clock display

1. Press the → clock function button repeatedly until the ✓▷ and △ symbols are lit.



2. Use the rotary selector to set the cooking time (e.g. $5: \square \square$ minutes).

The setting is automatically applied.

 A signal sounds once the time has elapsed. Press the → clock function button. The time reappears in the display.

Cooking time

Automatic switch-off after a set cooking time.

- 1. Set a microwave power setting.
- 2. Press the → clock function button repeatedly until the <> and I→I symbols are lit.



- Set the cooking time using the rotary selector (e.g. 1:30 hours).
 The setting is automatically applied.
- 4. Press the button.
 The set cooking time counts down.

The cooking time has elapsed

A signal sounds. The appliance stops heating. 0:00 is shown in the display

You can stop the audible signal early by pressing the *> clock function button.

Changing the cooking time

You may change the cooking time at any time.

Cancelling the cooking time

Using the rotary selector, turn the cooking time down to 0:00. The change is applied after a few seconds. The cooking time is cancelled.

Checking the time settings

If more than one time-setting option has been set, the corresponding symbols are lit up in the display. The $\triangleleft \triangleright$ symbol is next to the time-setting option that is currently activated.

To check the \triangle kitchen timer, $|\rightarrow|$ cooking time or \bigcirc clock, press the \multimap clock function button repeatedly until the $\triangleleft|\triangleright|$ symbol is next to the relevant time-setting option. The relevant value will appear for a few seconds in the clock display.

Setting the clock

1. Press the → clock function button repeatedly until the ✓▷ and ⊙ symbols are lit.



- 2. Set the current time using the rotary selector.
- Press the → clock function button.
 Your setting is then applied.

Changing the clock

For example, from summer to winter time.

Make the settings as described in steps 1 and 2.

Changing the basic settings

Your appliance has various basic settings that have been pre-set by the manufacturer. However, you can change these basic settings as required.

Basic settings

The table lists all of the basic settings and the options for making changes.

	Basic setting	Options	Explanation
c	Signal duration $Z = \text{medium} = 2 \text{ minutes}$	I = short = 10 seconds I = long = 5 minutes	Signal after the cooking time has elapsed
c2	Button tone: I = on	Button tone: $Z = \text{off}$	Confirmation tone when a button is pressed

Press the main switch.

The ① symbol lights up. The appliance is ready for use.

- 1. Press and hold the % button for several seconds. The first basic setting appears in the clock display.
- 2. Press the % button repeatedly until the required basic setting appears in the display.
- **3.** Use the programme selector to make the desired setting.
- Finally, press and hold the ¼ button for a few seconds.

All settings are applied.

You may change the settings at any time.

Care and cleaning

If carefully cleaned and taken care of, your microwave oven will remain fully functional and in a good condition for a long time to come. This section explains how to properly care for and clean your appliance.



Danger of short-circuiting.

Never use high-pressure cleaners or steam jets.



Risk of burning.

Do not clean the appliance immediately after switching it off. Allow the appliance to cool down.

Notes

Slight differences in the colours on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.

Shadows on the door panel which look like streaks are light reflections from the oven light.

Unpleasant smells, e.g. after preparing fish, can be removed quite easily. Add a few drops of lemon juice to a cup of water. Place a spoon in the container to prevent delayed boiling. Heat the water for 1 to 2 minutes at the maximum microwave power setting.

Cleaning agents

Surfaces are different and damage caused by using the wrong cleaning agent can be avoided by observing the information in the table below. Do not use:

- any caustic or abrasive cleaning agents.
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal.
- coarse scouring pads or cleaning sponges.

Rinse out new sponge cloths thoroughly before use.

Area	Cleaning agents
Appliance front	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth.
	Do not use metal or glass scrapers for cleaning.
Stainless steel	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove any flecks of limescale, grease, starch and egg white immediately. Corrosion can form under such marks. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist retailers.
Cooking compartment	Hot soapy water or a vinegar solution: Clean using a dish cloth and then dry with a soft cloth.
	For heavy soiling: Only use oven cleaner in a cold cooking compartment.
Cooking compartment made of stainless steel	Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These agents scratch the surface.
	Allow the interior surfaces to dry thoroughly.
Door panels	Glass cleaner: Clean with a dish cloth. Do not use metal or glass scrapers for cleaning.
Door seal Do not remove.	Hot soapy water: Clean with a dish cloth; do not scrub.
	Do not use metal or glass scrapers for cleaning.
Accessories	Hot soapy water: Soak and then clean with a dish cloth or a brush.

Faults and repairs

It is not always necessary to call the after-sales service. In some cases, you can take remedial action yourself. You will find some tips for troubleshooting in the following table.



Risk of electric shock.

- Work on the appliance electronics must only be carried out by an expert
- During work on the appliance electronics, the power supply to the appliance must be disconnected. Switch off the circuit breaker or take out the fuse in your household fuse box

Malfunction table

If one of your dishes does not turn out as you had hoped, please refer to the *Tested for you in our cooking studio* section. You will find many cooking tips and tricks there.

Malfunction	Possible cause	Remedial action/notes	
The appliance does not work.	The plug is not plugged into the Plug it in. mains.		
	Power cut.	Check whether the kitchen light switches on.	
	Blown fuse.	Look in the fuse box to make sure that the fuse for the appliance is OK.	
	Operating error.	Switch off the circuit breaker in the fuse box. After approx. 10 seconds switch it on again.	
The appliance is not in operation. A cooking time appears in the display.	The button was not pressed after the setting had been made.	Press the button or switch the appliance off using the main switch.	

Malfunction	Possible cause	Remedial action/notes
The microwave does not switch on.	The door is not properly closed.	Check whether leftover food or a foreign object is trapped in the door.
	The start button was not pressed.	Press the start button.
It takes longer than before for the food to heat up.	The microwave power setting is too low.	Select a higher microwave power setting.
	You have placed a larger amount of food than normal in the appliance.	Double the amount = almost double the cooking time.
A signal sounds. The two dots in the display are flashing.	The appliance is in demonstration mode.	1. Press the less button. 2. Press and hold the button for 3 seconds. The demonstration mode is deactivated.
The appliance switches off shortly after starting. Error message "H95" appears in the display.	The door is not properly closed.	Open the door again and close it properly, if this does not help, contact the after-sales service.
Error message "E723" appears in the display.	The door is not properly closed.	Open and close the appliance with the button.
Error message "Er1" appears in the display.	The temperature sensor is faulty.	Call the after-sales service.
Error message "Er11" appears in the display.	The buttons are dirty or the mechanics have jammed.	Press all buttons several times and, if this does not help, contact the after-sales service.
Error message "Er4" appears in the display.	There is extreme overheating (possibly a fire inside). Microwave power setting too high.	Do not open the door. Disconnect from the mains or switch off the fuse in the fuse box and allow to cool down.
Error message "Er18" appears in the display.	Technical fault.	Call the after-sales service.



Risk of electric shock.

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. You will find the address and telephone number of your nearest after-sales service point in the phone book. The listed after-sales service centres will also be pleased to give you the details of an after-sales service point near you.

E number and FD number

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service.

The rating plate bearing these numbers can be found on the right hand side after opening the appliance door.

You can make a note of the number of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no.	FD no.

After-sales service

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

Technical data

Power supply	220-240 V, 50 Hz
Maximum total connected load	1220 W
Microwave power setting	900 W (IEC 60705)
Microwave frequency	2,450 MHz
Fuse	min. 10 A

Dimensions (HxWxD) - appliance 38.2 x 59.4 x 31.9 cm

- cooking compartment

VDE approved	Yes
CE mark	Yes

22.0 x 35.0 x 27.0 cm

This appliance complies with standard EN 55011 or CISPR 11.

It is a group 2, class B product.

Group 2 means that microwaves are produced for the purpose of heating food.

Class B indicates that the appliance is suitable for domestic use.

Dishes tested for you in our cooking studio

Here you will find a selection of dishes and the ideal settings for them. We show you which microwave power setting is best for your dish and there are tips about cookware and preparation.

Notes

The values in the table always apply to dishes placed in a cold and empty cooking compartment. Only preheat the appliance if this is specified in the tables. Before use, remove any accessories from the cooking compartment that you will not be using.

The times specified in the tables are only guidelines. They depend on the quality and consistency of the food.

Use the accessories supplied. Additional accessories may be obtained from specialist retailers or from the after-sales service.

Always use an oven cloth or oven gloves when taking accessories or cookware out of the cooking compartment.

Defrosting, heating up and cooking with the microwave

The following tables provide you with numerous options and settings for the microwave.

The times specified in the tables are only guidelines. They may vary according to the ovenware used, the quality, temperature and consistency of the food.

Time ranges are often specified in the tables. Set the shortest time first and then extend the time if necessary.

It may be that you have different quantities from those specified in the tables.

A rule of thumb can be applied:

Double amount - just under double cooking time,

half amount – half the cooking time.

Stir or turn the food several times during the heating time. Check the temperature.

Defrosting

Place the frozen food in an open container on the cooking compartment floor.

Turn or stir the food once or twice during the defrosting time. Large pieces of food should be turned several times.

Liquid will be produced when defrosting meat, poultry or fish. Drain off this liquid when turning and under no circumstances should it be used for other purposes or be allowed to come into contact with other foods.

Leave defrosted items to stand at room temperature for a further 10 to 30 minutes so that the temperature can stabilise. The giblets can be removed from poultry at this point.

	Amount	Microwave setting in watts Time in minutes	Notes
Whole joints of meat e.g. beef, pork or veal (with or without bones)	800 g 1,000 g 1,500 g	180 W, 15 min. + 90 W, 15 - 25 min. 180 W, 20 min. + 90 W, 20 - 30 min. 180 W, 25 min. + 90 W, 25 - 35 min.	Turn several times.
Diced or sliced beef, pork and veal	200 g 500 g 800 g	180 W, 5 - 8 min. + 90 W, 5 - 10 min. 180 W, 8 - 11 min. + 90 W, 10 - 15 min. 180 W, 12 - 15 min. + 90 W, 15 - 20 min.	Separate the parts when turning.

	Amount	Microwave setting in watts Time in minutes	Notes
Mixed minced meat	200 g 500 g 800 g	180 W, 2 min. + 90 W, 5 - 10 min. 180 W, 6 min. + 90 W, 8 - 13 min. 180 W, 10 min. + 90 W, 15 - 20 min.	Freeze flat if possible. Turn several times during defrosting and remove meat which has already been defrosted.
Poultry or poultry portions	600 g 1,200 g	180 W, 8 min. + 90 W, 10 - 15 min. 180 W, 15 min. + 90 W, 20 - 25 min.	Turn several times.
Fish fillet, fish steak, slices	400 g	180 W, 5 min. + 90 W, 10 - 15 min.	Separate defrosted items.
Whole fish	300 g 600 g	180 W, 3 min. + 90 W, 10 - 15 min. 180 W, 8 min. + 90 W, 15 - 25 min.	Turn half way through.
Vegetables e.g. peas	300 g	180 W, 10 - 15 min.	
Fruit e.g. raspberries	300 g 500 g	180 W, 6 - 9 min. 180 W, 8 min. + 90 W, 5 - 10 min.	Stir carefully during defrosting and separate the defrosted parts.
Butter	125 g 250 g	180 W, 1 min. + 90 W, 1 - 2 min. 180 W, 1 min. + 90 W, 2 - 4 min.	Remove all the packaging.
Whole loaf	500 g 1,000 g	180 W, 8 min. + 90 W, 5 - 10 min. 180 W, 12 min. + 90 W, 10 - 20 min.	Turn half way through.
Dry cakes e.g. creaming method cakes	500 g 750 g	90 W, 10 - 15 min. 180 W, 5 min. + 90 W, 10 - 15 min.	Separate the pieces of cake when turning them. Only for cakes without icing, cream or crème pâtissière.
Juicy cakes e.g. fruit cake and quark cake	500 g 750 g	180 W, 5 min. + 90 W, 15 - 20 min. 180 W, 7 min. + 90 W, 15 - 20 min.	Only for cakes without icing or gelatine.

Defrosting, heating up or cooking frozen food

Always place the ovenware on the cooking compartment floor.

Always cover the food. If you do not have a suitable cover for your container, use a plate or special microwave foil.

Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware.

The different components of the meal may not require the same amount of time to heat up. Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the container.

Stir or turn the food two or three times during the defrosting, heating or cooking time.

After heating, allow the food to rest for a further 2 - 5 minutes until it reaches an even temperature.

This will help the food retain its own distinct taste, so it will require less seasoning.

	Amount	Microwave setting in watts Time in minutes	Notes
Menu, plated meal, ready-made meals in 2 to 3 parts	300-400g	600 W, 8 - 13 min.	
Soups	400 g	600 W, 8 - 12 min.	
Stews	500 g	600 W, 10 - 15 min.	
Meat in sauce e.g. goulash	500 g	600 W, 10 - 15 min.	Separate the pieces of meat when stirring.
Fish, e.g. fillets	400 g	600 W, 10 - 15 min.	You may add water, lemon juice or wine.
Bakes e.g. lasagne and cannelloni	450 g	600 W, 10 - 15 min.	
Side dishes rice and pasta	250 g 500 g	600 W, 3 - 7 min. 600 W, 8 - 12 min.	Add a little liquid.
Vegetables e.g. peas, broccoli and carrots	300 g 600 g	600 W, 7 - 11 min. 600 W, 14 - 17 min.	Add water to cover the base of the dish.
Creamed spinach	450 g	600 W, 10 - 15 min.	Cook without adding any water.

Heating food

Always place the ovenware on the cooking compartment floor.

Always cover the food. If you do not have a suitable cover for your container, use a plate or special microwave foil.

Take ready-to-eat meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up .



When heating liquids, always place a spoon in the container to prevent delayed boiling. When delayed boiling occurs, this means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid can suddenly boil over or spatter. This can cause injuries and burns.

Stir or turn the food several times during the heating time. Check the temperature.

After heating, allow the food to rest for a further 2 to 5 minutes until it reaches an even temperature.

	Amount	Microwave settings in watts Time in minutes	Notes
Menu, plated meal, ready-made meals in two to three parts		600 W, 5 - 8 min.	
Drinks	125 ml 200 ml 500 ml	900 W, ½ - 1 min. 900 W, 1 - 2 min. 900 W, 3 - 4 min.	Place a spoon in the container. Do not overheat alcoholic drinks. Check during heating.
Baby food e.g. baby's bottles	50 ml 100 ml 200 ml	360 W, ½ min. 360 W, ½ - 1 min. 360 W, 1 - 2 min.	Without the lid or teat. Always shake well after heating. You must check the temperature.
Soup 1 bowl 2 bowls	175 g 350 g	600 W, 1 - 2 min. 600 W, 2 - 3 min.	
Meat in sauce	500 g	600 W, 7 - 10 min.	Separate slices of meat.
Stew	400 g 800 g	600 W, 5 - 7 min. 600 W, 7 - 8 min.	
Vegetables 1 portion 2 portions	150 g 300 g	600 W, 2 - 3 min. 600 W, 3 - 5 min.	

Cooking food

Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the container.

Cook the food in covered ovenware. Food should be stirred or turned during cooking.

This will help the food retain its own distinct taste, so it will require less seasoning.

After cooking, allow the food to rest for a further 2 to 5 minutes until it reaches an even temperature.

	Quantity	Microwave power setting in W and duration in minutes	Notes
Whole chicken, fresh without giblets	1,200 g	600 W, 25 - 30 mins	Turn halfway through the cooking time.
Fish fillet, fresh	400 g	600 W, 7 - 12 mins	
Meat loaf	750 g	600 W, 25 - 30 mins	Add 6 tbsp water.
Vegetables, fresh	250 g 500 g	600 watts, 5 - 10 mins 600 watts, 10 - 15 mins	Cut vegetables into pieces of equal size. Add 1 - 2 tbsp water per 100 g of vegetables.
Side dishes, e.g. Potatoes	250 g 500 g 750 g	600 W, 8 - 10 mins 600 W, 10 - 15 mins 600 W, 15 - 22 mins	Cut potatoes into equal sized pieces. Add 1 - 2 tbsp water per 100 g, stir.
Rice	125 g 250 g	600 W, 4 - 6 + 180 W 14 - 16 mins 600 W, 6 - 8 + 180 W 14 - 16 mins	Add double the amount of liquid.
Desserts, e.g. Custard (instant)	500 ml	600 W, 5 - 7 mins	Uncovered dish Stir the custard thoroughly 2 to 3 times during cooking using an egg whisk.
Fruit, compote	500 g	600 W, 9 - 12 mins	3

Tips for microwave operation

No settings are given for specified amounts of food.	Increase or decrease the cooking times according to the following rule of thumb: Double the amount = almost double the time Half the amount = half the time
The food becomes too dry.	Set a shorter cooking time next time or select a lower microwave setting. Cover the food and add more liquid.
After the time has elapsed, the food is not defrosted, is not hot or is not cooked.	Set a longer time. Larger amounts and deeper dishes take longer to cook.
At the end of the cooking time, the food is overcooked on the outside but undercooked in the middle.	Stir the food during the cooking time and next time select a lower setting and a longer duration.
After defrosting, the poultry or meat is cooked on the outside but still frozen in the middle.	Next time select a lower microwave setting. In addition, turn large amounts of meat or poultry frequently when defrosting.

Test dishes in accordance with EN 60705

The quality and function of microwave appliances is tested by testing institutes using the following dishes.

Solo microwave cooking

Meal	Microwave power setting in W, cooking time in minutes	Notes
Custard, 1000 g	600 W, 11 mins + 180 W, 10-15 mins	Pyrex
Sponge, 475 g	600 watts, 7-9 mins	Pyrex, 22 cm diameter
Meat loaf, 900 g	600 watts, 25-30 mins	Pyrex cake tin, 28 cm long

Solo microwave defrosting

Meal	Microwave power setting in W, cooking time in minutes	Notes
Meat, 500 g	Programme 1, 500 g or 180 W, 7 mins + 90 W 10-15 mins	Pyrex, 24 cm diameter