



Built-in oven B46W74.0



en Table of contents

Safety precautions	4	Dough proving	21
Before installation	4	Yeast dough	21
Safety notes	4	Yoghurt	22
Causes of damage	4	Low-temperature cooking	22
Energy and environment tips	5	Using Low-temperature cooking.....	22
Saving energy.....	5	Table for Low-temperature cooking	22
Environmentally-friendly disposal.....	5	Tips and tricks.....	23
Your new appliance	5	Defrosting and warming up	23
Control panel	5	Defrosting with CircoTherm®.....	23
Operating modes.....	6	Defrost setting.....	23
Shelf positions.....	7	Plate warming.....	23
NeffLight®	7	Keep warm.....	23
Accessories	7	Sabbath programme.....	23
Before using the appliance for the first time	7	Preserve	24
Setting the language, time of day and date	7	Cleaning and care	24
Cleaning the appliance.....	8	Cleaning the appliance exterior.....	25
Operating the appliance	8	Cleaning the cooking compartment.....	25
Switching on the appliance.....	8	Self-cleaning surface.....	25
Changing the operating mode	9	EasyClean®	25
Changing the temperature	9	Removing and fitting the appliance door.....	26
Switching off the appliance.....	9	Cleaning the door panels.....	27
Rapid heat up	9	Cleaning the cooking compartment ceiling.....	28
Personal programmes	9	Cleaning the hook-in racks.....	28
Changing the basic settings	10	Cleaning the telescopic shelves	28
Automatic safety cut-out.....	11	Faults and repairs	28
Electronic clock	11	Replacing the oven light bulb	29
Clock functions.....	11	Changing halogen bulbs.....	29
Changing the time of day.....	11	Changing the door seal.....	30
Changing the date	12	After-sales service	30
Clock display	12	E number and FD number	30
Clock mode.....	12	Test dishes	31
Timer	12		
Cooking time	12		
End of operation	12		
Preset operation.....	12		
Correcting or cancelling settings.....	13		
Childproof lock	13		
Lock	13		
Permanent lock	13		
Baking	14		
Baking	14		
Baking on two or more levels	14		
Baking table for basic doughs/cake mixtures	14		
Bread-baking	15		
Baking table for dishes and pre-prepared frozen products	16		
Tips and tricks	16		
Roasting	17		
Open roasting.....	17		
Roasting with a lid	18		
Roasting table	18		
Tips and tricks.....	19		
Grilling	19		
Circo-roasting	19		
Radiant grilling	20		
Steam cooking	21		

Additional information on products, accessories, replacement parts and services can be found at **www.neff-international.com** and in the online shop **www.neff-eshop.com**

Safety precautions

Please read this instruction manual carefully. Please keep the instruction and installation manuals in a safe place. Please pass on these manuals to the new owner if you sell the appliance.

Before installation

Damage during transport

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.

Electrical connection

Only a licensed expert may connect the appliance. You will lose your warranty entitlement in the event of any damage caused by incorrect connection.

Safety notes

This appliance is intended for domestic use only. This appliance must only be used for food preparation.

Adults and children must not operate the appliance without supervision,

- if they are physically or mentally incapable of doing so or
- if they have insufficient knowledge or experience.

Never let children play with the appliance.

Hot cooking compartment

Risk of burns!

- Never touch the interior surfaces of the cooking compartment or the heating elements. Open the appliance door carefully. Hot steam may escape. Small children must be kept at a safe distance from the appliance.
- Never prepare food containing large quantities of drinks with a high alcohol content. Alcoholic vapours can catch fire in the cooking compartment. Only use small quantities of drinks with a high alcohol content and open the appliance door carefully.

Risk of fire!

- Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance. Pull out the mains plug or switch off the circuit breaker in the fuse box.
- Do not place greaseproof paper loosely over accessories during preheating. A draught is created when the appliance door is opened. The greaseproof paper may come into contact with the heating element and catch fire. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. The greaseproof paper must not protrude over the accessories.

Risk of short circuit!

Never trap connecting cables of electrical appliances in the hot appliance door. The cable insulation could melt.

Risk of scalding!

Never pour water into the hot cooking compartment. This will produce hot steam.

Hot accessories and ovenware

Risk of burns!

Never remove ovenware or accessories from the cooking compartment without an oven cloth or oven gloves.

Improper repairs

Risk of electric shock!

Improper repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is defective, pull out the mains plug or switch off the appliance at the circuit breaker in the fuse box. Call the after-sales service.

Causes of damage

Caution!

- Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor if a temperature of over 50 °C has been set. This will cause heat to accumulate. The baking and roasting times will no longer be correct and the enamel will be damaged.
- Water in a hot cooking compartment: do not pour water into the cooking compartment when it is hot. This will cause steam. The temperature change can cause damage to the enamel.
- Moist food: do not store moist food in the cooking compartment when it is closed for prolonged periods. This will damage the enamel.
- Fruit juice: when baking particularly juicy fruit pies, do not pack the baking tray too generously. Fruit juice dripping from the baking tray leaves stains that cannot be removed. If possible, use the deeper universal pan.
- Cooling with the appliance door open: only allow the cooking compartment to cool when it is closed. Even if the appliance door is only open a little, front panels of adjacent units could be damaged over time.
- Heavily soiled oven seal: if the oven seal is heavily soiled, the oven door will no longer close properly when the oven is in operation. The fronts of adjacent units could be damaged. Always keep the oven seal clean.
- Oven door as a bearing surface: do not stand or place objects on the oven door when it is open. Do not place ovenware or accessories on the oven door.
- Carrying the appliance: do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.

Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

Saving energy

Only preheat the oven if this is specified in the recipe or in the operating instruction tables.

Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.

Open the appliance door as little as possible during cooking, baking or roasting.

It is best to bake several cakes one after the other. The cooking compartment is still warm. This may reduce the baking time for the second cake.

For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.




This appliance complies with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). The directive gives a framework for the collection and recycling of old appliances, which is valid across the EU.

Your new appliance

In this section, you will find information on

- the control panel
- the NeffNavigator®
- the operating modes
- the shelf positions
- the NeffLight®
- accessories

Control panel

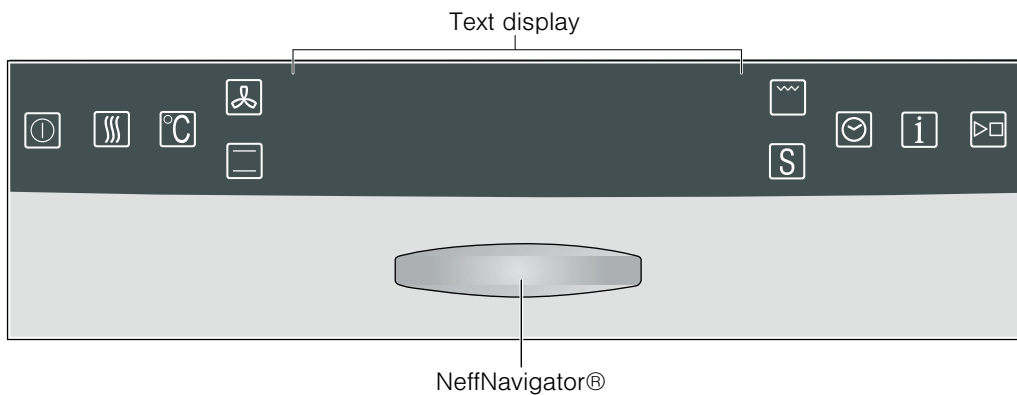


There are sensors under the buttons on the control panel. You do not need to press the buttons firmly, but just touch them lightly.

Button	Use
	On/off Switches the appliance on or off (see section: Operating the appliance)
	Rapid heat up Shortens the heat up time (see section: Rapid heat up)
	Temperature Changes the temperature (see section: Changing the temperature)
	CircoTherm® Direct selection button for the CircoTherm operating mode
	Top/bottom heat Direct selection button for the Top/bottom heat operating mode
	Full-surface grill Direct selection button for the full-surface grill
	Personal programmes Direction selection button for the personal programmes menu
	Electronic clock Sets the time of day and clock functions (see section: Electronic clock)
	Info button When the appliance is switched on: calls up information on the operating modes; displays the current temperature during heating up When the appliance is switched off: changes the settings in the basic settings menu (see section: Changing the basic settings)
	Start/Stop Starts, suspends or stops appliance operation

NeffNavigator®

You can use the NeffNavigator® to navigate in the three line text display and make settings. For this, the NeffNavigator® can be scrolled to the left or right, pushed up or down or pressed in.

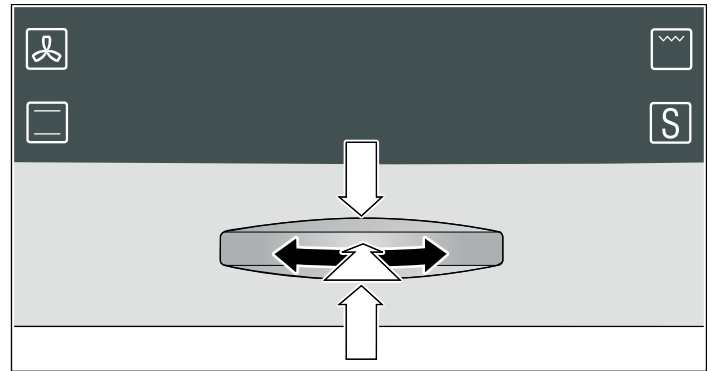


NeffNavigator®	Text display
push up from the bottom	Navigates up one line (e.g. from the second to the first line)
push down from the top	Navigates down one line (e.g. from the first to the second line), applies settings
scroll to the right	Changes the setting (e.g. increases the temperature or selects the operating mode)
scroll to the left	Changes the setting (e.g. reduces the temperature or selects the operating mode)
Press in	Switches setting ranges when the time and date are being set (e.g. from day to month) Confirms individual letters when naming recorded programmes Confirms that you are saving, changing or discarding recorded programmes

Operating modes

Here is an overview of the operating modes of your appliance.

Operating mode	Used for
CircoTherm	For baking and roasting on one or more levels
Defrost setting	for gently defrosting pieces of meat, bread and delicate baked items (e.g. cream gateau)
Top/bottom heat	For baking and roasting on one level. Especially suitable for cakes with moist toppings (e.g. cheesecake)
Circotherm intensive	for frozen convenience products and for meals that require a lot of heat from underneath (see section:Baking)
Bread-baking	For baked goods which need to be cooked at high temperatures
Bottom heat	For food and baked goods which should form a crust or which need more browning on the underside Only activate bottom heat for a short while at the end of the baking time.
Circo-roasting	for poultry and larger pieces of meat
Full-surface grill	for large amounts of small flat grill items (e.g. steaks, sausages)
Centre-area grill	for small amounts of small flat grill items (e.g. steaks, toast)
Low-temperature cooking	For tender pieces of meat, that are to be cooked medium/rare or medium
Steam cooking	for gentle preparation of vegetables, meat and fish
Dough proving	preparing yeast dough and yoghurt
Plate warming	for warming plates and serving dishes
Keep warm	for keeping food which has already been cooked warm
Sabbath programme	for keeping food which has already been cooked warm for up to three days
Easy Clean	makes cleaning the cooking compartment easier
Oven lighting	Provides assistance when maintaining and cleaning the cooking compartment

Shelf positions

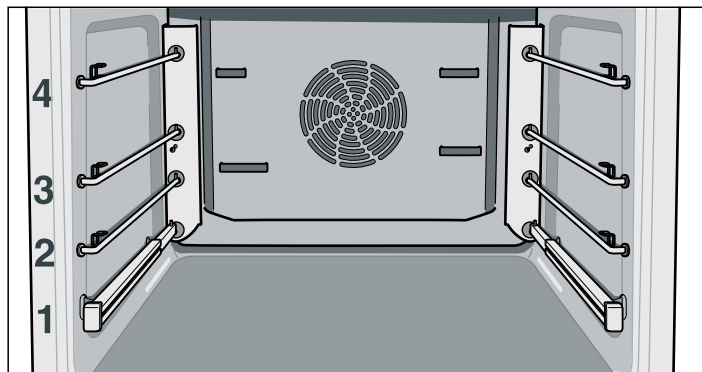

The cooking compartment has four shelf heights. The shelf positions are counted from the bottom up.

⚠ Risk of burns!

The telescopic shelves become hot when the appliance is in use. Take special care not to get burnt when they are pulled out.

The individual shelf units can be inserted into your preferred shelf positions. This simple insertion system allows flexible and quick handling when changing shelves.

Note: Do not use shelf height 2 when baking and roasting with CircoTherm®. This will adversely affect air circulation and your baking and roasting results will not be as good.

NeffLight®


Your appliance is equipped with a NeffLight®. The NeffLight® consists of two halogen bulbs and a system of mirrors which help to brightly illuminate the cooking compartment.

Door contact switch

The NeffLight® switches off when the appliance door is opened and on when the door is closed.

Saving energy

You can switch off the NeffLight® in order to save energy. To do this, you must move the door contact switch. This is located in the gap in between the appliance door and the bottom right of the kitchen unit.

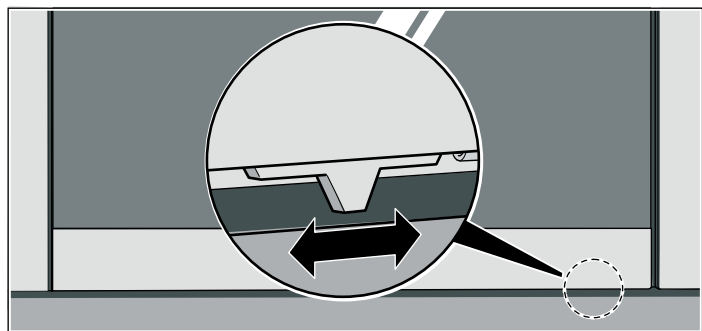

To switch off the NeffLight®:
Slide the door contact switch to the right.

To switch on the NeffLight®:
Slide the door contact switch to the left.

Accessories

The following accessories are supplied with your appliance:



Baking sheet, enameled
for baking tray bakes and small pastries



Flat wire rack
for roasting in a roasting dish and for grilling



Enameled universal pan
for baking moist cakes, roasting, grilling and collecting dripping liquids



Stepped wire rack with cut-out
for baking in baking dishes, roasting in roasting dishes and grilling

You can obtain further accessories from specialist retailers:

Accessories	Order no.
Mega system steamer	N8642X0
System steamer	N8642X0EU
Universal pan, enameled	Z1232X0
Universal pan, non-stick	Z1233X0
Universal pan with wire rack	Z1242X0
Glass pan	Z1262X0
Roasting pan, enameled	Z1272X0
Baking tray, aluminium	Z1332X0
Baking tray, enameled	Z1342X0
Baking tray, non-stick	Z1343X0
Pizza tray	Z1352X0
Wire rack, stepped with cut-out	Z1432X0
Wire rack, flat	Z1442X0
Roasting tray, enameled, two-piece	Z1512X0
VarioCLOU® telescopic shelf with full extension	Z1785X2
Bread-baking stone	Z1912X0
Universal roasting dish, enameled	Z9930X0

Note: The baking tray or universal pan may become distorted during use. This is caused by the considerable temperature differences acting on the accessories. This may happen when only a part of the accessory is covered with food or when frozen items such as pizza have been placed on the accessory.

Before using the appliance for the first time

In this section, you can read about

- how to set the language, date and time of day
- How to clean your appliance before using it for the first time

Setting the language, time of day and date

After connecting the electricity supply, you must set the language for the text display, the time of day and the date.


Setting the language

If the language you require is selected, push the NeffNavigator® down to apply the setting.

If the language you require is not selected, scroll the NeffNavigator® until your language is selected, and push down to apply the setting.

Setting the time of day


1. Scroll the NeffNavigator® in order to set the hours for the current time.

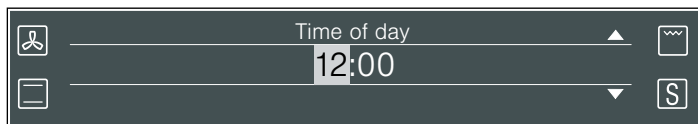

2. Push in the NeffNavigator® from the front in order to switch between hours and minutes.
3. Scroll the NeffNavigator® in order to set the minutes for the current time.
4. Push the NeffNavigator® down in order to apply the set time.

Setting the date

1. Scroll the NeffNavigator® in order to set the day.

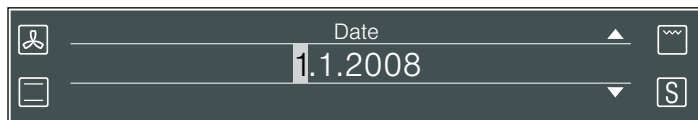

2. Push in the NeffNavigator® from the front in order to switch between day and month.

3. Scroll the NeffNavigator® in order to set the month.
4. Push in the NeffNavigator® from the front in order to switch between month and year.
5. Scroll the NeffNavigator® in order to set the year.
6. Push the NeffNavigator® down in order to apply the set date.

Changing the language, date or time of day

You can read how to change the language in the Changing the basic settings section. You can read how to change the time and date in the Electronic clock section.

Cleaning the appliance

Clean your appliance before using it for the first time.

1. Remove the accessories from the cooking compartment.
2. Completely remove any residual packaging (e.g. chips of polystyrene) from the cooking compartment.
3. Clean the accessories and cooking compartment with hot soapy water (see section: Cleaning and care).
4. Heat with Top/bottom heat at 240 °C for 60 minutes.
5. Afterwards, wipe the cooled cooking compartment with hot, soapy water.
6. Clean the outside of the appliance with a soft, damp cloth and soapy water.


Operating the appliance

In this section, you can read about

- how to switch your appliance on and off
- how to select an operating mode and temperature
- how you can change the basic settings
- when your appliance switches off automatically


Switching on the appliance

1. Press and hold the button for 1 second.
The appliance switches on. If no other actions are performed within 30 seconds, the appliance switches off automatically.
2. Scroll the NeffNavigator® until the desired operating mode is selected.

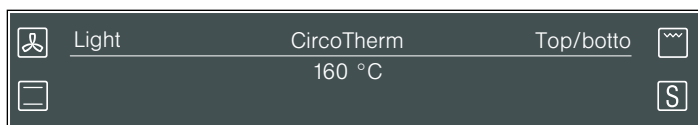

A default temperature appears in the text display.

3. Touch the button.
The appliance applies the default temperature and begins to heat up.
or
Press NeffNavigator® down and scroll in order to change the default temperature. Touch the button.

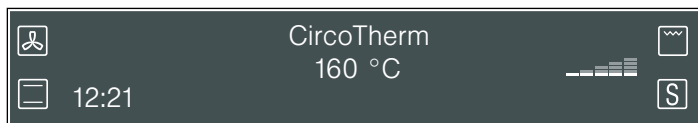

The appliance applies the changed temperature and begins to heat up.

Notes

- The EasyClean® and Dough proving operating modes can only be started when the appliance has cooled down.
- You can only start low-temperature cooking if neither “Residual heat high” nor “Residual heat low” is shown in the text display.
- Steam cooking can only be started when the cooking compartment has cooled down or “Residual heat low” appears in the text display.
- If no default temperature is displayed, the temperature of your selected operating mode is a fixed setting. You cannot change this temperature.


Operating mode	Default temperature in °C	Temperature range in °C
CircoTherm®	160	40 - 200
Defrost setting	Fixed setting	
Top/bottom heat	170	50 - 275
Circotherm intensive	220	50 - 275
Bread-baking	200	180 - 220
Bottom heat	200	50 - 225
Circo-roasting	170	50 - 250
Full-surface grill	220	50 - 275
Full-surface grill (intensive)*	Fixed setting	
Centre-area grill	180	50 - 275
Centre-area grill (intensive)*	Fixed setting	
Low-temperature cooking	Fixed setting	
Steam cooking	Fixed setting	
Dough proving	Fixed setting	
Plate warming	Fixed setting	

* Increase the temperature to over 275 °C until “Intensive” appears in the text display.

Operating mode	Default temperature in °C	Temperature range in °C
Keep warm	85	60 - 120
Sabbath programme	Fixed setting	
EasyClean®	Fixed setting	
Oven lighting	Fixed setting	

* Increase the temperature to over 275 °C until “Intensive” appears in the text display.

 Current temperature

While the oven is heating up, touch the  button. The current temperature is shown for as long as you touch the button.

If no current temperature appears in the text display, the appliance is heated up.

Heating indicator



 
 
 
The heating indicator displays the rising temperature in the cooking compartment.

- Temperature reached (fig. A)
- Appliance reheating (fig. B)




Changing the operating mode

Changing the operating mode while the appliance is in operation.


1. Touch the  button.
2. Scroll the NeffNavigator® in order to select the desired operating mode.
or
Touch the ,  or  button in order to select the operating mode directly.
3. Touch the  button.
The appliance applies the set operating mode.

Changing the temperature

 Changing the temperature while the appliance is in operation.


1. Touch the  button.
or
Press NeffNavigator® down.
2. Scroll the NeffNavigator® until the desired temperature is selected.
Your setting is accepted after 3 seconds.



 
Switching off the appliance

Press and hold the  button for 2 seconds.
The appliance is switched off.



 Rapid heat up

   You can reduce the preheat time for the CircoTherm® or Bread-baking operating modes if the set temperature is higher than 100° C.

Note: During rapid heat up, do not place any food in the cooking compartment while the  button is illuminated.

1. Set the operating mode and temperature, and start.
2. Touch the  button.
The  button lights up and “Rapid heat up” appears in the text display.
After reaching the set temperature, rapid heat up switches off. The  button and “Rapid heat up” go out in the text display and a signal sounds.

Cancelling rapid heat up

Touch the  button. The  button and “Rapid heat up” go out in the text display.

Personal programmes

The appliance offers you the option to record, save and play back personal programmes. In your personal programme, you can record the cooking process for elaborate food or your favourite dishes in programme steps, e.g. for lasagne:

 


Step 1: 50 minutes with CircoTherm® at 160 °C


Step 2: 5 minutes on full-surface grill at 275 °C

A maximum of 25 personal programmes can be saved.




Recording

Only begin the recording when the cooking compartment is cold. The recording must be at least one minute long in order for it to be saved.

1. Press and hold the  button for 1 second.
2. Touch the  button.
3. Push the NeffNavigator® down in order to go to the “Personal programmes” menu.
4. Push the NeffNavigator® down in order to select “New programme”.
5. Scroll the NeffNavigator® in order to select the operating mode for “New programme step 1” (e.g. CircoTherm), and push down.
6. Scroll the NeffNavigator® if necessary in order to change the default temperature for “Step 1” (e.g. 160 °C).
7. Touch the  button in order to apply the settings you have entered for Step 1.

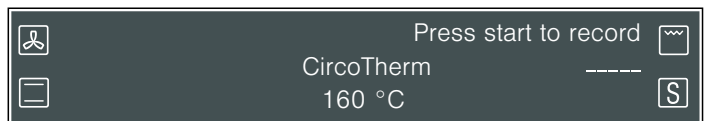




The oven begins to heat up.

   8. If the oven does not need to be preheated for your dish, touch the  button again while the oven is still cold.
or
If the oven should be preheated for your dish, do not touch the  button until the oven has heated up.
9. Once the desired cooking time has elapsed (e.g. 50 minutes), push the NeffNavigator® down, select “Add step” and push down again.
or
Touch the  button in order to end the recording of Step 1 (see: Ending and saving).

Add step 2

  1. Scroll the NeffNavigator® if necessary in order to change the operating mode for “Step 2” (e.g. Full-surface grill), and push down.
or
Push the NeffNavigator® down in order to retain the operating mode.

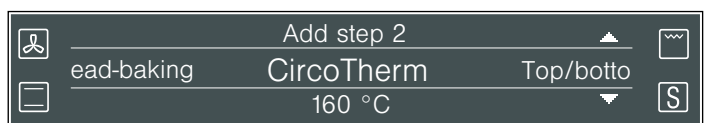

2. Scroll the NeffNavigator® if necessary in order to change the temperature for “Step 2”, and push down.
3. Touch the  button in order to apply the inputs for step 2 and start the operating mode.
4. Once the desired cooking time has elapsed, touch the  button in order to end the recording of Step 2 (see: Ending and saving).

Up to three steps can be recorded. For each step you can change both the operating mode and the temperature.


Ending and saving

1. Push the NeffNavigator® down in order to save the "Record New Programme".
2. Push the NeffNavigator® from the front in order to assign a name (e.g. Lasagne) to the recorded programme.







Assigning a name	NeffNavigator®
Select characters	Scroll
Apply characters	Press in
Correct characters	Push the NeffNavigator® down and select "Correct" Press the NeffNavigator® from the front to cancel a character

3. Push the NeffNavigator® down and select "Correct/Save"
4. Scroll the NeffNavigator® and select "Save".
5. Push in the NeffNavigator® in order to save the programme under the name entered.

Ending and discarding

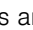
1. Touch the  button.
2. Scroll the NeffNavigator® and select "Discard".
3. Push the NeffNavigator® from the front.

Starting the programme


1. Press and hold the  button for 1 second.
2. Touch the  button.
3. Push the NeffNavigator® down in order to go to the "Personal programmes" menu.
4. Scroll the NeffNavigator® in order to select the saved programme.
5. Touch the  button.
"Please wait" appears on the display.
6. When "Insert food" appears in the text display, insert your food and press the  button.
The programme runs. If there are several programme steps, an audible signal sounds after each step.
7. Once the programme has elapsed, an audible signal sounds and the  symbol flashes. Press the  button.

Displaying and changing the programme steps

You can display and change the settings for the various programme steps.

1. Touch the  button.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® until the desired programme is selected, and push down.
4. Scroll the NeffNavigator® in order to select the step to be changed, and push down.
5. Scroll the NeffNavigator® and select "Temperature" or "Cooking time", and push down.
6. Scroll the NeffNavigator® in order to change the value.
7. Push the NeffNavigator® down to apply the change.

Deleting a personal programme



1. Touch the  button.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® in order to select "Delete programme", and push down.
4. Scroll the NeffNavigator® in order to select the programme to be deleted.

5. Press in the NeffNavigator® in order to confirm the deletion. Deleted programmes cannot be restored.

Changing the basic settings

Your appliance has various basic settings, which are preset at the factory. You can, however, change these basic settings as required.

The appliance must be switched off.

1. Touch the  button for 3 seconds in order to go to the Basic settings menu.
2. Scroll the NeffNavigator® in order to select the desired submenu, and push down.
3. Scroll the NeffNavigator® in order to select the desired basic setting, and push down.
4. Touch the  button in order to exit the Basic settings menu.



Sub menu	Basic setting
Language	Select language
Lock (see: Child-proof lock)	Unlocking the appliance
	Lock appliance
	Locking the appliance permanently
Audible signal	Off
	30 seconds
	2 minutes
	10 minutes
Display brightness	Setting: 1 - 5
Display contrast	Setting: 1 - 5
Favourites	Selection of preferred operating modes (see: Selecting favourites)
Operation	On/off + start/stop via Navigator (see: Setting operation of the on/off function and the start/stop function)
	On/off + start/stop via buttons (factory setting)
Start logo	Off
	1 second
	2 seconds
Rotation direction	3 seconds
	Inverted
	Normal

Selecting favourites

All operating modes except:

- CircoTherm
- Top/bottom heat
- Full-surface grill
- Personal programmes menu

can be selected or deselected as favourites. The appliance must be switched off.

1. Touch the  button for 3 seconds in order to go to the Basic settings menu.
2. Scroll the NeffNavigator® in order to select the "Favourites" submenu, and push down.
3. Scroll the NeffNavigator® in order to select an operating mode.
4. Push the NeffNavigator® down in order to mark either "Yes" or "No".
If you have marked "No", this operating mode no longer appears in the selection.
5. Touch the  button in order to exit the Basic settings menu.

Setting operation of the on/off function and the start/stop function

You can operate the on/off function and the start/stop function either via the buttons (⏻, ▶) or via the NeffNavigator®.

Operation via buttons

Function	On/off + start/stop via buttons
On/off	Button ⏻
Start/Stop	Button ▶

Operation via NeffNavigator®

Function	On/off + start/stop via Navigator
On, start/stop	Press NeffNavigator® for 1 second from the front
Off	Press NeffNavigator® for 2 seconds from the front

Automatic safety cut-out

The automatic safety cut-out is only activated if you have not made any settings on your appliance for a prolonged period.

The length of time after which your appliance switches itself off depends on the settings that you make.

“Safety cut-out” appears in the text display. Appliance operation is interrupted.

To deactivate, scroll the NeffNavigator® or touch a button.

Appliance operation is resumed.

Electronic clock


In this section, you can read about

- how to set the timer
- how to switch your appliance off automatically (cooking time and end of operation)
- how to switch your appliance on and off automatically (preset operation)
- how to set the time

Clock functions


 
 
Appliance switched off

The electronic clock offers you the following clock settings and functions:


Clock setting/ function	Use
 Timer	You can use the minute minder as an egg timer or a kitchen timer. The appliance does not switch on and off automatically.
Time of day	Changing the time of day
Date	Changing the date
Clock mode	Changes how the time of day is shown
Clock display	Displays or hides the time and date

Appliance switched on

The electronic clock offers you the following clock functions:


Clock function	Use
 Timer	You can use the minute minder as an egg timer or a kitchen timer. The appliance does not switch on or off automatically
 Cooking time	The appliances switches off automatically after a cooking time setting has elapsed (e.g. 1:30 hours)
 End of operation	The appliance switches off automatically at a set time (e.g. 12:30)
Preset operation	The appliance switches on and off automatically. Cooking time and end of operation have been combined.


Notes

- Between **22:00** and **5:59** the text display is darkened if you do not alter any settings during this time or if no clock function is activated.
- For each clock function a signal sounds once the settings have elapsed. To end the audible signal early, touch the  button.

Changing the time of day



Your appliance must be switched off.

1. Touch the  button.
2. Scroll the NeffNavigator® until “Time of day” is selected, and push down.

3. Scroll the NeffNavigator® in order to set the hours for the current time, and press it in to apply.
4. Scroll the NeffNavigator® in order to set the minutes for the current time, and push it down to apply.
5. Touch the  button.


Changing the date

Your appliance must be switched off.



1. Touch the  button.
2. Scroll the NeffNavigator® until “Date” is selected, and push down.
3. Scroll the NeffNavigator® in order to set the day and push it from the front to apply.
4. Scroll the NeffNavigator® in order to set the month and push it from the front to apply.
5. Scroll the NeffNavigator® in order to set the year and push it down to apply.
6. Touch the  button.

Clock display

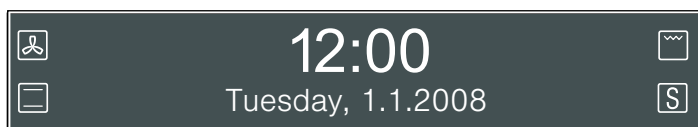You can select whether the time of day and date should be displayed or hidden.




 
Your appliance must be switched off.

1. Touch the  button.
2. Scroll the NeffNavigator® until “Clock display” is selected, and push down.
3. Scroll the NeffNavigator® in order to select either “On” or “Off”.
4. To apply the setting, push down, and touch the  button.

Clock mode




You can change how the time of day is shown.

Your appliance must be switched off.

1. Touch the  button.
2. Scroll the NeffNavigator® until “Clock mode” is selected, and push down.
3. Scroll the NeffNavigator® in order to select either “24h” or “12h (AM/PM)”.
4. To apply the setting, push down, and touch the  button.

 
Timer


You can use the minute minder as an egg timer or a kitchen timer. The appliance does not switch on and off automatically.


1. Touch the  button.
2. Scroll the NeffNavigator® until “Timer” is selected, and push down.
3. Scroll the NeffNavigator® in order to set the desired period (e.g. 5:00 minutes).
Wait 3 seconds or push the NeffNavigator® down to apply your setting.
Once the set period has elapsed, a signal sounds and the  symbol flashes.
4. Touch the  button.



Cooking time

The appliance switches off automatically after a set cooking time (e.g. 1:30 hours).

 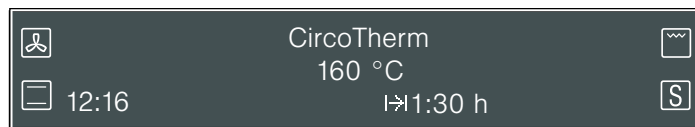1. Set the operating mode and temperature.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® until “Cooking time” is selected, and push down.
4. Scroll the NeffNavigator® in order to set the desired cooking time (e.g. 1:30 hours).
5. Touch the  button.





Once the cooking time has elapsed, a signal sounds, the  symbol flashes and the set operating mode is stopped.


6. Touch the  button.
7. Press and hold the  button for 2 seconds.



 End of operation

The appliance switches off automatically at a set time (e.g. 12:30).

 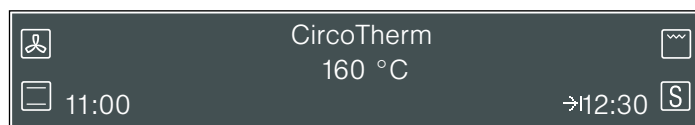1. Set the operating mode and temperature.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® in order to select “End of operation”, and push down.
4. Scroll the NeffNavigator® in order to set the desired end of operation (e.g. 12:30).
5. Touch the  button.



Once the end of operation is reached, a signal sounds, the  symbol flashes and the set operating mode is stopped.

6. Touch the  button.
7. Press and hold the  button for 2 seconds.

Preset operation


The appliance switches on automatically, then switches off automatically at the time preselected for the end of operation. To set this function, combine the cooking time and end of operation clock functions.

 

Bear in mind that food which spoils easily should not be left in the cooking compartment for too long.

1. Set the operating mode and temperature, and push down the NeffNavigator®.
2. Scroll the NeffNavigator® in order to select “Cooking time”, and push down.
3. Scroll the NeffNavigator® in order to set the desired cooking time (e.g. 1:30 hours).
Wait 3 seconds or push the NeffNavigator® down to apply your setting.
4. Scroll the NeffNavigator® in order to select “End of operation”.
5. Push down and scroll the NeffNavigator® in order to set the desired end of operation (e.g. 12:30).

6. Touch the  button.

The set operating mode does not start immediately. The cooking compartment light goes out. The appliance waits until the appropriate time to start (for example at 11:00).

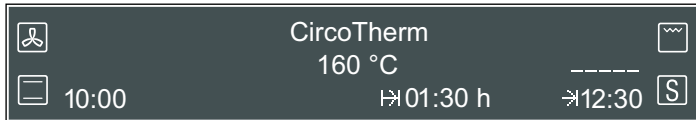

Once the end of operation is reached (for example at 12:30), a signal sounds, the  and  symbols flash and the set operating mode is stopped.

Childproof lock

In this section, you can read about


- how to lock your appliance
- how to lock your appliance permanently


Lock


 
Once it has been locked, the appliance cannot be switched on accidentally or by unauthorised users (e.g. by children playing).

To switch the appliance on again, you must unlock it. After appliance operation, the appliance is not automatically locked. Lock it again if necessary or activate the permanent lock.

 

 
Lock appliance

1. Switch off the appliance.
2. Touch the  button for 3 seconds in order to go to the Basic settings menu.
3. Scroll the NeffNavigator® until “Lock” is selected, and push down.

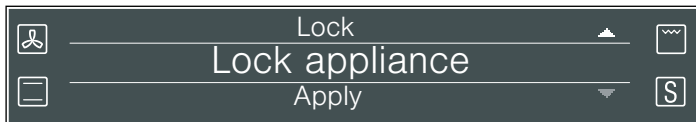

4. Scroll the NeffNavigator® until “Lock appliance” is selected, and push down.
5. Touch the  button.
The setting has been applied.  appears in the text display.


Unlocking the appliance

1. Press and hold the  button for 3 seconds until “Appliance locked” appears in the text display, and push down.
2. Scroll the NeffNavigator® until “Unlock appliance” is selected, and push down.
3. Touch the  button.
The setting has been applied.  goes out in the text display.

Permanent lock


Once it has been permanently locked, the appliance cannot be switched on accidentally or by unauthorised users (e.g. by children playing).

To switch the appliance on, you must interrupt the permanent lock briefly. After you have switched your appliance off, it locks again automatically.

 
7. Touch the  button.


8. Press and hold the  button for 2 seconds.

 

Correcting or cancelling settings

1. Touch the  button.
2. Scroll the NeffNavigator® in order to select the clock function, and push down.
3. Scroll the NeffNavigator® in order to correct the setting or
or
Scroll the NeffNavigator® and turn the setting back to “00:00” in order to cancel the setting.
Your setting is applied after 3 seconds.

 

 
 
Locking the appliance permanently

1. Switch off the appliance.
2. Touch the  button for 3 seconds in order to go to the Basic settings menu.
3. Scroll the NeffNavigator® until “Lock” is selected, and push down.
4. Scroll the NeffNavigator® until “Lock appliance permanently” is selected, and push down.

 
 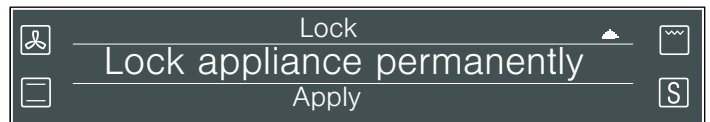



5. Touch the  button.
Your appliance will be locked after 30 seconds.  appears in the text display.

Interrupting automatic block

1. Press and hold the  button for 3 seconds until “Appliance permanently locked” appears in the text display.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® until “Unlock appliance” is selected, and push down.
4. Scroll the NeffNavigator® until “Once” is selected, and push down.
“Appliance unlocked once” appears in the text display.
5. Touch the  button.
automatic block is suspended.  goes out in the text display.
6. Switch on the appliance within 30 seconds.
The automatic block is activated again 30 seconds after the appliance is switched off.  appears in the text display.


Unlocking the appliance permanently

1. Press and hold the  button for 3 seconds until “Appliance permanently locked” appears in the text display.
2. Press NeffNavigator® down.
3. Scroll the NeffNavigator® until “Unlock appliance” is selected, and push down.
4. Scroll the NeffNavigator® until “Permanently” is selected, and push down.
“Unlock appliance” appears in the text display. The appliance is permanently unlocked.  goes out in the text display.
5. Touch the  button.

Baking

In this section, you will find information on


- Baking tins and trays
- Baking on two or more levels
- Baking basic doughs and cake mixtures (baking table)
- Baking pre-prepared frozen products and freshly prepared meals (baking table)
- Tips and tricks for baking

Note: Do not use shelf height 2 when baking with  CircoTherm®. The air circulation would be impaired and this will have a negative effect on your baking.

Baking

In this section, you will find information on

- Baking tins and trays
- Baking on two or more levels
- Baking basic doughs and cake mixtures (baking table)
- Baking pre-prepared frozen products and freshly prepared meals (baking table)
- Tips and tricks for baking

Note: Do not use shelf height 2 when baking with  CircoTherm®. The air circulation would be impaired and this will have a negative effect on your baking.


Baking tins

We recommend that you use dark-coloured metal baking tins.

Tinplate and glass dishes increase the baking time required and the cake will not brown evenly. If you wish to bake using tinplate tins and Top/bottom heat, you should use shelf position 1.

If you wish to use silicone baking tins, use the information and recipes provided by the manufacturer as a guide. Silicone baking tins are often smaller than normal tins. The amount of mixture and recipe instructions may differ.

If you are baking on one level with CircoTherm®, always place a loaf tin diagonally (fig. A) and a round tin in the centre of the stepped wire rack (fig. B).

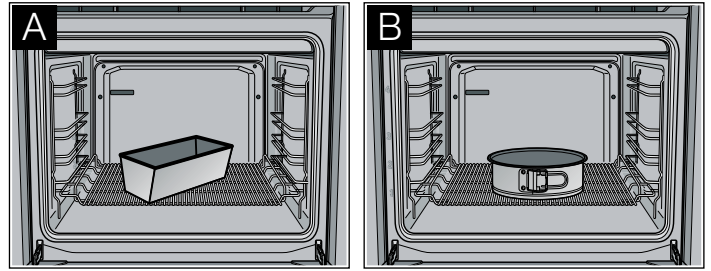

Baking trays

We recommend that you only use original baking trays, as these have been optimally designed for the cooking compartment and the operating modes.

Always slide the baking tray or the universal pan in carefully as far as it will go and make sure that the sloping edge is facing the appliance door.

Use the universal pan if you are baking moist cakes, so that the cooking compartment does not get dirty.

Baking on two or more levels

If you are baking on several levels, you should preferably use baking trays and insert these at the same time.

Bear in mind that your items may brown at different rates on each level. The items on the top level will brown more quickly and can be taken out earlier.

If you wish to bake on two levels using a baking tray and a universal pan, you should insert the baking tray at shelf height 3 and the universal pan at shelf height 1.

Baking table for basic doughs/cake mixtures

The values in the table are guidelines and apply to enamelled baking trays and dark baking tins. The values may vary depending on the type and amount of dough/mixture and on the baking tin.

We recommend that you set the lower of the specified temperatures the first time. Lower temperatures will generally allow more even browning.

If you are baking according to your own recipe, use similar recipes in the table as a guide.

Observe the notes in the table about preheating.

Basic dough	CircoTherm®			Top/bottom heat	
	Shelf position	Temperature in °C	Baking time in minutes	Shelf position	Temperature in °C
Rich sponge mixture					
Tray bakes with topping	1	160 - 170	30 - 45	3	170 - 180
	1 + 3	150 - 160	40 - 50	-	-
Springform cake tin/loaf tin	1	150 - 160	60 - 80	2	160 - 170
flan tin	1	160 - 170	20 - 35	2	170 - 180
Shortcrust pastry					
Tray bake with dry topping, e.g. crumble	1	160 - 170	45 - 70	3	180 - 190
	1 + 3	160 - 170	60 - 80	-	-
Tray bake with moist topping, e.g. egg custard	1	150 - 170	60 - 80	-	-
Springform cake tin, e.g. sponge base cheesecake	1	150 - 160	50 - 90	2	160 - 180
flan tin	1	150 - 160*	20 - 35	2	170 - 180*
Sponge mixture					
Swiss roll	1	180 - 190*	10 - 15	3	190 - 200*

* Preheat oven

Basic dough	CircoTherm®			Top/bottom heat	
	Shelf position	Temperature in °C	Baking time in minutes	Shelf position	Temperature in °C
flan tin	1	160 - 170	20 - 30	2	160 - 170
Sponge (6 eggs)	1	150 - 160	30 - 45	2	160 - 170
Sponge (3 eggs)	1	150 - 160*	20 - 30	2	160 - 170*
Yeast dough					
Tray bake with dry topping, e.g. crumble	1	160 - 170	40 - 60	3	170 - 180
	1 + 3	160 - 170	45 - 65	-	-
Savarin/plaited loaf (500 g)	1	160 - 170	30 - 40	3	170 - 180
Springform cake tin	1	160 - 170	30 - 40	2	160 - 170
Ring cake tin	1	160 - 170	35 - 45	2	170 - 180

* Preheat oven

Small baked items	CircoTherm®			Top/bottom heat	
	Shelf position	Temperature in °C	Baking time in minutes	Shelf position	Temperature in °C
Yeast dough	1	160 - 170	20 - 25	3	170 - 180
	1 + 3	160 - 170	20 - 30	-	-
Meringue mixture	1	80	100 - 130	3	80
	1 + 3	80	150 - 170	-	-
Puff pastry	1	190 - 200*	20 - 30	3	200 - 210*
	1 + 3	190 - 200*	25 - 35	-	-
Choux pastry	1	190 - 200*	25 - 35	3	200 - 210*
	1 + 3	190 - 200*	30 - 40	-	-
Sponge mixture, e.g. muffins	1	150 - 160*	25 - 35	3	160 - 170*
	1 + 3	150 - 160*	25 - 35	-	-
Shortcrust pastry, e.g. butter biscuits	1	140 - 150*	15 - 20	3	140 - 150*
	1 + 3	130 - 140*	20 - 30	-	-
	1 + 3+ 4	130 - 140*	20 - 35	-	-

* Preheat oven

Bread-baking

The information in the table contains only guide values. It may vary depending on the type and amount of dough.

The values for bread dough apply to both dough placed on a tray and dough placed in a loaf tin.

You should set the lower of the specified temperatures the first time. Lower temperatures will generally allow more even browning.

Please note the information about preheating in the table.

Bread	Bread-baking			Top/bottom heat	
	Shelf position	Temperature in °C	Baking time in minutes	Shelf position	Temperature in °C
Bread rolls	1	220*	10 - 20	2	240*
Flatbread	1	220*	15 - 20	2	240*
Pasty	1	180*	30 - 40	3	200*
Bread dough 750 - 1,000 g					
Final baking	1	220*	35 - 40	2	220*
Bread dough 1,000 - 1,250 g					
Initial baking	1	220*	10 - 15	2	240*
Final baking	1	180	40 - 45	2	200
Bread dough 1,250 - 1,500 g					
Initial baking	1	220*	10 - 15	2	240*
Final baking	1	180	40 - 50	2	200

* Preheat oven

Baking table for dishes and pre-prepared frozen products

Circotherm intensive is particularly suitable for freshly prepared dishes that require a lot of heat from underneath and for frozen convenience products.

Please note the following points:

- Use the universal pan for frozen products
- Line the universal pan with greaseproof paper or with special grease absorbing paper if you are baking frozen potato products
- Only use greaseproof paper that is suitable for the selected temperature
- Spread chips out in a single layer
- Turn frozen potato products half way through the baking time
- Only season frozen potato products after they have finished baking

- Leave a little space between the dough when baking bread rolls. Do not place too many on a baking tray
- Do not use frozen products with freezer burn
- Do not use frozen products that are heavily frosted
- Follow the manufacturer's instructions.

The values in the table are guidelines and apply to enamelled baking trays. The values may vary depending on the type and amount of dough/mixture and on the baking tin.

We recommend that you set the lower of the specified temperatures the first time. Lower temperatures will generally allow more even browning.

If you are baking according to your own recipe, use similar recipes in the table as a guide.

Notes

- Please note the information about preheating in the table.
- You cannot bake on more than one level with Circotherm intensive

Fresh meals	Bread-baking			Circotherm intensive	
	Shelf position	Temperature in °C	Baking time in minutes	Shelf position	Temperature in °C
Pizza, fresh	1	190 - 210*	20 - 30	1	180 - 200
	1 + 3	180 - 190	35 - 45	-	-
Tarte flambée	1	190 - 210*	15 - 25	1	200 - 220
Quiche	1	180 - 200	50 - 60	1	170 - 190
Tart	1	180 - 200*	30 - 45	1	190 - 210
Swiss flan	1	180 - 190*	45 - 55	1	170 - 190
Potato gratin made from raw potatoes	1	180 - 200	50 - 60	1	170 - 190
Strudel, frozen	1	190 - 210	35 - 45	1	180 - 200
Pizza, frozen					
Pizza with thin base	1	180 - 200	10 - 20	1	200 - 220
	1 + 3	180 - 190	20 - 30	-	-
Pizza with deep-pan base	1	180 - 200	20 - 30	1	180 - 200
	1 + 3	180 - 190	25 - 35	-	-
Potato products					
Chips	1	190 - 210	15 - 25	1	210 - 230
	1 + 3	180 - 190	25 - 35	-	-
Croquettes	1	180 - 200	15 - 25	1	200 - 220
Rösti (stuffed potato pockets)	1	180 - 200	15 - 25	1	200 - 220
Baked goods					
Part-baked bread rolls/baguettes	1	180 - 200	5 - 15	1	180 - 200
Bread rolls/baguette, frozen	1	180 - 200	5 - 15	1	200 - 220
Bread rolls/baguette, part baked, frozen	1	180 - 200	10 - 20	1	180 - 200
Pretzel dough, frozen	1	180 - 190	15 - 20	1	170 - 190
Processed portions, frozen					
Fish fingers	1	180 - 200	15 - 20	1	190 - 210
Veggie burgers	1	180 - 200	20 - 30	1	200 - 220

* Preheat oven

Tips and tricks

The cake is too light in colour

Check the shelf height.

Check whether you have used the bakeware that we have recommended.

Place your tin on the wire rack and not on the baking tray.

If the shelf height and the bakeware are correct, then you should either extend the baking time or increase the temperature.

The cake is too dark	<p>Check the shelf height.</p> <p>If the shelf height is correct, you should either shorten the baking time or reduce the temperature.</p>
The cake is unevenly browned in the baking tin	<p>Check the shelf height.</p> <p>Check the temperature.</p> <p>Make sure that your baking tin is not placed directly in front of the air outlets in the rear wall of the cooking compartment.</p> <p>Check that the baking tin is in the correct position on the wire rack.</p>
The cake on the baking tray is unevenly browned	<p>Check the shelf height.</p> <p>Check the temperature.</p> <p>If you are baking on several levels, take out the baking trays at different times.</p> <p>When baking small items, make sure that they are the same size and thickness.</p>
The cake is too dry	Set a slightly higher temperature and a slightly shorter baking time.
The cake is too moist in the centre	<p>Set a slightly lower temperature.</p> <p>Note: Higher temperatures do not necessarily mean shorter baking times (cooked on the outside, but not on the inside). Select a longer baking time and allow the cake mixture to prove for longer. Add less liquid to the mixture.</p>
With very moist cakes, e.g. fruit flans, a lot of steam is generated in the cooking compartment which condenses on the appliance door.	If you briefly and carefully open the appliance door (once or twice, or more often for longer baking times), you can let the steam out of the cooking compartment and considerably lessen the condensation.
The cake collapses when you take it out of the oven	<p>Use less liquid for the mixture.</p> <p>Set a longer baking time or a slightly lower temperature.</p>
The specified baking time is not correct	For small items, check the quantity on the baking tray. The items must not be touching each other.
Frozen products are not browned evenly after baking	Check whether the frozen product is unevenly browned before baking. This uneven browning will remain after the baking time.
Frozen products are not browned, not crispy or the specified time is not correct	Remove ice from frozen products before baking. Do not use frozen products that are heavily frosted
Saving energy	<p>Only preheat the appliance when it is specified in the baking table that you should do so.</p> <p>Use dark baking tins as these absorb the heat better.</p> <p>Make use of the residual heat with longer baking times and switch the oven off 5 - 10 minutes before the end of the baking time.</p>


Roasting

In this section, you will find information on

- roasting in general
- roasting without a lid
- roasting with a lid
- roasting meat, poultry and fish (roasting table)
- tips and tricks for roasting


⚠ There is a risk of injury if you use roasting dishes that are not heat-resistant!

Only use roasting dishes that are marked as being suitable for use in the oven.

Do not use shelf height 2 when roasting with  CircoTherm®. The air circulation would be impaired and this will have a negative effect on your roast.

Open roasting

For open roasting, a roasting dish without a lid is used.

When you are roasting with  Top/bottom heat, you should turn the roast approximately half to two thirds of the way through the roasting time.

Roasting in the universal pan

Juices escape from the roasting meat and are collected in the universal pan. You can use these juices as the basis for a tasty gravy.

Deglaze the pan of the juices with hot water, stock, wine or similar. Bring to the boil, thicken with cornflour, season and pass through a sieve if necessary.

You can also cook side dishes (e.g. vegetables) at the same time as roasting meat in the universal pan.

For smaller joints, you can use a smaller roasting dish instead of the universal pan. Place this directly on the wire rack.

Roasting in the universal pan with stepped wire rack

Place the stepped wire rack on the universal pan and slide them in together at the same shelf height.

For fatty meat and poultry, add 1/8 to 1/4 litre water to the universal pan, depending on the size and type of the joint.

While the meat is roasting, the liquid in the roasting dish will evaporate. Pour in more hot water if required.

Roasting in the universal pan with roasting sheet

The roasting sheet reduces dirt in the cooking compartment. Place the roasting sheet in the universal pan and slide them in together at the same shelf height.

Dripping fat and meat juices are caught in the universal pan.

Roasting with a lid

This method is particularly suitable for pot roasts.

Place the joint in the roasting dish. Add water, wine, vinegar or similar for the braising liquid. Place the lid on the dish, place the dish on the wire rack and slide it into the cooking compartment.

While the meat is roasting, the liquid in the roasting dish will evaporate. Pour in more hot water if required.

Roasting table

The roasting time and temperature depend on the size, height, type and quality of the item.

As a general rule: the larger the item, the lower the temperature and the longer the roasting time.



Coat lean meat with fat or oil as required and cover it with strips of bacon.

The information in the table is a guideline, and relates to items cooked without a lid. The values may vary depending on the type and quantity of the meat and on the roasting dish.

You should set the lower of the specified temperatures the first time. Lower temperatures will generally allow more even browning.

At the end of the roasting time, switch the oven off and leave the roast to rest for approximately 10 minutes in the cooking compartment with the door closed. The recommended rest time is not included in the given roasting times.



The information in the table is for food placed in a cold oven and for meat/fish taken directly from the refrigerator.

Item	CircoTherm® 			Top/bottom heat 	
	Shelf height	Temperature in °C	Roasting time in minutes	Shelf height	Temperature in °C
Meat loaf made from 500 g meat	1	170 - 180	60 - 70	2	200 - 210
Pork					
Smoked pork	1	160 - 170	70 - 80	2	190 - 210
Fillet, medium (400 g)	1	170 - 180	30 - 45	3	200 - 230
Roast with rind (1.5 kg)	1	160 - 170	120 - 150	2	200 - 220
Roast with rind (2.5 kg)	1	160 - 170	150 - 180	2	190 - 210
Joint, marbled, without rind, e.g. neck (1.5 kg)	1	160 - 170	100 - 130	2	190 - 210
Joint, marbled, without rind, e.g. neck (2.5 kg)	1	160 - 170	120 - 150	2	180 - 200
Roast, lean (1 kg)	1	170 - 180	70 - 90	2	180 - 200
Roast, lean (2 kg)	1	170 - 180	80 - 100	2	180 - 200
Beef					
Fillet, medium (1 kg)	1	180 - 190	45 - 65	2	200 - 220
Sirloin, medium rare (1.5 kg)	1	180 - 190	30 - 45	2	200 - 220
Pot roast (1.5 kg)**	1	170 - 180	120 - 150	2	200 - 220
Pot roast (2.5 kg)**	1	170 - 180	150 - 180	2	190 - 210
Veal					
Joint/breast of veal (1.5 kg)	1	160 - 170	90 - 120	2	180 - 200
Joint/breast of veal (2.5 kg)	1	160 - 170	120 - 150	2	170 - 190
Knuckle	1	160 - 170	100 - 130	2	190 - 210
Lamb					
Leg, boned	1	180 - 190	70 - 110	2	200 - 220
Loin on the bone	1	180 - 190*	40 - 50	2	200 - 220*
Loin, boned	1	180 - 190*	30 - 40	2	200 - 220*
Poultry					
Chicken, whole (1 kg)	1	170 - 180	60 - 70	2	200 - 220
Duck, whole (2 - 3 kg)	1	150 - 160	90 - 120	2	190 - 210
Goose, whole (3 - 4 kg)	1	150 - 160	130 - 180	2***	180 - 200
Game					
Joint/leg of roe venison, boned (1.5 kg)	1	160 - 170	90 - 120	2	190 - 210
Wild boar joint (1.5 kg)	1	160 - 170	120 - 140	2	190 - 210

* Preheat oven

** Roast pot roasts with a lid on the roasting dish

*** Use shelf height 1 for tall items

Item	CircoTherm® 			Top/bottom heat 	
	Shelf height	Temperature in °C	Roasting time in minutes	Shelf height	Temperature in °C
Joint of venison (1.5 kg)	1	160 - 170	100 - 120	2	190 - 210
Rabbit	1	160 - 170	70 - 80	2	180 - 200
Fish					
Fish, whole (300 g)	1	160 - 170	30 - 40	2	180 - 200
Fish, whole (700 g)	1	160 - 170	40 - 50	2	180 - 200

* Preheat oven

** Roast pot roasts with a lid on the roasting dish

*** Use shelf height 1 for tall items

Tips and tricks

Crust too thick and/or roast too dry	Reduce the temperature or shorten the roasting time. Check the shelf height.
Crust too thin	Increase the temperature or switch on the grill briefly at the end of the roasting time.
The meat is not cooked right through	Remove any accessories that are not required from the cooking compartment. Increase the roasting time. Check the core temperature of the joint using a meat thermometer.
Steam in the cooking compartment is condensing on the appliance door	The steam dries during the course of the cooking. If there is an excessive volume of steam, you can carefully open the door briefly to dissipate the steam more quickly.

Grilling

In this section, you will find information on

- Grilling in general
- Circo-roasting
- Radiant grilling (Full-surface and Centre-area grill)

Caution!

Material damage due to effect of heat: The temperature generated in the cooking compartment is very high. Keep the appliance door closed when using the grill. Never grill with the appliance door open.

Notes

- Always use the wire rack and the universal pan when grilling
- Place the wire rack in the universal pan and slide them both in at the height specified in the grilling table
- Always place the food to be grilled in the centre of the wire rack
- If you are grilling more than one piece of meat, make sure that they are the same sort of meat and that they are of similar thickness and weight.

Circo-roasting

The Circo-roasting operating mode is particularly suitable for poultry or meat (e.g. roast pork with crackling) that is to be crispy.

Turn large items of food after approximately half to two-thirds of the grilling time.

Pierce duck and goose skin under the wings and legs to allow the fat to escape.

Depending on the food you are cooking, the cooking compartment may become very dirty when you cook food on the wire rack using Circo-roasting. You should therefore clean the cooking compartment after every use so that the dirt does not become burnt on.

The information in the table are guidelines and apply to the enamelled universal pan with wire rack. The values may vary depending on the type and amount of food to be grilled.

You should set the lower of the specified temperatures the first time. Lower temperatures will generally allow more even browning.

At the end of the cooking time, switch the grill off and leave the food to stand for approximately 10 minutes in the cooking compartment with the door closed. The recommended standing time is not included in the grilling times specified.

The values refer to food placed in the oven when it is cold and for meat taken directly from the refrigerator.


Grilled food	Shelf height	Temperature in °C	Grilling time in minutes
Sirloin, medium (1.5 kg)	2	220 - 240	40 - 50
Leg of lamb, boned, medium	2	170 - 190	120 - 150
Pork			
Joint of pork with rind	2	170 - 190	140 - 160
Pork knuckle	2	180 - 200	120 - 150

Grilled food	Shelf height	Temperature in °C	Grilling time in minutes
Poultry (unstuffed)			
Chicken halves (1 or 2 halves)	2	210 - 230	40 - 50
Chicken, whole (1 or 2 chickens)	2	200 - 220	60 - 80
Duck, whole (2 - 3 kg)	2	180 - 200	90 - 120
Duck breast	3	230 - 250	30 - 45
Goose, whole (3 - 4 kg)	1	150 - 170	130 - 160
Goose breast	2	160 - 180	80 - 100
Goose leg	2	180 - 200	50 - 80

Radiant grilling

For large amounts of flat grill items, use the full-surface grill (fig. A).

For small amounts of flat grill items, use the centre-area grill. Place the food to be grilled in the centre of the wire rack (fig. B). You will save energy by using the centre-area grill.

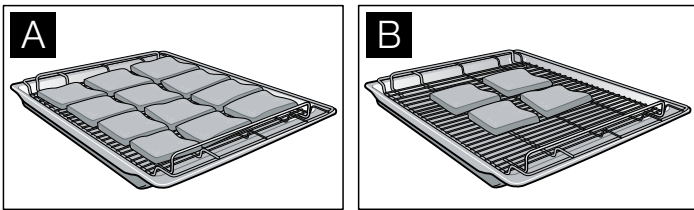

Brush the items to be grilled with a little oil according to taste.

Turn the items after half to two-thirds of the grilling time.

You can influence the grilling result by changing the position of the wire rack.

Wire rack position



Place the stepped wire rack in the universal pan with the step pointing downwards: suitable for grill items that should be well-done



Place the stepped wire rack in the universal pan with the step pointing upwards: suitable for grill items that should be rare to medium

Note: Always use the universal pan in the standard position (not the other way up).



Full-surface grill table

The information in the table is only a guideline. The values may vary depending on the type and amount of food to be grilled. They are for food placed in a cold oven and for meat taken directly from the refrigerator.

Grilled food	Shelf position	Temperature in °C	Grilling time in minutes	Notes
Toast with topping	3	220	10 - 15	The shelf position should be adapted to the height of the topping
Vegetables	4	intensive	15 - 20	
Sausages	4	250	10 - 14	Prick skins
Pork				
Fillet steaks, medium-sized (3 cm thick)	4	intensive	12 - 15	The cooking result can be influenced by the position of the wire rack
Steak, well-done (2 cm thick)	4	intensive	15 - 20	
Beef				
Fillet steaks (3 - 4 cm thick)	4	intensive	15 - 20	The grilling time can be increased or shortened depending on how well-done the meat should be
Tournedos	4	intensive	12 - 15	
Lamb				
Fillets	4	intensive	8 - 12	The grilling time can be increased or shortened depending on how well-done the meat should be
Chops	4	intensive	10 - 15	
Poultry				
Chicken drumsticks	3	250	25 - 30	Piercing the skin will prevent blisters from forming during grilling
Small chicken portions	3	250	25 - 30	
Fish				
Steaks	4	220	15 - 20	The pieces should be of equal thickness
Chops	4	220	15 - 20	
Whole fish	3	220	20 - 25	

Centre-area grill table

The information in the table is only a guideline. The values may vary depending on the type and amount of food to be grilled.

They are for food placed in a cold oven and for meat taken directly from the refrigerator.

Grilled food	Shelf position	Temperature in °C	Grilling time in minutes	Notes
Toast with topping	3	220	12 - 18	The shelf position should be adapted to the height of the topping
Vegetables	4	intensive	15 - 20	
Sausages	4	250	12 - 16	Prick skins
Poultry				
Chicken drumsticks	3	250	35 - 45	Piercing the skin will prevent blisters from forming during grilling
Small chicken portions	3	250	30 - 40	
Fish				
Steaks	4	230	15 - 20	The pieces should be of equal thickness
Chops	4	230	15 - 20	
Whole fish	3	230	20 - 25	

Steam cooking

The Steam cooking operating mode can only be used in conjunction with the Mega System steamer (available as a special accessory from specialist retailers).

Steam cooking can only be started when the cooking compartment has cooled down or "Residual heat low" is shown in the text display.

If, after starting steam cooking, "Temperature too high" appears in the text display, wait until the temperature in the cooking compartment has dropped and "Residual heat low" is

displayed. Start steam cooking again. The Steam cooking process is controlled automatically.

Notes

- Only use Steam cooking for steaming
- Only use the Mega System steamer for steaming
- Do not use Steam cooking together with the preselection mode clock function
- You will find further useful information in the instruction manual included with the Mega System steamer

Dough proving

In this section, you will find information on

- Dough proving
- preparing yeast dough and yoghurt

Only switch on Dough proving once the cooking compartment has completely cooled down (to room temperature).

If, after dough proving has been switched on, "Temperature too high" appears in the text display, the cooking compartment has not cooled down completely. Wait until the cooking compartment has cooled down and switch Dough proving on again.

Do not use Dough proving together with the Preselection mode clock function.

Yeast dough

Caution!

- Damage to the enamel surfaces from pouring cold water into the hot cooking compartment. Do not pour cold water into the hot cooking compartment.

- Distilled water will damage the surfaces in the cooking compartment. Use tap water only.

1. Pour 200 ml water into the base trough of the cooking compartment.
2. Place the dish in the centre of the wire rack and slide in at shelf position 1.

3. Close the appliance door and switch on Dough proving.

The proving process is controlled automatically. The temperature setting is fixed.

4. Remove any remaining water from the cooking compartment after the proving process is complete.
5. Loosen any limescale with a little vinegar and wipe with clean water.

The information in the table is only a guideline.

You can find information on how to proceed, further instructions and recipes in the accompanying cookbook.

Yeast dough	Amount of flour in grams	Proving time in minutes
Light dough (e.g. pizza dough, plaited loaf)	300 - 500	25 - 30
	750	30 - 35
Heavy, fat-rich dough (e.g. stollen, panettone)	500	40 - 60
	750	60 - 80
Light bread dough	1000	30 - 40
Heavy bread dough	1000	50 - 70

Yoghurt

1. Remove accessories and hook-in racks, telescopic shelves or separate fitting systems.
2. Heat 1 litre of long-life milk (3.5 % fat) or fresh pasteurised milk to 40 °C
or
Bring 1 litre of fresh milk to the boil once and allow to cool down to 40 °C.

3. Add 150 g of set yoghurt to the warm milk, stir in and fill the jars or bowls evenly. Do not pour more than 200 ml into any single container.
4. Cover the filled containers with a suitable lid or cling film.
5. Distribute the containers over the entire cooking compartment floor, evenly spaced out.
6. Close the appliance door and switch on "Dough proving". The proving process is controlled automatically. The temperature setting is fixed.
7. After 8 hours, switch off "Dough proving" and place the containers in the refrigerator for at least 15 hours.

Low-temperature cooking

In this section, you will find information on

- low-temperature cooking
- Tips and tricks

Low-temperature cooking is a method of cooking slowly at low temperatures, and is also known as slow cooking.

Low-temperature cooking is ideal for all prime cuts of meat (e.g. tender portions of beef, veal, pork, lamb and poultry) that are to be cooked medium/medium rare or "à point". The meat will remain succulent and tender.

Using Low-temperature cooking

Notes

- Only use fresh, clean meat
- The meat will always look pink on the inside after low-temperature cooking. This does not mean that the cooking time was too short
- Only use boned meat
- Do not use defrosted meat
- You can also use seasoned or marinated meat
- Always use shelf position 1 for low-temperature cooking
- Do not cover the meat while it is cooking in the cooking compartment
- Do not turn pieces of meat during the low-temperature cooking process
- The size, thickness and type of meat will have a significant influence on the searing and low-temperature cooking times
- The properties of the pan and the heat output of the hotplate can influence the searing time

The low-temperature cooking operating mode only starts once the cooking compartment has cooled down.

1. Place a glass or porcelain plate on a wire rack and insert at shelf position 1 to warm the plate.
2. Switch on the low-temperature cooking mode.
"Please wait" appears in the display during the preheating phase (20 - 30 minutes).
3. Remove fat and sinews from the meat.
4. Sear the meat on all sides to seal the meat and to create a roasted flavour.
5. When a signal sounds and "In operation" appears on the text display, place the meat on the glass or porcelain plate in the cooking compartment.
6. Take out the meat at the end of the cooking time and switch off the appliance.

Note: Meat cooked at a low temperature does not need to rest, and can easily be kept warm at a low temperature.

Table for Low-temperature cooking

The information in the table contains only guide values. The searing time is for searing in a hot pan with fat.

Place the duck breast in a cold pan and fry the skin side first. Following Low-temperature cooking, insert at shelf height 3 and grill at 250 °C for 3 - 5 minutes until crispy.

You can find information on how to proceed, further instructions and recipes in the accompanying cookbook.

	Searing in minutes	Low-temperature cooking in minutes
Pork		
Fillet, whole (approx. 500 g)	5 - 6	100 - 120
Loin (approx. 1 kg, 4 - 5 cm thick)	5 - 6	120 - 150
Medallions (5 cm thick)	3 - 4	45 - 60
Loin steaks (2 - 3 cm thick)	2 - 3	30 - 45
Beef		
Fillet, whole (1.5 kg)	6 - 7	160 - 200
Sirloin (approx. 1.5 kg, 5 - 6 cm thick)	6 - 7	180 - 210
Centre-cut rump (6 - 7 cm thick)	6 - 7	240 - 300
Medallions (5 cm thick)	3 - 4	60 - 80
Rump steak (3 cm thick)	3 - 4	50 - 70
Steak-cut rump (3 cm thick)	3 - 4	50 - 70
Veal		
Fillet, whole (approx. 800 g)	4 - 5	150 - 180
Flank (approx. 2 kg, 8 - 9 cm thick)	6 - 7	360 - 420
Centre-cut rump (approx. 1.5 kg, 4 - 5 cm thick)	6 - 7	240 - 300
Medallions (4 cm thick)	3 - 4	70 - 90
Lamb		
Loin, boned (approx. 200 g)	2 - 3	30 - 40
Leg, boned, tied (approx. 1 kg)	6 - 7	240 - 300
Poultry		
Chicken breast (150 - 200 g)*	4 - 5	90 - 120
Duck breast (300 - 400 g)**	10 - 12**	70 - 90**
Turkey breast (1 kg)*	4 - 5	150 - 180
Turkey steaks (2 - 3 cm)*	3 - 4	40 - 60

* well-done

** see the note below

Tips and tricks


Meat cooked at a low temperature cools down too quickly	Serve on warm plates with a very hot sauce/gravy.
Keeping meat cooked at a low temperature warm	Switch on the Keep warm setting and set the temperature to 60 °C. Small pieces of meat can be kept warm for up to 45 minutes and large pieces for up to 2 hours.

Defrosting and warming up

In this section, you can read about

- how to defrost using CircoTherm®
- how to use the Defrost, Plate warming, Keep warm and Sabbath programme operating modes

Defrosting with CircoTherm®

Use  CircoTherm® to defrost and cook frozen products.

Notes

- Frozen products that have been defrosted (meat in particular) require shorter cooking times than fresh products
- The cooking time for frozen meat increases by the defrosting time
- Always defrost frozen poultry before cooking so that you can remove the giblets
- Cook frozen fish at the same temperatures as fresh fish
- You can place large quantities of ready made frozen vegetables in aluminium dishes in the cooking compartment at the same time
- Use shelf height 1 when defrosting on one level, and shelf heights 1 + 3 when using two levels
- Observe the instructions on the packaging when using frozen foods.

Frozen meals	Temperature in °C	Defrosting time in minutes
Raw frozen products/ foods	50	30 - 90
Bread/Bread rolls (750 - 1,500 g)	50	30 - 60
Dry, frozen tray bakes	60	45 - 60
Moist, frozen tray bakes	50	50 - 70

Defrost setting

Using defrost setting you can defrost delicate pastries particularly well (e.g. cream cakes).

1. Switch on the defrost setting.
2. Defrost the frozen food for 25 - 45 minutes, depending on type and size.
3. Remove the frozen food from the cooking compartment and let it thaw for 30 - 45 minutes.

With small quantities (pieces), the defrosting time is shortened to 15 - 20 minutes and the extended defrosting time is shortened to 10 - 15 minutes.

Plate warming

With this operating mode you can warm plates and serving dishes. Food stays warm longer when in warmed dishes.

Risk of burning from hot ovenware!

Use an oven cloth or oven gloves when removing dishes.

1. Set the operating mode to Plate warming.
2. Place the dishes in the centre of the wire rack and slide the rack into the cooking compartment.

Keep warm

With this operating mode you can keep meals warm when they are ready to eat.

Food poisoning due to spoiled food!

Do not keep food warm for longer than two hours.

1. Switch on the “Keep warm” operating mode.
2. To keep food warm choose a temperature between 60 - 120 °C.
3. Place the food in the cooking compartment.

Sabbath programme

With this operating mode you can keep food warm or heat it up over a long period of time (1 - 3 days at 85 - 140 °C). The oven is in continuous operation during this time.

Switch on the Sabbath programme


1. Scroll the NeffNavigator® until the operating mode Sabbath programme is selected.
A default temperature appears in the text display.
2. Press NeffNavigator® down and scroll in order to change the default temperature.
3. Press NeffNavigator® down.
“1:03 d” is shown in the text display.
4. Press the NeffNavigator® down and scroll to set the desired cooking time.



Cooking time	Text display
Preset (1 day and 3 hours)	1:03 d
Minimum (1 day)	1:00 d
Maximum (3 days and 1 hour)	3:01 d

5. Touch the  button.

 When the temperature is reached, “in operation” appears in the text display. The Sabbath programme is active for the set time. The cooking compartment lighting and the heating bars are switched off.

Switching off the Sabbath programme

Once the set cooking time has elapsed, the  symbol flashes and a signal sounds.


1. Touch the  button.
2. Press and hold the  button for 2 seconds.
The appliance is switched off.

Preserve

⚠ Risk of injury!

Preserving jars containing incorrectly preserved food can burst. Please observe the following instructions:

- Fruit and vegetables must be fresh and in good condition
- Only use clean and undamaged preserving jars
- The preserving jars must not touch each other in the cooking compartment during preserving

With  CircoTherm®, the cooking compartment can be used to preserve the contents of up to six ½, 1 or 1½ litre preserving jars at the same time.

Notes

- For each preserving process, only use preserving jars that are the same size and contain the same food.
- Pay attention to cleanliness when preparing and closing the preserving jars.
- Only use heat resistant rubber rings.
- You cannot preserve the following food in your appliance: the contents of tin cans, meat, fish or pie filling.

Preparing fruit

1. Wash fruit and, depending on the type, peel, remove the seeds and finely chop.
2. Fill the preserving jars with fruit up to approx. 2 cm below the rim.
3. Fill the preserving jars with hot, skimmed sugar solution (approx. ⅓ l for a one litre jar).

To one litre water:

- approx. 250 g sugar for sweet fruit
- approx. 500 g sugar for sour fruit

Preparing vegetables

1. Wash vegetables and depending on the type, clean and finely chop.
2. Fill the preserving jars with vegetables up to approx. 2 cm below the rim.
3. Fill the preserving jars immediately with hot, boiled water.


Closing the preserving jars

1. Wipe the rims of the preserving jars with a clean, damp cloth.
2. Put a wet rubber ring and lid in place and close the jars with the clips.

Starting the preserving process

1. Insert the universal pan at shelf height 1.
2. Position the preserving jars in a triangle without them touching each other.



3. Pour ½ litre of hot water (approx. 80 °C) into the universal pan.
4. Set  CircoTherm® at 160 °C.
 - Preserving jars containing ½ or 1 litre will start to bubble after approx. 50 minutes
 - Preserving jars containing 1½ litres will start to bubble after approx. 60 minutes

Ending the preserving process

For fruit, gherkins and tomato purée:

1. Turn off the appliance, once all preserving jars are bubbling.
2. Allow the preserving jars to stand in the closed cooking compartment for several minutes longer.
 - Raspberries, strawberries, cherries or gherkins: approx. 5 - 10 minutes
 - Other fruit: approx. 10 - 15 minutes
 - Tomato or apple purée: approx. 15 - 20 minutes

For vegetables:

1. Reduce the temperature to 100 °C once all the preserving jars are bubbling. Allow the preserving jars to continue bubbling for approx. 60 minutes in the closed cooking compartment.
2. Switch off the appliance.
3. Allow the preserving jars to stand in the closed cooking compartment for approx. 15 - 30 minutes longer.

Removing the preserving jars

1. Place the preserving jars on a clean cloth, cover and protect from draughts.
2. Remove clips only when the jars are cold.

Cleaning and care

In this section, you will find information on

- cleaning and care of your appliance
- Cleaning agents and aids
- self-cleaning surfaces in the cooking compartment
- EasyClean® cleaning aid

⚠ Risk of short circuit!

Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

Caution!

Surface damage due to incorrect cleaning: Do not use any

- harsh or abrasive cleaning agents
- cleaning agents that contain alcohol
- abrasive cleaning aids such as steel wool or scourers.

Observe the specifications in the tables.

Note: Highly recommended cleaning and care products can be purchased through our after-sales service. Observe the manufacturer's instructions.

Cleaning the appliance exterior

Appliance part/surface	Cleaning agent/aid
Stainless steel surfaces	Apply commercially available washing-up liquid with a soft, damp cloth or chamois; dry with a soft cloth. Use cleaners for matted stainless steel if very dirty.
Painted surfaces	Apply commercially available washing-up liquid with a soft, damp cloth or chamois; dry with a soft cloth.
Control panel	Apply commercially available washing-up liquid with a soft, damp cloth or chamois; dry with a soft cloth. Do not use glass cleaners or glass scrapers.
Door panels	Use a commercially available glass cleaner or washing-up liquid with a soft, damp cloth or chamois; dry with a soft cloth. The inner door panel on the appliance door has a coating which reduces the temperature and reflects the heat. The view through the appliance door is not impaired by this. When the appliance door is open, this coating can have the effect of a light-coloured film. This is part of the design and is not due to any quality defect.

Cleaning the cooking compartment

Caution!

Risk of damaging the surface. Do not clean the appliance while still warm, even if using oven cleaners specially intended for this purpose.


Notes

- Enamel is baked on at very high temperatures during manufacture. This can cause some slight colour variation. This is normal and does not affect proper functioning.
- The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. Anti-corrosion protection is still guaranteed, however.

Appliance part	Cleaning agent/aid
Enamel surfaces (smooth surfaces)	To facilitate cleaning, you can switch on the interior lighting and detach the appliance door if necessary. Apply commercially available washing-up liquid or a vinegar solution with a soft, damp cloth or chamois; dry with a soft cloth. Loosen baked on food residues with a damp cloth and detergent. We recommend using oven cleaning gel if the oven is very dirty. This can be applied neat to the affected area. Leave the cooking compartment open to dry after cleaning.
Self-cleaning surfaces (rough surfaces)	Please see the notes in section: Self-cleaning surfaces
Door seal	Hot soapy water
Hook-in rack/telescopic shelf	Hot soapy water
Accessories	Soak in hot soapy water, clean with a brush and sponge or wash in the dishwasher.

Keeping the appliance clean

To avoid getting the cooking compartment dirty,

- clean the cooking compartment after each use, as dirt will bake on the next time it is heated up, and this can only be removed with difficulty
- always remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately
- use  CircoTherm® whenever possible. This operating mode creates less dirt
- Use the universal pan to bake very moist cakes
- use suitable ovenware when roasting (e.g. roasting dish) or a roasting sheet (see section: Accessories)

Self-cleaning surface

The back wall of the cooking compartment is coated with self-cleaning enamel. This coating absorbs and disintegrates splashes from baking and roasting while the oven is in operation.

Large splashes only disappear after the oven has been used several times.

Discolouration on the rear wall does not affect the self-cleaning function.

Caution!

Damage to surfaces on self-cleaning areas due to applying oven cleaner. Never clean the self-cleaning surfaces with oven cleaner.

If oven cleaner accidentally gets onto self-cleaning surfaces, remove it immediately with a sponge and plenty of water.

Caution!

Damage to surfaces on self-cleaning areas due to the use of abrasive and acidic cleaning agents and aids.

Do not use cleaning agents containing abrasive substances or acids.

Do not use abrasive cleaning aids such as steel wool or scourers.

EasyClean®

Your appliance comes with an EasyClean® function to make cleaning the cooking compartment easier. An automatically controlled vaporisation of soapy water loosens residues and makes it easier to remove them afterwards.

For heavy dirt deposits, you can

- allow the soapy water to penetrate for a while before switching on EasyClean
- rub detergent onto the dirty surfaces before switching on the cleaning aid
- repeat the EasyClean® function once the cooking compartment has cooled

Preparation and switching on

EasyClean® only starts when the cooking compartment is cool.


⚠ Risk of scalding and surface damage!

Never pour water into the cooking compartment when it is hot. Water vapour will be created and the enamel may be damaged because of the change in temperature.

1. Remove the accessories from the cooking compartment.
2. Carefully pour 0.4 litres of water (not distilled water) with some detergent into the base trough of the cooking compartment (fig. A).
3. Close the appliance door.
4. Switch on EasyClean®.
"In operation" and the \rightarrow cooking time appear in the text display.

If "Temperature too high", appears in the text display, the cooking compartment has not cooled down completely. Switch off EasyClean® and wait until the cooking compartment has cooled down.

A signal sounds and the oven lighting switches on once EasyClean® has finished.

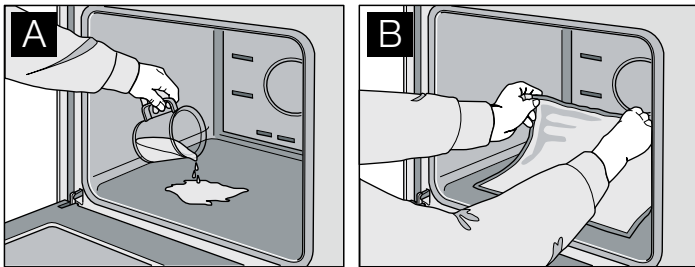

Cleaning up and switching off

Do not leave the remaining water in the cooking compartment for a long time (e.g. overnight).

1. Open the appliance door and remove the remaining water with an absorbent sponge cloth (fig. B).
2. Clean the cooking compartment with a sponge cloth, a soft brush or a plastic saucepan scrubber.
Note: You can remove any remaining, persistent residue with a glass scraper for glass ceramic.
3. Remove limescale with a cloth soaked in vinegar, then wipe with clean water and rub dry with a soft cloth. Remember to dry under the door seal.
4. Touch the ⓪ button.
5. After cleaning, leave the appliance door ajar in the stop position (approx. 30°) for approx. 1 hour to allow the enamel surfaces in the cooking compartment to dry thoroughly.

Rapid drying

1. After cleaning, leave the appliance door ajar in the stop position (approx. 30°).
2. Set CircoTherm® at 50 °C.
3. After 5 minutes, switch off the appliance and close the appliance door.

Removing and fitting the appliance door

You can remove the appliance door to clean it more thoroughly.

⚠ Risk of injury!


The hinges of the appliance door may snap shut with great force. Always fully turn the two locks for fitting and removing the appliance door.

⚠ Risk of injury!


If the appliance door has been removed without turning both locking levers to their limit stops, the hinge may snap shut. Do not reach into the hinge. Call the after-sales service.

Removing the appliance door


1. Open the left and right-hand hinge lock (Fig. A).
To do this, push the hinge lock (Fig. B) fully upwards on both sides with a screwdriver.

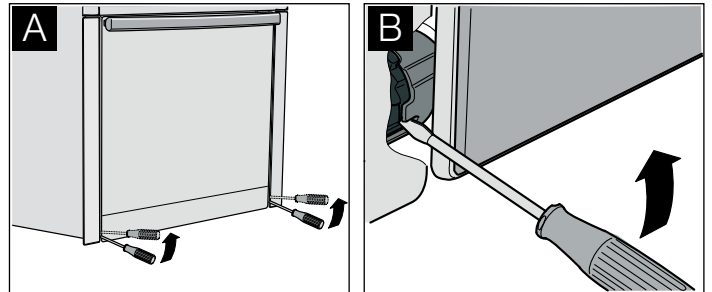


Hinge lock closed (Fig. C)
Hinge lock open (Fig. D)

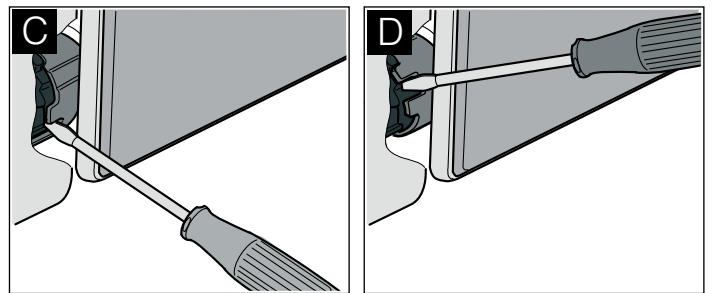

2. Open the appliance door a little (Fig. E).
3. Using a coin, fully turn both the left and right-hand locks on the inside of the appliance at the bottom (Fig. F).
Left lock: clockwise
Right lock: anti-clockwise

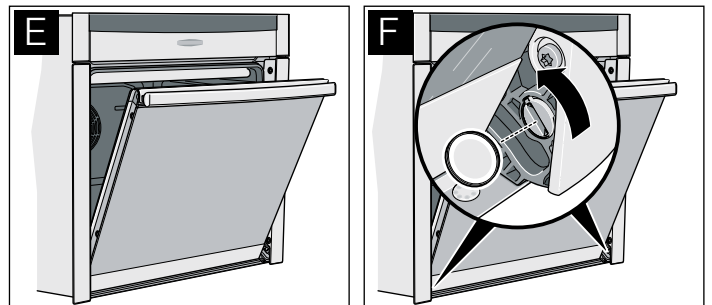


4. Close the appliance door a little, until you feel the locks engage.
The door can now no longer be opened or closed.
5. Lift the door handle slightly using both thumbs and lift out the appliance door (Fig. G).

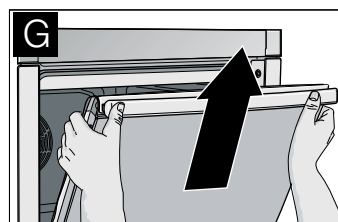


Fitting the appliance door

1. Hold the appliance door and raise the door handle slightly with both thumbs (Fig. A).
2. Fit the appliance door in the left and right-hand guide rollers simultaneously (Fig. B).

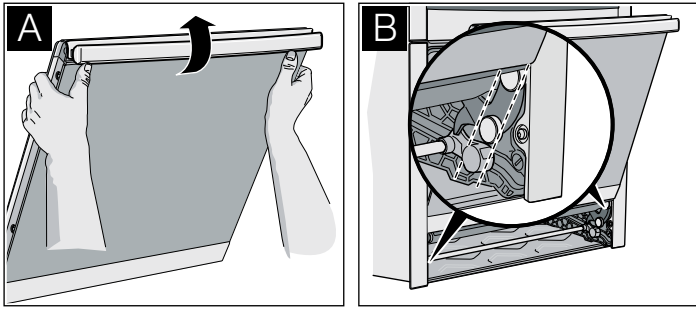

3. Ensure that the appliance door does not tilt unevenly and that it is properly fitted in place (Fig. C).
4. Use a coin to release both locks on the appliance door (Fig. D).
Left lock: anti-clockwise
Right lock: clockwise

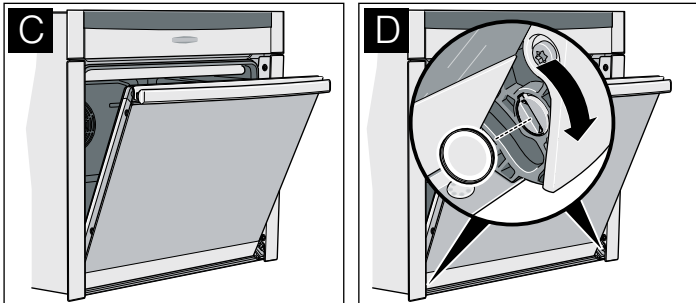


5. Open the appliance door a little wider and then close it.

⚠ Risk of injury from hinge locks which have not been properly closed!

The appliance door may detach itself. You may be injured and the appliance door damaged. After refitting the door, always close the left and right-hand hinge locks.

6. Close the left and right-hand hinge locks (Fig. E).
To do this, push the hinge lock (Fig. F) fully downwards on both sides with a screwdriver.

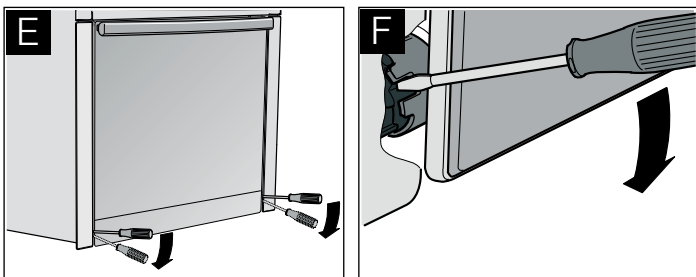

Cleaning the door panels

To facilitate cleaning, you can remove the door panels from the appliance door.

⚠ Risk of injury!


The components inside the appliance door may have sharp edges. Take care not to cut yourself. Wear protective gloves.

⚠ Risk of injury!

The appliance must not be used again until the door panels and appliance door have been correctly fitted.

Removing the door panel


1. Unhook the appliance door and lay it on a soft, clean surface with the front side facing downwards (see section: Removing and installing the appliance door).
2. Disengage and pull out the door panel from the latch on the appliance door by lifting slightly.

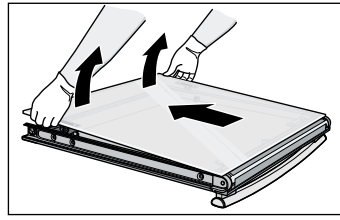

Removing the intermediate panel

Before removing, make a note of the position in which the intermediate panel is fitted, so that you do not refit it the wrong way round later.

1. Press the left and right holders in the direction of the arrow (Fig. A) and disengage the intermediate panel.
2. Raise and pull out the intermediate panel (Fig. B).

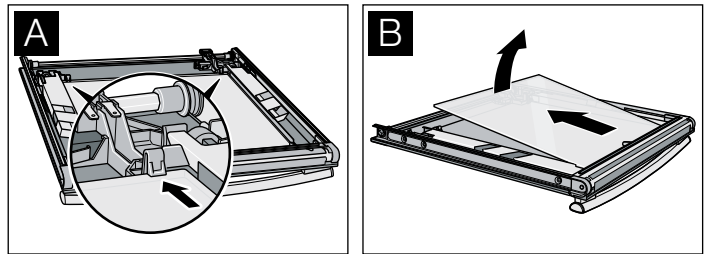

Cleaning


Clean the door panels with glass cleaner and a soft cloth.

Caution!

Do not use any sharp or abrasive medium or a glass scraper. The glass could be damaged.


Fitting the intermediate panel

1. Insert the intermediate panel into the three supports (Fig. A).
2. Press on the intermediate panel on the left and right next to the holders until it engages in the holders (Fig. B).

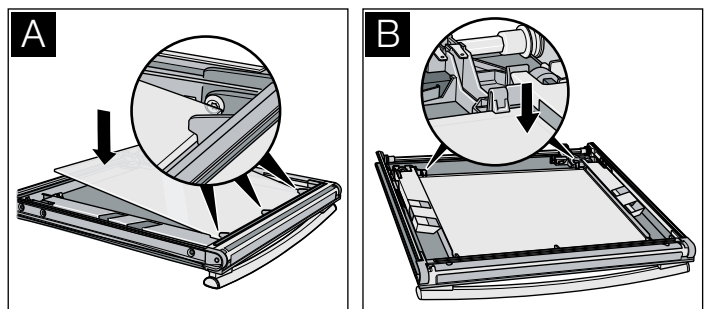

Fitting the door panel

1. Insert the door panel into the two supports (Fig. A).
2. Press on the door panel on the left and right next to the holders until it engages in the holders (Fig. B).

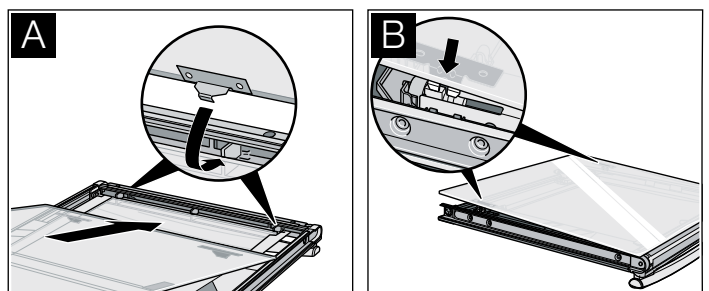


Cleaning the cooking compartment ceiling

The grill element can be folded down to allow quick and easy cleaning of the cooking compartment ceiling.

⚠ Risk of burning due to hot components in the cooking compartment!

Wait until the cooking compartment has cooled down.

1. Pull the grill element retaining bracket towards the front and push it upwards until you hear the grill element disengage (figure A).
2. Hold the grill element and fold it downwards (figure B).

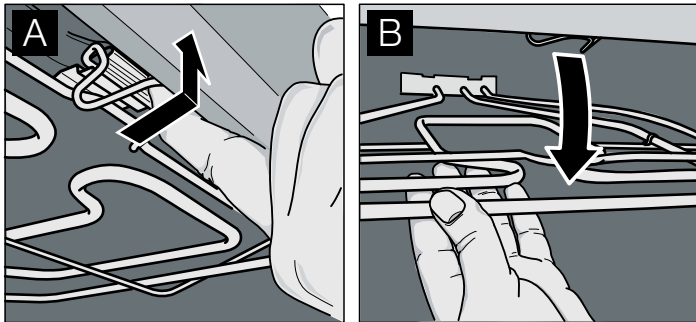

3. Clean the cooking compartment ceiling.
4. Pull the retaining bracket towards the front and keep it pushed upwards.
5. Fold the grill element upwards, until it clicks into place.


Cleaning the hook-in racks

You can remove the hook-in racks for easier cleaning.

⚠ Risk of burning due to hot components in the cooking compartment!

Wait until the cooking compartment has cooled down.

1. Pull out and detach the hook-in rack at the front (Fig. A).
2. Clean the hook-in rack with washing-up liquid and a sponge or brush.
3. After cleaning, refit the hook-in rack in the reverse order (Fig. B).

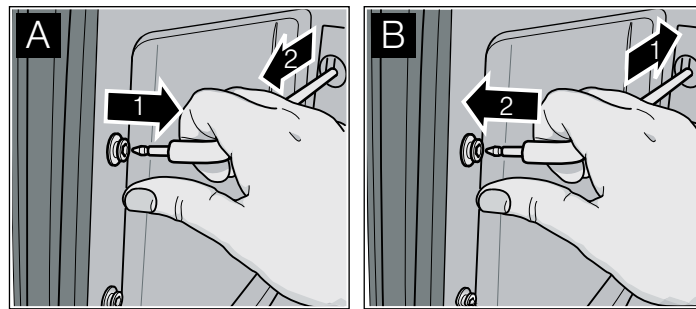

Cleaning the telescopic shelves


You can unhook the telescopic shelves for easier cleaning.

⚠ Risk of burning due to hot components in the cooking compartment!

Wait until the cooking compartment has cooled down.

Removing the telescopic shelves

1. Hold the flat spring (Fig. A).
2. Move the telescopic shelf upwards at the front and unhook it to the side.
3. Pull out the telescopic shelf at the back.

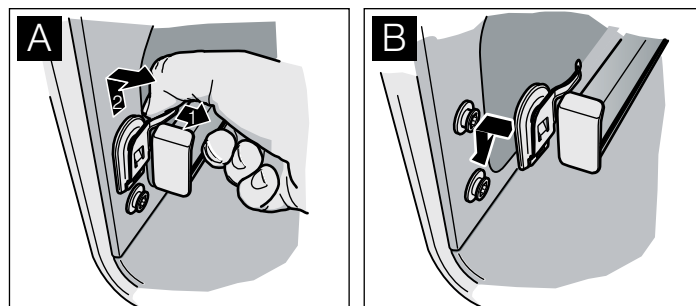

Cleaning the telescopic shelves

Clean the telescopic shelves with washing-up liquid and a sponge or brush.

Hooking in the telescopic shelves

1. Insert the telescopic shelf at the rear as far as it will go.
2. Insert the telescopic shelf at the front from the top and push it down until it engages (Fig. B).
3. Push telescopic shelves to the limit stop and close appliance door.

Faults and repairs

It is not always necessary to call the after-sales service. Sometimes, you can find a remedy yourself. You will find some tips for troubleshooting in the following table.

⚠ Risk of electric shock!

- Work on the appliance electronics may only be performed by a specialist.
- Always disconnect the appliance from the power supply when work is carried out on the electronics. Switch off the circuit breaker or remove the fuse from your household fuse box.

Problem	Possible cause	Remedial action
Electrical operation is malfunctioning (e.g. indicator lamps do not light up)	Fuse defective	Check fuses in the fuse box and replace if necessary
A time is flashing in the text display	There was a power cut	Reset the time of day and date (see section: Electronic clock)
Electronically controlled functions are malfunctioning	Energy surges (e.g. lightning strike)	Reset the function concerned

Problem	Possible cause	Remedial action
The appliance is not heating up, two small squares appear in the top left and right-hand corners of the text display	A button combination was actuated	Switch off the appliance, touch the i button for 3 seconds, scroll until "Lock" is selected, then touch the ☒ button for 3 seconds
"Service Test Mode" appears in the text display.	A button combination was actuated	Touch the ☒ button
"E101" or "E104" appears in the text display	The temperature sensor is faulty	Call the after-sales service
"E011" appears in the text display.	Permanent assignment of a button	Cancel the permanent assignment of the button
EXXX, e.g. E300, appears in the text display	Internal fault in the appliance electronics	Touch the ☒ button; if the message does not go out, pull out the mains plug and plug it back in again after approx. 10 seconds
It is not possible to operate the appliance and "Appliance locked" appears in the text display	The appliance has been locked	Deactivate lock (see section: Childproof lock)
It is not possible to operate the appliance and "Appliance permanently locked" appears in the text display	The appliance controls were automatically blocked	Deactivate automatic block (see section: Childproof lock)
When you switch on an operating mode, "Temperature too high" appears in the text display	The appliance has not cooled down fully	Wait until the appliance has cooled down, then switch on the operating mode again
The appliance has switched itself off automatically	The appliance has switched off to protect itself from overheating	Touch any button to switch the appliance back on
Smoke is generated during roasting or grilling	Fat is burning on the grill element	Continue grilling or roasting until the fat on the grill element is burnt away
	Wire rack or universal pan inserted incorrectly	Place the wire rack in the universal pan and insert them together at a lower shelf position
Liquid or very thin dough runs to one side	The appliance has not been fitted level	Check the appliance installation (see the Installation instructions)
High levels of condensation are generated in the cooking compartment	Normal occurrence (e.g. when baking cakes with very moist toppings or roasting a large joint)	Open the appliance door briefly from time to time during operation
Enamelled accessories have light, matt marks	Normal occurrence caused by dripping meat or fruit juices	Not possible
Door panels are misted up	Normal occurrence caused by temperature differences	Switch the appliance on at 100 °C and then switch off again after 5 minutes
If the appliance is briefly switched on and off again, the previous settings are shown	The appliance saves the last settings for a few seconds	Switch the appliance off, wait for 8 seconds and then switch the appliance on again

Replacing the oven light bulb


Replace faulty oven light bulbs.

You can obtain replacement light bulbs from customer service or specialist retailers: E14, 220 - 240 V, 40 W, heat resistant to 300 °C. Only use these oven light bulbs.

⚠ Risk of electric shock !

Disconnect the appliance from the power supply. Switch off the circuit breaker or remove the fuse from the household fuse box.

1. Place a tea towel in the cold cooking compartment to prevent damage.
2. Turn the glass cover anticlockwise and remove it.

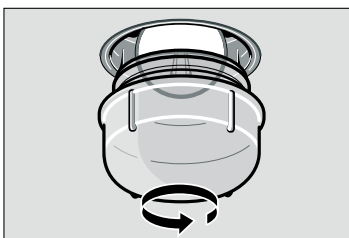

3. Replace the oven light bulb with a bulb of the same type.
4. Screw on the glass cover again.
5. Remove the tea towel and switch on the circuit breaker.

Note: If the glass cover cannot be unscrewed: use rubber gloves to turn it. You can order a special removal tool through the after-sales service (order no. 613634)

Changing halogen bulbs

Replace faulty halogen bulbs. You can obtain replacement light bulbs from the after-sales service or from specialist retailers: Osram Ministar Axial Reflector 12 V - GY 6.35; 20 W. Only use these bulbs.


⚠ Risk of burns!

Halogen bulbs become very hot when switched on. When replacing them, wait until the bulb has cooled down.

Caution!

Clouding in halogen bulbs: Do not touch halogen bulbs with bare fingers. This causes oils to get onto the glass which are then burnt on and cloud the glass. Use a clean cloth to change the bulb.

1. Remove the appliance door (see section: Removing and refitting the appliance door).
2. Remove the door panel (see section: Cleaning the door panels).
The halogen bulbs are located on the left- and right-hand sides next to the door hinges (Fig. A).
3. Unclip the bulb fitting and halogen bulb from the holder and remove it (Fig. B).

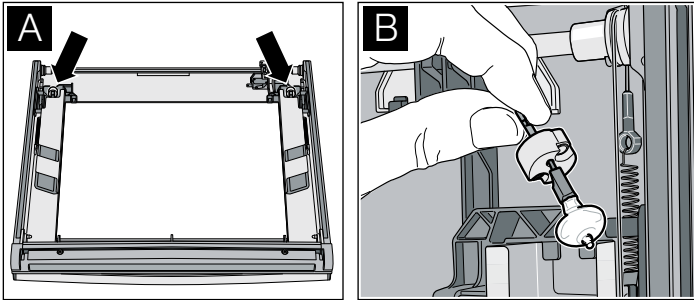

4. Change the halogen bulb. Use a clean cloth.
5. Insert the halogen bulb and bulb fitting into the appliance door.
6. Fit the door panel and appliance door.


Changing the door seal

If the door seal is defective, it must be replaced. Replacement seals for your appliance can be obtained from the after-sales service.


Unhooking the door seal

The door seal is fixed in nine places.

1. Unhook (Fig. B) the door seal at four points (Fig. A).

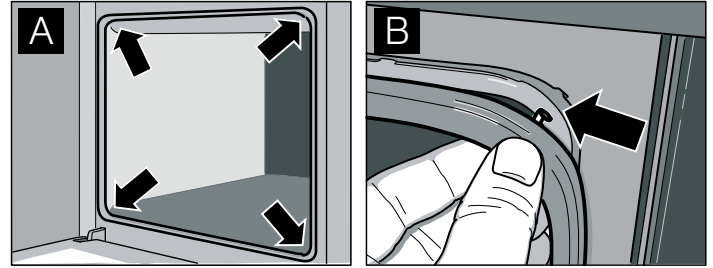

2. Hook the door seal in at five further points (Fig. C) by turning the hooks slightly (Fig. D).

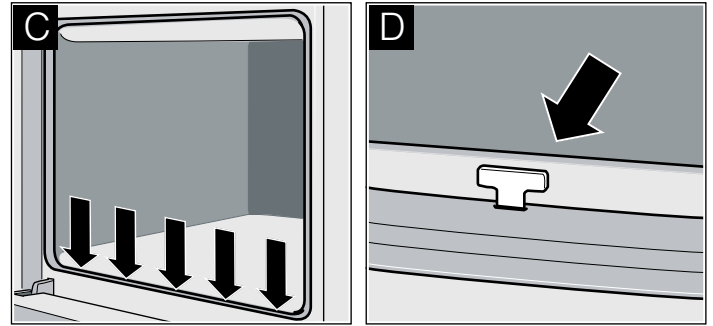

Hooking in the door seal

1. Hook (Fig. B) the door seal in at four points (Fig. A).
2. Hook the door seal in at five further points (Fig. C) by turning it slightly (Fig. D).
3. Check that the door seal is seated correctly.

After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers can be found on the right-hand side of the oven door. You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no. FD no.

After-sales service ☎

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

- GB** 0844 8928989
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
- IE** 01450 2655

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.


Test dishes

Test dishes tested to standard EN 50304/EN 60350 (2009) and IEC 60350. Please note the information in the tables about preheating. The table values do not include Rapid heat up.

Baking	Shelf position	Operating mode	Temperature in °C	Baking time in minutes
Viennese whirls	3	Top/bottom heat	140 - 150*	25 - 35
	1	CircoTherm	140 - 150*	20 - 30
	1 + 3	CircoTherm	140 - 150*	20 - 40
	1 + 3 + 4	CircoTherm	130 - 150*	30 - 50
Small cakes (20 per tray)	3	Top/bottom heat	160 - 170**	20 - 35
	1	CircoTherm	150 - 160**	20 - 30
	1 + 3	CircoTherm	150 - 160**	25 - 35
	1 + 3 + 4	CircoTherm	150 - 160**	25 - 35
Hot water sponge cake	2	Top/bottom heat	160 - 170*	25 - 35
	1	CircoTherm	150 - 160*	25 - 35
Double crust apple pie (tinplate tins next to one another, fig. A)	1	Circotherm intensive	170 - 180*	75 - 85
Double crust apple pie (black tins placed diagonally across from each other, fig. B)	1 + 3	CircoTherm	170 - 180*	65 - 80

* Preheat oven


** Preheat for 10 minutes

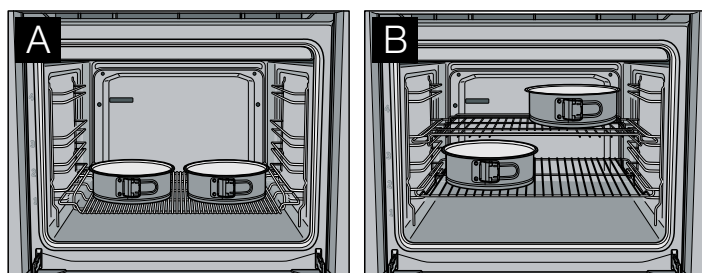

Grilling	Shelf position	Operating mode	Temperature in °C	Grilling time in minutes
Toast (universal pan + flat wire rack)	4	Full-surface grill	intensive*	1 - 2
Beef steaks x 12 (universal pan + flat wire rack)	4	Full-surface grill	intensive	20 - 25**

* Preheat for 10 minutes

 ** turn over after $\frac{2}{3}$ of the cooking time



Constructa Neff
Vertriebs-GmbH
Carl-Wery-Straße 34
D-81739 München



9000559215

911213