

Overview of programmes

Programme/type of laundry/information	Settings
Name of programme Brief explanation of the programme and the items for which it is suitable.	Max. load, temperature (-- = cold) Max. spin speed (--- = Rinse Stop, 0 = no spin cycle, draining only) Additional programme settings
Cottons (Algodón ) Hard-wearing items and heat-resistant items made of cotton or linen * The Speed Perfect () setting is suitable as a short programme for small loads of lightly soiled laundry.	Max. 8 kg/5* kg; -- ... 90 °C Max. 1400 rpm Turbo/Eco Perfect () / ) Water & Rinse+ (Extra ) Prewash (Prelavado )
Cottons  ( Algodón Eco ) Hard-wearing items and heat-resistant items made of cotton or linen; energy-optimised washing that works by reducing the temperature while achieving a comparable washing result to the Cottons programme. Note: . The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	Max. 8 kg; -- ... 90 °C Max. 1400 rpm Water & Rinse+ (Extra ) Prewash (Prelavado )
Easy-Care (Sintéticos ) Items made of synthetic materials or blended fabrics	Max. 4 kg; -- ... 60 °C Max. 1200 rpm Turbo/Eco Perfect () / ) Water & Rinse+ (Extra ) Prewash (Prelavado )
Delicates / Silk (Delicado / Seda ) For delicate, washable items, e.g. made of silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves) Note: . Use a detergent that is suitable for machine-washing delicate fabrics or silk.	Max. 2 kg; -- ... 40 °C Max. 800 rpm Turbo/Eco Perfect () / ) Water & Rinse+ (Extra ) Prewash (Prelavado )
 Wool (Lana ) Hand- or machine-washable items that are made of wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) Notes ■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	Max. 2 kg; -- ... 40 °C Max. 800 rpm -
* Reduced load with the Speed Perfect () setting	

Programme/type of laundry/information	Settings
Mix  Mixed load of cottons and synthetic fabrics	Max. 4 kg; -- ... 40 °C Max. 1400 rpm Turbo/Eco Perfect (≡  / ), Water & Rinse+ (Extra ), Prewash (Prelavado )
Dark Wash (Ropa oscura / Jeans  Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.	Max. 3.5 kg; -- ... 40 °C Max. 1200 rpm Turbo/Eco Perfect (≡  / ), Water & Rinse+ (Extra ), Prewash (Prelavado )
Rinse / Spin / Drain ( /  /  Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.	;- - Max. 1400 rpm Water & Rinse+ (Extra )
Notes ■ The Water & Rinse+ (Extra ) button is set by default for this programme. ■ If only rinsing is required, set the spin speed to 0. ■ If only spinning is required, deactivate the Water & Rinse+ (Extra ) button and adjust the spin speed. ■ If only draining is required, set the spin speed to 0 and deactivate the Water & Rinse+ (Extra ) button.	
Duvet (Edredones sintét  Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: . Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.	Max. 2.5 kg; -- ... 60 °C Max. 1200 rpm Turbo/Eco Perfect (≡  / ), Water & Rinse+ (Extra )
Shirts / Blouses (Camisas / Blusas  Non-iron shirts/blouses made of cotton, linen, or synthetic or blended fabrics Note: . Use the Delicates / Silk (Delicado / Seda ) programme to wash shirts/blouses made of silk or delicate fabrics.	Max. 2 kg; -- ... 60 °C Max. 800 rpm Turbo/Eco Perfect (≡  / ), Water & Rinse+ (Extra ), Prewash (Prelavado )
* Reduced load with the Speed Perfect (≡ ) setting	

Programme/type of laundry/information	Settings
Drum Clean (Limp. tambor ) Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after an extended period of non-use. The Drum Clean indicator light will flash if you have not used a programme at 60 °C or higher for a long time.	0 kg; 80, 90 °C 1200 rpm -
Notes ■ Run the drum care programme without any laundry. ■ Use a type of washing powder or detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates.	
Outdoor (Microfibras ) Membrane-coated weatherproof or outdoor clothing and items made from water-resistant fabrics	Max. 2 kg; -- ... 40 °C Max. 800 rpm Turbo/Eco Perfect ( / ) Water & Rinse+ (Extra )
Notes ■ Use a special detergent suitable for machine-washing; add the correct dosage to compartment II in accordance with the manufacturer's instructions. ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (manual compartment) to remove fabric softener residue.	
Super 60' / Power wash (Intensivo 60 min ) Extra-short programme lasting approx. 60 minutes, suitable for small items of lightly soiled laundry.	Max. 5 kg; -- ... 60 °C Max. 1400 rpm Water & Rinse+ (Extra ) Prewash (Prelavado )
SuperQuick 15'/30' (Rápido 15/30 min ) Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry	Max. 2/3,5 kg; -- ... 40 °C Max. 1200 rpm Turbo/Eco Perfect ( / )
Note: . Setting Speed Perfect () runs the SuperQuick 15' programme.	
Allergy Plus (Clinic ) Hard-wearing items made of cotton or linen	Max. 6.5 kg; -- ... 60 °C Max. 1400 rpm Turbo/Eco Perfect ( / ) Water & Rinse+ (Extra ) Prewash (Prelavado )
Note: . Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	
* Reduced load with the Speed Perfect () setting	



Consumption values table

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Length of programme*
Cottons 20 °C	8 kg	0,26 kWh	85 l	2 ¾ h
Cottons 40 °C	8 kg	0,99 kWh	85 l	3 ¼ h
Cottons 60 °C	8 kg	1,16 kWh	85 l	2 ¾ h
Cottons Eco  +  **	4 kg	0,38 kWh	37 l	4 ¼ h
Cottons Eco  +  **	4 kg	0,58 kWh	37 l	4 ½ h
Cottons Eco  +  **	8 kg	0,78 kWh	55 l	4 ½ h
Cottons 90 °C	8 kg	2,01 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mix 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Programme	Approximate residual moisture***		
	W... Max. 1400 rpm	W... Max. 1200 rpm	W... Max. 1000 rpm
Cottons	53%	58%	68%
Easy-Care	40%	40%	40%
Delicates / Silk	30%	30%	30%
Wool	45%	45%	45%

Values determined according to the valid version of EN60456.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Program settings with maximum spin speed for testing and energy labeling in accordance with EU Directive 2010/30/EU with cold water (15°C). The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of energy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

W6440X2ES

9001291191 (9811)

