





B69CY7MY0

You can find additional information and explanations online. Scan the QR code on the title page.



Table of contents

INF	FORMATION FOR USE	16	Home Connect	21
1	Safety 2	17	Cleaning and servicing	22
2	Preventing material damage 5	18	"Pyrolytic self-cleaning" cleaning function	25
3	Environmental protection and saving energy 6	19	"Easy Clean" cleaning aid	26
4	Familiarising yourself with your appliance 6	20	Drying	27
5	Functions 9	21	Rails	27
6	Accessories 11	22	Appliance door	29
7	Before using for the first time 12	23	Troubleshooting	34
8	Basic operation 13	24	Disposal	36
9	Time-setting options 14	25	Customer Service	36
10	Meat probe 15	26	Information regarding Free and Open Source	
11	Dishes 17		Software	
12	Favourites 18	27	Declaration of Conformity	37
13		28	How it works	37
14	Rapid heating 19	29	INSTALLATION INSTRUCTIONS	43
15	Basic settings	29.2	General installation instructions	

▲ 1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

Only use this appliance:

- To prepare meals and drinks.
- in private households and in enclosed spaces in a domestic environment.

■ Up to an altitude of 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

1.4 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 11

Combustible objects that are left in the cooking compartment may catch fire.

- Never store combustible objects in the cooking compartment.
- ► If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire.

Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Opening the appliance door creates a draught. Greaseproof paper may come into contact with the heating element and catch fire.

- Never place greaseproof paper loosely over accessories when preheating the appliance and while cooking.
- ► Always cut greaseproof paper to size and use a plate or baking tin to hold it down.

The appliance and its parts that can be touched become hot during use.

- Caution should be exercised here in order to avoid touching heating elements.
- ► Young children under 8 years of age must be kept away from the appliance.

Accessories and cookware get very hot.

Always use oven gloves to remove accessories or cookware from the cooking compartment.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- Only use small quantities of drinks with a high alcohol content in food.
- Do not heat spirits (≥ 15% vol.) when undiluted (e.g. for marinating or pouring over food).
- ► Open the appliance door carefully. The telescopic shelves become hot when the appliance is in use.
- Allow hot telescopic shelves to cool down before touching them.
- ► Only touch hot telescopic shelves with oven gloves.

The accessible parts of the appliance become hot during operation.

- ► Never touch these hot parts.
- ► Keep children at a safe distance.

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ► Keep children at a safe distance. If there is water in the cooking compartment when it is hot, this may create hot steam.
- ► Never pour water into the cooking compartment when the cooking compartment is hot.

⚠ WARNING – Risk of injury!

Scratched glass in the appliance door may develop into a crack.

▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The appliance and its parts that can be touched may have sharp edges.

- ► Take care when handling and cleaning them.
- ▶ If possible, wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ► Keep your hands away from the hinges. Components inside the appliance door may have sharp edges.
- Wear protective gloves.



Children and adults may be injured by the falling control Twist Pad Flex.

- ► Remove the control element Twist Pad Flex before cleaning.
- Only place the control Twist Pad Flex at one of the specified positions on the control panel.

Alcoholic vapours may catch fire in the hot cooking compartment, and the appliance door may spring open and may fall off. The door panels may shatter and fragment.

- → "Preventing material damage", Page 5
- ► Only use small quantities of drinks with a high alcohol content in food.
- Do not heat spirits (≥ 15% vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

⚠ WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

If the insulation of the power cord is damaged, this is dangerous.

- ► Never let the power cord come into contact with hot appliance parts or heat sources.
- ► Never let the power cord come into contact with sharp points or edges.
- ► Never kink, crush or modify the power cord. An ingress of moisture can cause an electric shock.
- ► Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ► Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ► If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ► Call customer service. → Page 36
 Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children.
- ▶ Read the special installation instructions.

Caution: Magnetism

Caution for people with pacemakers Permanent magnets are used in the control panel and in the control elements. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

► Persons with electronic implants must stand at least 10 cm away from the control panel and the magnetic controls. ▶ Never put the control in your pockets.

△ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- Keep packaging material away from children.
- Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

1.5 Meat probe

Using the wrong meat probe could damage the insulation.

Only use the meat probe for this specific appliance.

△ WARNING – Risk of injury!

The meat probe is sharp.

► Handle the meat probe with care.

1.6 Cleaning function

Loose food remnants, fat and meat juices may catch fire when the cleaning function is in progress.

- ► Before you start the cleaning function, always remove coarse dirt from the cooking compartment.
- ► Never clean accessories at the same time. The outside of the appliance gets very hot when the cleaning function is in progress.
- ► Never hang combustible objects, e.g. tea towels, on the door handle.
- ► Leave the front of the appliance clear.
- ► Keep children at a safe distance.

If the door seal is damaged, a large amount of heat is generated around the door.

- ▶ Do not scrub or remove the seal.
- ► Never operate the appliance if the seal is damaged or missing.

The appliance gets very hot when the cleaning function is in progress. The non-stick coating on baking trays and tins is destroyed and noxious gases are released.

Never clean non-stick baking trays or baking tins using the cleaning function. Never clean accessories at the same time.

⚠ WARNING – Risk of harm to health!

The cleaning function heats up the cooking compartment to a very high temperature so that food left over from roasting, grilling and baking will burn off. This process releases vapours, which can irritate mucous membranes.

- ▶ Keep the kitchen well ventilated while the cleaning function is running.
- ▶ Do not remain in the room for long periods.
- Keep children and pets away.

The cooking compartment gets very hot when the cleaning function is in progress.

- ▶ Never open the appliance door.
- ► Allow the appliance to cool down.
- ► Keep children at a safe distance.

The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ► Keep children at a safe distance.

2 Preventing material damage

2.1 General

ATTENTION

Alcoholic vapours may catch fire in the hot cooking compartment and cause permanent damage to the appliance. The appliance door may spring open due to an explosion and it may fall off. The door panels may shatter and fragment. Due to the resulting negative pressure, the cooking compartment may become considerably deformed inwards.

 Do not heat spirits (≥ 15% vol.) when undiluted (e.g. for marinating or pouring over food).

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ► Do not use the appliance if there is water on the cooking compartment floor.
- Wipe away any water on the cooking compartment floor before operation.

Objects on the cooking compartment floor at over 50 °C will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place any accessories, greaseproof paper or foil of any kind on the cooking compartment floor.
- Only place cookware on the cooking compartment floor if a temperature under 50 °C has been set.

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- Never pour water into the cooking compartment when it is still hot.
- Never place cookware containing water on the cooking compartment floor.

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- Allow the cooking compartment to dry after use.
- Do not keep moist food in the cooking compartment for a long time with the door closed.
- ▶ Do not store food in the cooking compartment.
- ► Take care not to trap anything in the appliance door. Fruit juice dripping from the baking tray leaves stains that cannot be removed.
- When baking very juicy fruit flans, do not pack too much on the baking tray.
- ▶ If possible, use the deeper universal pan.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ► Never use oven cleaner in the cooking compartment when it is still warm.
- Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.

- ► Keep the seal clean at all times.
- Never operate the appliance if the seal is damaged or

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.
- ▶ Do not place cookware or accessories on the appliance door.

With certain models, accessories may scratch the door pane when closing the appliance door.

Always push accessories fully into the cooking compartment.

This may damage the control element Twist Pad Flex.

- ► Do not use abrasive or corrosive products, such as citric acid, vinegar, aggressive cleaning agents or glass ceramic cleaners.
- ► Do not use stainless steel care products.
- Never clean it in the dishwasher.
- Never immerse it in water.
- Clean the control element Twist Pad Flex using a soft cloth moistened with soapy water.

The removable control element Twist Pad Flex is magnetic. Metal particles which stick to the underside may scratch the control panel.

- Keep the control element Twist Pad Flex clean.
- ► Remove all metal particles on the underside.

The magnet in the removable control element Twist Pad Flex may affect other appliances and irreparably damage magnetic data carriers.

- ► Keep the control element Twist Pad Flex away from magnetic data carriers, e.g. video cassettes, disks, credit cards or cards with magnetic strips
- ► Keep the control element Twist Pad Flex away from televisions and monitors.

If aluminium foil comes into contact with the door pane, it could cause permanent discolouration.

▶ Do not allow aluminium foil in the cooking compartment to come into contact with the door pane.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

► Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Only preheat the appliance if the recipe or the recommended settings tell you to do so.

- → "How it works", Page 37
- Not preheating the appliance can reduce the energy used by up to 20%.

Use dark-coloured, black-coated or enamelled baking tins.

These types of baking tin absorb the heat particularly well.

Open the appliance door as little as possible during operation.

This maintains the temperature in the cooking compartment and eliminates the need for the appliance to reheat.

When baking multiple dishes, do so in succession or in parallel.

▼ The cooking compartment is heated after baking the first dish. This reduces the baking time for the subsequent cakes.

For longer cooking times, you can switch the appliance off 10 minutes before the cooking time ends.

▼ There is sufficient residual heat to finish cooking the dish.

Remove any accessories that are not being used from the cooking compartment.

✓ Accessories that are not being used do not need to be heated.

Allow frozen food to defrost before cooking.

▼ This saves the energy that would otherwise be reauired to defrost it.

Switch off the display in the basic settings.

- → "Basic settings", Page 19
- Energy is saved when the display is switched off.

Note: In accordance with the EU Ecodesign Directive 2023/826, this appliance is in a different state when switched off. This is referred to below as low power mode

Even when the main function is not active, the appliance needs energy for:

- Detecting operation of the touch keys
- Monitoring door opening
- Editing the time (without display)

By definition, therefore, there is neither an "off" nor a "standby" mode, which is why the term low power mode is used. EN IEC 60350-1:2023 must be used to measure low power mode.

4 Familiarising yourself with your appliance

4.1 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

On certain models, specific details such as colour and shape may differ from those pictured.

🗥 WARNING – Danger: Magnetism!

Caution: Magnetism

Caution for people with pacemakers


Permanent magnets are used in the control panel and in the control elements. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

- Persons with electronic implants must stand at least 10 cm away from the control panel and the magnetic controls.
- Never put the control in your pockets.



Children and adults may be injured by the falling control Twist Pad Flex.

- ► Remove the control element Twist Pad Flex before cleaning.
- ► Only place the control Twist Pad Flex at one of the specified positions on the control panel.

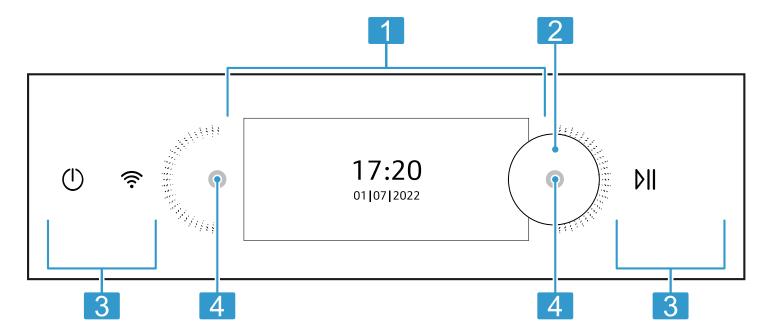

- Display → "Display", Page 7
 - Twist Pad Flex¹ → "Control element Twist Pad Flex", Page 7

4.2 Display

You can configure all the functions on your appliance via the display.

The main menu provides an overview of your appliance's functions.

→ "Functions", Page 9

Navigating

Direction	Use
Navigate to the left	Swipe right on the display with your finger
Navigate to the right	Swipe left on the display with your finger

Setting values

To adjust a setting, touch the appropriate place on the display with your finger. The settings area appears on the display. Swipe left or right over this settings area on the display with your finger until the required setting is magnified.

- **Buttons** → "Buttons", Page 8
- Magnets for attaching the control element Twist Pad Flex are located behind the control panel

Values	Use
Increase	Swipe right on the display with your finger
Decrease	Swipe left on the display with your finger

To set values precisely, keep your finger close to the required value on the scale until a more precise scale appears.

4.3 Control element Twist Pad Flex 1

You can change the setting values by turning the control element Twist Pad Flex.

The Twist Pad Flex control element is magnetic and can be removed. It can be mounted to the right or left next to the display and is automatically centred.

¹ Not included in the scope of delivery → "Other accessories", Page 12

⚠ WARNING – Danger: Magnetism!



Caution: Magnetism

Caution for people with pacemakers

Permanent magnets are used in the control panel and in the control elements. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

- Persons with electronic implants must stand at least 10 cm away from the control panel and the magnetic controls.
- Never put the control in your pockets.

⚠ WARNING – Risk of injury!



Children and adults may be injured by the falling control Twist Pad Flex.

 Remove the control element Twist Pad Flex before cleaning.

► Only place the control Twist Pad Flex at one of the specified positions on the control panel.

ATTENTION

The removable control element Twist Pad Flex is magnetic. Metal particles which stick to the underside may scratch the control panel.

- ► Keep the control element Twist Pad Flex clean.
- ▶ Remove all metal particles on the underside.

The magnet in the removable control element Twist Pad Flex may affect other appliances and irreparably damage magnetic data carriers.

- ► Keep the control element Twist Pad Flex away from magnetic data carriers, e.g. video cassettes, disks, credit cards or cards with magnetic strips
- ► Keep the control element Twist Pad Flex away from televisions and monitors.

4.4 Classic Mode

You can also operate the appliance in Classic Mode using 2 Twist Pad Flex control elements.

You can find more information on Classic Mode in the interactive user manual on our website. -> Operating -Operation - Classic Mode

4.5 Buttons

The buttons are touch-sensitive areas. To select a function, press the corresponding button.

Symbol	Name	Use
(1)	On/Off	Switch the appliance on or off
िं	Home Connect	Display for Home Connect. The field has no further function. When the symbol lights up, the appliance is connected.
\overline{DII}	Start/stop	Start or pause the appliance

4.6 Cooking compartment

Various functions in the cooking compartment provide support when operating your appliance.


Shelf supports

The shelf supports in the cooking compartment enable vou to place accessories at different heights.

→ "Accessories", Page 11

Your appliance has 4 shelf positions. The shelf positions are numbered from bottom to top.

The shelf supports are equipped with pull-out rails on one or more levels, depending on the appliance type. You can remove the shelf supports, e.g. for cleaning. → "Rails", Page 27

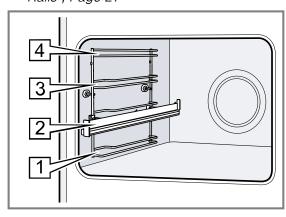

Lighting

One or more oven lights illuminate the cooking compartment.

When you open the appliance door, the light in the cooking compartment switches on. If the appliance door remains open for longer than 15 minutes, the light switches off again.

For most functions, the lighting is switched on during operation. The lighting switches off again when the operation ends.

Cooling fan

The cooling fan switches on and off depending on the appliance's temperature. The hot air escapes above the door.

ATTENTION

Covering the ventilation slots will cause the appliance to overheat.

▶ Do not cover the ventilation slots.

To cool down the appliance and remove residual moisture from the cooking compartment, the cooling fan runs for a certain time after operation.

Note: You can change the run-on time in the basic settings. If you frequently prepare very moist food or keep it warm in the cooking compartment, set a longer run-on time.

→ "Basic settings", Page 19

Appliance door

If you open the appliance door during operation, the operation stops. If you close the appliance door, operation resumes automatically.

5 Functions

The main menu provides an overview of your appliance's functions.

Tip: Depending on the appliance type, additional or more comprehensive functions are available to you with the Home Connect app. You can find more information about this in the app.

Function	Name	Use
	Types of heating	Select the required type of heating and temperature for your food
\bigcirc	Favourites	Select saved favourites → "Favourites", Page 18
	Dishes	Use programmes or recommended settings for various types of food → "Dishes", Page 17
<u></u>	Cleaning	 Pyrolytic self-cleaning cleans the cooking compartment almost by itself → "Pyrolytic self-cleaning cleaning function", Page 25 Easy Clean removes light dirt from the cooking compartment → "Easy Clean cleaning aid", Page 26 Drying function fries the cooking compartment → "Drying", Page 27
€	Basic settings	Individually adjust the appliance settings → "Basic settings", Page 19

5.1 Heating functions

This is where you will find an overview of the types of heating. You will find recommendations for using the types of heating.

For temperatures above 275 °C, the appliance reduces the temperature to approx. 275 °C after around 40 minutes.

Symbol	Heating function	Temperature	Use
L	Circo Therm hot air	30 - 230 °C	Bake or roast on one or more levels. The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment.
=	Top/bottom heat	30 - 275 °C	Traditionally bake or roast on one level. This type of heating is especially good for cakes with moist toppings. The heat is emitted evenly from above and below.
c %	Circo Therm gentle	125 - 230 °C	For gently cooking selected types of food on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back wall around the cooking compartment. The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat. This type of heating is used to determine the energy consumption in circulating-air mode and the energy efficiency class.
	Top/bottom heat gentle	150 - 250 °C	For gently cooking selected types of food without preheating. Heat is emitted from above and below. This type of heating is used to determine the energy consumption in the conventional mode.
W .	Circo-roasting	30 - 275 °C	Roast poultry, whole fish or larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.
<u>&</u>	Circotherm intensive	30 - 275 °C	Cook pizza or food that requires a lot of heat from below. The bottom heating element and the ring-shaped heating element in the back wall heat the cooking compartment.
	Bread baking setting	180 - 275 °C	For baking bread, bread rolls and baked goods that require high temperatures.

Symbol	Heating function	Temperature	Use
****	Full-surface grill	50 - 290 °C	For grilling flat items such as steaks, sausages or bread, and for cooking au gratin. The entire area below the grill element becomes hot.
····	Centre-area grill	50 - 290 °C	For grilling small amounts of steaks, sausages or bread, and for cooking au gratin. The central area below the grill element becomes hot.
_	Bottom heat	30 - 250 °C	For cooking in a bain marie and for baking food for extra time. The heat is emitted from below.
	Low-temperature cooking	70 - 120 °C	For gentle, slow cooking of seared, tender pieces of meat in cookware without a lid. The heat is emitted evenly from above and below at a low temperature.
	Dough proving	30 - 50 °C	For proving dough and culturing yoghurt. Dough will prove more quickly than at room temperature. The surface of the dough does not dry out.
<u>=</u>	Plate warming	30 - 90 C	For heating cookware.
\cong	Keep warm	50 - 100 °C	For keeping cooked food warm.

5.2 Additional options

You can find an overview of other options here. To display the options, press :

Symbol	Name	Use
- <u>\</u> -	Lighting	Switch the lighting in the cooking compartment on or off
Ô	Timer	Set the timer
~	Childproof lock	Activate the childproof lock
	Remote start	Activate remote start → "Home Connect ", Page 21

5.3 Symbols

You can find an overview of other symbols on the display here.

Symbol	Name	Use
<u> </u>	Save setting	Save the setting
	Back	Navigate back
$\overline{\times}$	Close	Close the message
<u> </u>	Reset	Reset the cooking time
5	Reset	Reset the values
	Change	Change the selection
i	Information	Display information
₽ŝ	Rapid heating	Activate or deactivate the rapid heating function
<u></u>	Home Connect	 Home network and Home Connect server connected The number of lines shows the signal strength of the home network → "Home Connect ", Page 21
Z	Home network	Home network not connected → "Home Connect ", Page 21
((îx	Home Connect server	Home Connect server not connected → "Home Connect ", Page 21
E.A.	Remote diagnostics	Remote diagnostics activated → "Home Connect ", Page 21

6 Accessories

Use original accessories. These have been made especially for your appliance.

Note: Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.

Accessories	Use
Wire rack	 Cake tins Ovenproof dishes Cookware Meat, e.g. roasting joints or steak Frozen meals
Universal pan	 Moist cakes Baked items Bread Large roasts Frozen meals Catch dripping liquids, e.g. fat when grilling food on the wire rack.
Baking tray	Tray bakesSmall baked items
Meat thermometer	High-precision roasting or cooking. → "Meat probe", Page 15

6.1 Locking function

The locking function prevents the accessories from tilting when they are pulled out.

You can pull out the accessories approximately halfway without them tipping. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.


6.2 Sliding accessories into the cooking compartment

Always slide the accessory into the cooking compartment the right way round. This is the only way to ensure that accessories can be pulled out approximately halfway without tipping.

- 1. Turn the accessories so that the notch a is at the rear and is facing downwards.
- 2. Insert the accessory between the two guide rods for a shelf position.

Wire rack


Insert the wire rack with the open side facing the appliance door.

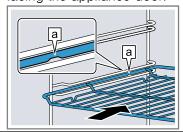

Tray


Slide the tray in with the sloping edge **b** towards the appliance door.

E.g. universal pan or baking tray

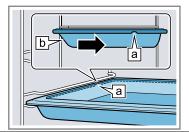

Place the accessories on the inserted pull-out rails.

Wire rack or Position the accessory such that it is inbaking tray serted on the rear stop a of the pull-out system.

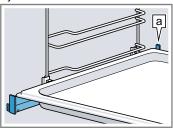

Note: The pull-out rails lock in place when they are fully pulled out. Gently push the pull-out rails back into the cooking compartment.

3. Push the accessory all the way in, making sure that it does not touch the appliance door.


Note: Take any accessories that you will not be using out of the cooking compartment while the appliance is in operation.

Combining accessories

You can combine the wire rack with the universal pan to catch any liquid that drips down.

- 1. Place the wire rack on the universal pan so that both spacers a are on the rear edge of the universal pan.
- 2. Insert the universal pan between the two guide rods for a shelf position. In so doing, the wire rack is on top of the upper guide rod.

Wire rack on universal pan

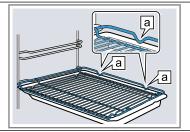

6.3 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for vour appliance in our brochures and online: www.neff-home.com

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer

7 Before using for the first time

Configure the settings for initial start-up. Clean the appliance and accessories.

7.1 Initial use

After connecting the appliance to the power supply, you must configure the settings for its initial start-up. It may take a few minutes for the settings to appear on the display.

Notes

- You can adjust the settings at any time in the basic settinas.
 - → "Basic settings", Page 19
- You can also use Home Connect to configure the settings. When your appliance is connected, follow the instructions in the app.
 - → "Home Connect ", Page 21

Setting the language

Requirement: The appliance is connected to the power supply.

- **1.** Press ① to switch the appliance on.
- 2. Swipe left or right to select the required language.
- 3. Press the required language.
- **4.** Press \rightarrow to confirm the language.

Setting up Home Connect

Note: You can skip Home Connect set-up by pressing "Later". Next. set the clock.

- 1. Press "Connect" to set up Home Connect.
- 2. Make all other settings for initial start-up in the Home Connect app.

Setting the time

- 1. Swipe left or right to select the hours.
- **2.** Press the minutes.
- 3. Swipe left or right to select the minutes.
- **4.** Press \checkmark to confirm the time.

Setting the date

1. Swipe left or right to select the correct year.

- **2.** Press the month.
- 3. Swipe left or right to select the correct month.
- 4. Press the day.
- 5. Swipe left or right to select the correct day.
- **6.** Press \checkmark to confirm the date.
- 7. Press "OK" to end the initial start-up.
- 8. Open and close the appliance door once.
- ▼ The appliance will perform a self-test, after which it will be ready to use.
- ▼ The initial start-up is now complete.

7.2 Cleaning the appliance

Before using the appliance to cook food for the first time, you must clean the cooking compartment and accessories.

- 1. Remove the product information, accessories and any leftover packaging (e.g. polystyrene pellets) from the cooking compartment.
- 2. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
- **3.** Press ① to switch the appliance on.
 - → "Switching on the appliance", Page 13
- 4. Set the required type of heating and temperature for the heat-up process and press III to start.
 - → "Setting the type of heating and temperature", Page 13

Heating up		
Type of heating	Circo Therm hot air &	
Temperature	Maximum	
Cooking time	1 hour	

- 5. Ventilate the kitchen while the appliance is heating.
- **6.** Press ① to switch off the appliance after 1 hour. → "Switching off the appliance", Page 13
- 7. Allow the appliance to cool down.
- 8. Clean the smooth surfaces with soapy water and a dish cloth.
- 9. Thoroughly clean any accessories you used with soapy water and a dish cloth.

8 Basic operation

8.1 Switching on the appliance

ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ► Do not use the appliance if there is water on the cooking compartment floor.
- Wipe away any water on the cooking compartment floor before operation.
- ▶ Press ① to switch the appliance on.

Notes

- In the basic settings, you can specify whether the display shows the main menu or another function when the appliance is switched on.
 - → "Basic settings", Page 19
- If you do not perform any actions on the appliance for an extended period, it will automatically switch itself

8.2 Switching off the appliance

► Press ① to switch the appliance off.

Notes

- The residual heat indicator will appear on the display while the cooking compartment is still hot.
 - → "Residual heat indicator", Page 13
- The cooling fan will continue to run until the cooking compartment has cooled down.
 - → "Cooling fan", Page 8

8.3 Residual heat indicator

After you have switched off the appliance, the residual heat indicator will appear on the display.

Display	Temperature
Residual heat high	Over 120 °C
Residual heat low	Between 60 and 120 °C

8.4 Setting the type of heating and temperature

- **1.** Press ① to switch the appliance on.
- 2. Press "Types of heating".
- 3. Turn the control element Twist Pad Flex or swipe left or right on the display until the required type of heating appears.
- **4.** Press the type of heating.
- 5. Press "Temperature".
- 6. Turn the control element Twist Pad Flex or swipe left or right on the display to select a temperature.
- **7.** Press \checkmark to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immediately.

Also available to select:

- Rapid heating → Page 19
- Cooking time → Page 14
- Ready at → Page 15
- → "Meat probe", Page 15
- Information → Page 13

- **8.** Press III to start the operation.
- ✓ The cooking time appears on the display.
- For some types of heating, the heat-up indicator can be viewed in the preheating phase. The optimal time to place your food in the cooking compartment is as soon as the heat-up indicator is filled.
- 9. When the food is ready, use ① to switch the appliance off.

8.5 Changing the temperature

You can also change the temperature once you have started the operation.

- **1.** Press ^.
- 2. Press "Temperature".
- 3. Turn the control element Twist Pad Flex or swipe left or right on the display until the changed temperature appears.
- **4.** Press \checkmark to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immedi-
- ✓ The temperature is changed.

8.6 Changing the type of heating

If you switch to a different type of heating, the appliance will reset all the settings.

- **1.** Press III to pause operation.
- **2.** Press to switch to the types of heating.
- 3. Turn the control element Twist Pad Flex or swipe left or right on the display until the changed type of heating appears.
- **4.** Press the type of heating that you want to use.
- **5.** Adjust the temperature or level, if required.
- **6.** Press III to start the operation.

8.7 Pausing operation

- 1. Press II.
- 2. Press III again to resume operation.

8.8 Displaying information

Note: In most cases, you can call up information about the function that you have just started.

- 1. Press "Information".
- ▼ The information will be displayed for a few seconds.
- **2.** Press \times to close the information.

8.9 Keeping warm over an extended period

You can use your appliance to keep meals warm for up to 24 hours without changing the behaviour of the appliance. Use the time functions and change the basic set-

Note: If you open the appliance door during operation, the appliance stops heating. When you close the appliance door, the appliance continues to heat again. To ensure that the behaviour of the appliance is not changed during operation, only open the appliance door once the set time has elapsed.

- 1. Change the basic settings.
 - → "Basic settings", Page 19
 - ► Change the "Lighting" basic setting to "Always off".
 - ► Change the "Standby screen" basic setting to "On".
 - ► Change the "Signal tone" basic setting to "Very short duration".
- ▼ This will ensure that the light in the cooking compartment is always off while the appliance is in operation and when you open the appliance door. The clock display does not change. The duration of the signal tone is reduced at the end of the operation.
- 2. Set the required operating mode.
 - → "Heating functions", Page 9
- Set the required cooking time depending on the operating mode.
 - → "Setting the cooking time", Page 14
 - → "Time-setting options", Page 14

- **4.** Use "End" to set the time at which the operation should end.
 - → "Setting the "Ready at" time for delayed starts", Page 15
 - → "Time-setting options", Page 14
- **5.** Place the food in the cooking compartment before the appliance starts to heat.
- **6.** Press III to start the operation.
- ▼ The display shows the time remaining until the operation starts. The appliance is in standby mode.
- Once the start time has been reached, the appliance starts heating and the cooking time starts counting down.
- 7. When the operation has ended, remove the food from the cooking compartment. The appliance automatically switches off completely after approximately 15 to 20 minutes.

Note: If required, change the different basic settings again.

9 Time-setting options

Your appliance has different time-setting options, with which you can control its operation.

•	'	
Time-setting option	Use	
Timer 🗘	You can set the timer to run independently of the appliance during operation. The timer does not affect the appliance.	
Cooking time ⊢	Once the set duration has elapsed, the appliance stops heating automatically.	
Ready at →	Along with the duration, you can set the time at which you want the opera- tion to end. The appliance starts up automatically so that the operation fin- ishes at the required time.	

9.1 Timer

You can set the timer regardless of whether the appliance is on or off.

Setting the timer

- 1. Press :
- 2. Press \Diamond .
- 3. Press Hours, Minutes or Seconds.
- **4.** Turn the control element Twist Pad Flex or swipe left or right on the display to select the timer duration.
- **5.** Press ▷ to confirm the setting.
 - If ▷ does not appear, the setting is applied immediately.
- appears on the display. The timer duration counts down.
- Once the timer duration has elapsed, an audible signal sounds.
- 6. Press any button to end the audible signal.

Changing the timer

- 1. Press :
- 2. Press Q.
- 3. Press II.

- 4. Press Hours, Minutes or Seconds.
- **5.** Turn the control element Twist Pad Flex or swipe left or right on the display to change the timer duration.
- **6.** Press ▷ to confirm the setting.
 - If ▷ does not appear, the setting is applied immediately.

Cancelling the timer

- 1. Press :.
- 2. Press Q.
- **3.** Press 9 to reset the timer duration.

9.2 Cooking time

Once the set duration has elapsed, the appliance stops heating automatically. You can only use the cooking time in conjunction with a type of heating.

Setting the cooking time

- 1. Set a type of heating and a temperature.
- 2. Press "Cooking time".
- **3.** Turn the control element Twist Pad Flex or swipe left or right on the display to select the duration.
- **4.** Press ▷ to confirm the setting.
 - If D does not appear, the setting is applied immediately.
- **5.** Press III to start operation with a cooking time.
- The cooking time appears on the display. The cooking time counts down.
- ✓ When the time has elapsed, a signal sounds.
- 6. Press any button to end the audible signal.

Changing the cooking time

- **1.** Press ^.
- 2. Press "Cooking time".
- **3.** Turn the control element Twist Pad Flex or swipe left or right on the display to change the cooking time.
- **4.** Press ▷ to confirm the setting.
 - If ▷ does not appear, the setting is applied immediately.

Cancelling the cooking time

- 1. Press ^.
- 2. Press "Cooking time".
- 3. Reset the cooking time using 9.
- **4.** Press ✓ to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immedi-

9.3 Delayed start/"Ready at" time

With this function, the appliance automatically switches itself on, and then switches itself off at the preselected end time. To enable it to do this, you set the cooking time (duration) and specify when you want your food to be ready. You can only use the delayed start function in conjunction with a heating function.

Setting the "Ready at" time for delayed starts

- Do not leave food that spoils easily in the cooking compartment for too long.
- You cannot use the delayed start function with every type of heating.
- 1. Place the food into the cooking compartment and close the appliance door.
- 2. Set a type of heating and a temperature.
- 3. Press "Cooking time".
- 4. Press Hours or Minutes.
- 5. Turn the control element Twist Pad Flex or swipe left or right on the display to select the duration.
- **6.** Press \checkmark to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immediately.
- 7. Press "Ready at".
- ▼ The time at which your food will be ready will appear on the display.

- 8. To select the end time, turn the control element Twist Pad Flex or swipe to the left or right on the display.
- **9.** Press \checkmark to confirm the setting.
 - ► If ▷ does not appear, the setting is applied immediately.

10. Press III to confirm the delayed start.

- ✓ Once the start time has been reached, the appliance starts heating and the cooking time starts counting
- ✓ When the time has elapsed, a signal tone sounds.
- 11. Press any button to end the audible signal.

Changing the "Ready at" time for delayed starts

- 1. Press III.
- 2. Press "Ready at".
- 3. Turn the control element Twist Pad Flex or swipe left or right on the display to change the end time.
- **4.** Press \checkmark to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immedi-
- 5. Press I to confirm the delayed start.

Cancelling the "Ready at" time for delayed starts

- 1. Press III.
- 2. Press "Ready at".
- **3.** Use \mathfrak{D} to reset the end time.
- **4.** Press \checkmark to confirm the setting.
 - ▶ If ▷ does not appear, the setting is applied immediately.
- ▼ The end time corresponds to the current time plus the set cooking time.
- ✓ Press III to start operation with a cooking time.

Note: If you want to continue the operation without a cooking time, cancel the cooking time.

→ "Cancelling the cooking time", Page 15

10 Meat probe

Cook with precision by inserting the meat probe / into the food and setting a core temperature on the appliance. The meat probe measures the core temperature inside the food. Once the set core temperature has been reached in the food, the appliance automatically stops heating.

10.1 Suitable types of heating with the meat probe

Only certain types of heating are suitable for use with the meat probe.

- "Circo Therm hot air" &
- "Top/bottom heat"
- "Circo Therm gentle" 🖧
- "Top/bottom heat gentle" =
- "Circo-roasting" \(\)
- "Circotherm intensive" &
- "Bread baking setting" #
- "Bottom heat" =
- "Low-temperature cooking" \(\overline{\text{\texi{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tiny}\text{\te}\tint{\texi}\text{\text{\text{\text{\text{\texi}\text{\text{\texit{\text{\text{\text{\texi}\text{\text{\texi}\text{\text{\text{\texi}\text{\texi}\text{\text{\text{\text{\texi}\text{\texit{\text{\text{\tet
- "Keep warm" ⊕

10.2 Inserting the meat probe

Use the meat probe supplied or order a suitable meat probe from our customer service.

⚠ WARNING – Risk of electric shock!

Using the wrong meat probe could damage the insulation.

► Only use the meat probe for this specific appliance.

ATTENTION

Otherwise the meat probe may be damaged.

- ▶ Do not trap the cable of the meat probe.
- ► To prevent the meat probe from being damaged by excessive heat, there must be a gap of a few centimetres between the arill element and the meat probe. The meat may expand during the cooking process.

⚠ WARNING – Risk of injury!

The meat probe is sharp.

► Handle the meat probe with care.

Note: If the pull-out rails are attached at level 3, you cannot insert the roasting sensor in the cooking compartment. Unhook the pull-out rails or hook them in at a different level.

- → "Rails", Page 27
- 1. Insert the meat probe into the food.

The meat probe has three measuring points. Ensure that at least the middle measuring point is inserted in the food.

Thin	Insert the meat probe into the thickest part
pieces of	of the meat from the side.
meat	

Thick pieces of meat


Insert the meat probe diagonally into the meat from above, pushing it in as far as possible.



Note: If you want to turn the food, insert the meat probe into the side of the food so that it does not need to be removed when turning.

Poultry


Insert the meat probe into the thickest part of the breast, pushing it in as far as possible. The meat probe can be inserted horizontally or vertically depending on the size and shape of the poultry.

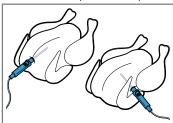

Turn the poultry and place it on the wire rack breast-side down.

Fish

When cooking whole fish, insert the meat probe behind the fish's head in the direction of the spine, pushing it in as far as possible.

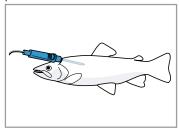

Place the fish on the wire rack in the swimming position without turning it, e.g. using half a potato as a support.

- 2. Place the food with the meat probe into the cooking compartment.
- **3.** Plug the meat probe into the socket on the left-hand side of the cooking compartment.

Note: Do not remove the meat probe when turning the food. Once you have turned the food, check that the meat probe is correctly positioned in the food.

10.3 Core temperatures of different foods

This is where you can find the suggested core temperatures for different foods.

These suggestions depend on the quality and the size/shape of the food. Do not use frozen food.

Poultry	Core temperature in °C
Chicken	80 - 85
Chicken breast	75 - 80
Duck	80 - 85
Duck breast, medium rare	55 - 60
Turkey	80 - 85
Turkey breast	80 - 85
Goose	80 - 90
Pork	Core temperature in °C
Shoulder of pork	85 - 90
Fillet of pork, medium rare	62 - 70
Pork loin, well done	72 - 80
Beef	Core temperature in °C
Tenderloin or sirloin, rare	45 - 52
Tenderloin or sirloin, medium rare	55 - 62
Tenderloin or sirloin, well done	65 - 75
Veal	Core temperature in °C
Joint of veal or hock, lean	75 - 80
Joint of veal, shoulder	75 - 80
Veal knuckle	85 - 90
Lamb	Core temperature in °C
Leg of lamb, medium rare	60 - 65
Leg of lamb, well done	70 - 80
Saddle of lamb, medium rare	55 - 60
Fish	Core temperature in °C
Fish, whole	65 - 70
Fish fillet	60 - 65
Other	Core temperature in °C
	80 - 90

10.4 Setting the oven temperature and core temperature

You can set a core temperature of between 30 $^{\circ}\text{C}$ and 99 $^{\circ}\text{C}.$

Requirements

- The food with the meat probe is in the cooking compartment.
- The meat probe is inserted in the cooking compartment.
- 1. Press "Types of heating".
- **2.** Select a suitable type of heating and cooking compartment temperature.

Set the cooking compartment temperature at least 10 °C higher than the core temperature.

Do not set the cooking compartment temperature to higher than 250 °C.

- 3. Press "Meat probe".
- **4.** Turn the control element Twist Pad Flex or swipe left or right on the display to select the core temperature.
- **5.** Press \checkmark to confirm the settings.
 - If ▷ does not appear, the setting is applied immediately.
- **6.** Press III to start cooking using the meat probe.
- Once the required core temperature has been reached, an audible signal sounds and the appliance stops heating. With the "Low-temperature cooking" type of heating, the appliance continues to heat.
- **7.** Press ① to switch the appliance off.

8. MARNING - Risk of burns!

The cooking compartment, accessories and meat probe become very hot.

Always use oven gloves to remove hot accessories and the meat probe from the cooking compartment.

Pull the meat probe out of the socket in the cooking compartment.

Tip

You can also combine the meat probe with a different operating mode, e.g.:

■ → "Dishes", Page 17

Note: You can use the meat probe even if no core temperature is set. You can read off the core temperature of the food on the display and manually end the operation, if required.

10.5 Changing the cooking compartment temperature or core temperature

- 1. Press ^.
- 2. Press the appropriate temperature.
- **3.** Turn the control element Twist Pad Flex or swipe left or right on the display to change the temperature.

11 Dishes

"Dishes" helps you to use your appliance to prepare different dishes by selecting the optimum settings automatically.

11.1 Cookware for dishes

The cooking result depends on the composition of the meat and the size of cookware.

You should therefore use heat-resistant cookware that is suitable for temperatures up to 300 °C. Glass or glass ceramic cookware is best. The joint should cover approx. 2/3 of the cookware base.

Cookware made from the following material is not suitable:

- Bright, shiny aluminium
- Unglazed clay
- Plastic or plastic handles

11.2 Setting options for the dishes

To cook the dishes perfectly, the appliance uses different settings depending on the dish.

The display shows you the settings that are used. You can adjust certain settings. Follow the instructions on the display.

Note: The cooking result depends on the quality and composition of the food. Use fresh and, ideally, chilled food. Use frozen food straight from the freezer.

Tips and information about the settings

If you set a dish, the display shows relevant information for this dish, e.g.:

- Suitable shelf position
- Suitable accessory or cookware
- Added liquid
- Time for turning or stirring

When this time is reached, a signal sounds.

To call up the information, press "Information". Some notifications are displayed automatically.

Programmes

The optimum type of heating, temperature and cooking time are preset for programmes.

To achieve an optimal cooking result, you must also set the weight, thickness or the cooking level. You can set the weight only in the intended range.

Unless otherwise indicated, set the total weight for your dish.

Recommended settings

For the recommended settings, the optimum type of heating is preset as a fixed value. You can adjust the set temperature and the cooking time.

Dishes with meat probe

You can use the meat probe $\ensuremath{\mathscr{P}}$ for some dishes. You can adjust the temperature and the core temperature.

→ "Meat probe", Page 15

Remaining time forecast for the operation

If your appliance is connected to Home Connect, the appliance can forecast the expected remaining time for the cooking process.

The initial remaining time appears on the display after approx. 1 minute. The remaining time is continually recalculated and updated.

Note: The remaining time forecast is not available for all dishes.

11.3 Overview of the dishes

You can see which individual dishes are available to you on the appliance. The dishes depend on the features of your appliance.

The dishes are sorted by category and food.

Note: In the basic settings, you can regionally specialise the displayed dishes.

→ "Basic settings", Page 19

Category	Food
Cakes	Cakes in tins Cakes on a baking tray Small baked items Biscuits
Bread, bread rolls	Bread Bread rolls
Pizza, sa- voury cakes, quiche	Pizza Savoury cakes, quiche
Bakes, soufflés	Bake, savoury, fresh, cooked ingredients Potato gratin, raw ingredients, 4 cm deep Lasagne, fresh Lasagne, chilled Bake, sweet, fresh Fruit crumble Soufflés in individual moulds Yorkshire pudding
Poultry	Chicken Duck, goose Turkey
Meat	Pork Beef Veal Lamb Game Meat dishes
Fish.	Fish, whole Fish fillets
Frozen products	Pizza Bakes Potato products Poultry, fish Bread rolls
Side dishes, vegetables	Potatoes Vegetables

11.4 Setting a dish

1. Press "Dishes".

- 2. Press the required category.
- **3.** Press the required food.
- **4.** Press the required dish.

Note: The setting options vary depending on the dish. → "Setting options for the dishes", Page 17

- ▼ The settings for the dish appear on the display.
- **5.** Adjust the settings if required.

The setting options vary depending on the dish.

- → "Setting options for the dishes", Page 17
- **6.** For information about the accessory and shelf position, for example, press "Information".
- 7. Press III to start the operation.
- The appliance starts to heat and the cooking time counts down.
- ✓ When using a roasting sensor, no cooking time is displayed. The setting values and how long the appliance has already been in operation are shown on the display. If the appliance is connected to Home Connect, the forecast time remaining is displayed.
 → "Remaining time forecast for the operation", Page 17
- Once the dish is ready, a signal sounds. The appliance stops heating.
- 8. Decide how you want to continue:

Finish	Dish is ready
Add extra cooking time	→ "Extending the cooking time", Page 18
Keep warm	→ "Keeping a dish warm", Page 18

11.5 Extending the cooking time

- 1. To extend the cooking time, press "Add extra cooking time".
- **2.** Turn the control element Twist Pad Flex or swipe left or right on the display to adjust the settings.
- **3.** Press \checkmark to confirm the settings.
 - If D does not appear, the setting is applied immediately.

11.6 Keeping a dish warm

- 1. To keep the dish warm, press "Keep warm".
- 2. Turn the control element Twist Pad Flex or swipe left or right on the display to change the settings.
- **3.** Press \checkmark to confirm the settings.
 - If ▷ does not appear, the setting is applied immediately.
- **4.** Press I to start the keep warm function.

12 Favourites

In the "Favourites", you can save your settings and use these again.

Note: Depending on the appliance type/software status, you must first download this function to your appliance. You can find more information in the Home Connect app.

12.1 Saving favourites

You can save up to 30 different functions as your favourites.

- **1.** If you set a function, press ♥ "Favourites".
- **2.** If required, change the title of the favourite using the keyboard on the display.
- 3. Press "Save".

12.2 Selecting favourites

If you have saved favourites, you can use these to set the operation.

- 1. Press "Favourites".
- 2. Press the required favourites.
- 3. If required, you can change the settings.
- **4.** Press III to start the operation.

Note

Observe the instructions for the various functions:

■ → "Meat probe", Page 15

12.3 Changing favourites

You can change, sort or rename your saved favourites at any time.

1. Press "Favourites".

- 2. Press the required favourites.
- **3.** Press _∅.
- 4. Change the settings or the title of the favourite.
- 5. Press "Apply" to confirm the change.

12.4 Deleting favourites

- 1. Press "Favourites".
- 2. Press the required favourites.
- 3. Press ♥.
- 4. Press "Delete" to confirm.

12.5 Sorting favourites

- 1. Press "Favourites".
- **2.** Press _0.
- **3.** Press and hold the required favourite and drag it to a different position.

13 Childproof lock

You can secure your appliance to prevent children from accidentally switching it on or changing the settings.

13.1 Activating the childproof lock

The childproof lock disables the control panel to prevent children from accidentally switching on the appliance. To switch on the appliance, deactivate the childproof lock.

Notes

When you activate the childproof lock, the appliance will immediately disable the control panel. The ① button is the exception and will not be disabled.

- You can also activate the appliance door lock.
 → "Basic settings", Page 19
- 1. Press :
- **2.** Press ⇔.
- ▼ "Childproof lock activated" appears on the display.

13.2 Deactivating the childproof lock

► Press and hold "Unlock" until "Childproof lock deactivated" appears.

14 Rapid heating

With the rapid heating function, you can shorten the heat-up time.

From 200 °C, the rapid heating function is activated automatically.

Note: You can deactivate automatic rapid heating from 200 °C in the basic settings.

→ "Basic settings", Page 19

Rapid heating is possible for the following types of heating:

- "Circo Therm hot air" &
- "Top/bottom heat" \(\equiv \)
- "Bread baking setting" =

14.1 Activating rapid heat-up

To ensure an even cooking result, do not place the food in the cooking compartment until rapid heating has come to an end. **Note:** Do not set a cooking time until rapid heating has come to an end.

- **1.** Set a suitable type of heating and a temperature of at least 100 °C.
 - Rapid heating automatically switches on at temperatures of 200 °C and above.
- **2.** Press 8€.
- **3.** Press II to start the operation.
- Once rapid heating has ended, "Rapid heating" switches off automatically and a signal sounds. goes out on the display.
- **4.** Place the food in the cooking compartment.

14.2 Deactivating the "Rapid heat-up" function

- 1. Press ^.
- **2.** Press 8€.

15 Basic settings

You can configure the basic settings for your appliance to meet your needs.

15.1 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

You can find more information about the individual basic settings on the display using "Information".

Basic settings	Selection	
Language	See selection on appliance	
Home Connect	Connect the oven to a mobile end device and remotely control it	
Clock	Time in 24-hour format	
Date	Date in the format DD.MM.YYYY	
Display	Selection	
Brightness	 1 2 3 4 5¹ 	
Standby screen	 On for a limited time On (this setting increases energy consumption) Off ¹ 	
Clock	 Digital + date ¹ Digital Analogue + date Analogue 	
Alignment	Align the display horizontally and vertically	
	· · · · · · · · · · · · · · · · · · ·	
Tone	Selection	
Tone Button tone	· · ·	
	Selection On 1	
Button tone	Selection On 1 Off 1 2 3 4	
Button tone Volume Signal tone	Selection On¹ Off 1 2 3 4 5¹ Very short duration Short duration Medium duration¹	
Button tone Volume Signal tone Appliance set-	Selection On¹ Off 1 2 3 4 5¹ Very short duration Short duration Medium duration Long duration Long duration	

Appliance set- tings	Selection		
Lighting	 On when cooking and opening the door ¹ Only when the door is opened Always off 		
Personalisa- tion	Selection		
Brand logo	 Display ¹ Do not display 		
Operation after switch-on	 Main menu ¹ Types of heating Dishes Favourites 		
Elapsed cook- ing time	 Display ¹ Do not display 		
Regional dishes	 All ¹ European dishes British dishes 		
Dishes	 All ¹ No pork Kosher only 		
Childproof lock	 Keylock only ¹ Door lock + keylock Deactivated 		
Automatic rapid heating	 On ¹ Off 		
Factory set- tings	Selection		
Factory set- tings	CancelRestore		
Appliance information	Display		
Appliance information	Display technical information about the appliance		

15.2 Changing basic settings

- 1. Press ① to switch the appliance on.
- 2. Press "Basic settings".
- **3.** Turn the control element Twist Pad Flex or swipe left or right on the display until the required basic setting or category appears.
- 4. Press the required basic setting or category.
 - Press the required basic setting in a category.
- **5. Note:** With some basic settings, you must remove the control element Twist Pad Flex.
- **6.** Turn the control element Twist Pad Flex or swipe left or right on the display to select the required setting.
- 7. Press the required setting.
- Press ✓ to confirm the change.
 If ✓ does not appear, the change is applied immediately.
- **9.** To change other basic settings, use to return to the basic settings.

¹ Factory setting (may vary according to model)

16 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com.

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

Tip: Please also follow the instructions in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
 - → "Safety", Page 2
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect
- In networked standby mode, the appliance requires a maximum of 2 W.

16.1 Setting up Home Connect

Requirements

- The appliance is connected to the power supply and is switched on.
- You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
- The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
- The mobile device and the appliance are within range of your home network's Wi-Fi signal.
- **1.** Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

16.2 Home Connect settings

You can adjust the Home Connect settings and network settings in your appliance's basic settings. Which settings the display shows will depend on whether Home Connect has been set up and whether the appliance is connected to your home network.

Basic setting	Possible settings	Explanation
Home Connect assistant	Start the assistant Disconnect	You can connect your appliance to the Home Connect app via the Home Connect assistant.
		Note: If you are using the Home Connect assistant for the first time, only the "Start assistant" setting is available.
Wi-Fi	On Off	You can use the Wi-Fi to switch off the network connection for your appliance. When you have connected successfully once, you can deactivate the Wi-Fi and not lose your detailed data. As soon as you activate Wi-Fi again, the appliance connects automatically. Note: In networked standby mode, the appliance requires a maximum of 2 W.
Remote control status Monitoring Manual remote start Permanent remote start		During monitoring, you can only view the operating status of the appliance in the app. If you convert from monitoring or permanent remote start to manual remote start, you must activate the remote start each time. You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start. For permanent remote start, you can start and operate the appliance remotely at any time. If you often operate the appliance remotely, it is helpful to set the remote start to "Permanent".

16.3 Operating the appliance with the **Home Connect app**

You can use the Home Connect app to set and start the appliance remotely.

Combustible objects that are left in the cooking compartment may catch fire.

- Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Requirements

- The appliance is switched off.
- The appliance is connected to the home network and to the Home Connect app.
- In order to be able to set the appliance via the app. the manual or permanent remote start must be selected in the "Remote control status" basic setting.
- 1. To activate manual remote start, press :. You only have to confirm on the oven if you are switching from monitoring or permanent remote start to manual remote start.
 - With permanent remote start, you do not need to confirm on the oven.
- 2. Configure a setting in the Home Connect app and send it to the appliance.

Notes

- When you start the oven using the controls on the appliance itself, the remote start function is activated automatically. You can use the Home Connect app to adjust the settings or start a new pro-
- You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start.

16.4 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimisation, troubleshooting or security updates. This may lead to minor changes of visualizations and operation in the display.

To do this, you must be a registered Home Connect user, have installed the app on your mobile device and be connected to the Home Connect server. As soon as a software update is available, you will be informed via the Home Connect app and will be able to

start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect app if you are in your home network (Wi-Fi). The Home Connect app informs you once installation is successful.

Notes

- The software update consists of two steps.
 - The first step is the download.
 - The second step is the installation on your appliance.
- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.
- Installation takes a few minutes. You cannot use your appliance during installation.
- We recommend that you install security updates as soon as possible.

16.5 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: www.home-connect.com.

16.6 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

17 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

17.1 Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

► Do not use steam- or high-pressure cleaners to clean the appliance.

ATTENTION

Unsuitable cleaning agents damage the surfaces of the appliance.

- ► Do not use harsh or abrasive cleaning products.
- Do not use cleaning products with a high alcohol con-
- Do not use hard scouring pads or cleaning sponges.
- ► Do not use any special cleaners for cleaning the appliance while it is hot.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ► Never use oven cleaner in the cooking compartment when it is still warm.
- ► Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If different cleaning agents are mixed together, there may be a chemical reaction between these.

- ► Do not mix cleaning agents.
- ► Completely remove any cleaning agent residue. Salt contained in new sponge cloths may damage sur-
- Wash new sponge cloths thoroughly before use.

Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Follow the instructions on cleaning the appliance. → "Cleaning the appliance", Page 24

Appliance front

Surface	Suitable cleaning agents	Information
Stainless steel	 Hot soapy water Special stainless steel cleaning products suitable for hot surfaces 	To prevent corrosion, remove any patches of limescale, grease, starch or albumin (e.g. egg white) from stainless steel surfaces immediately. Apply a thin layer of the stainless steel cleaning product.
Plastic or painted surfaces	Hot soapy water	Do not use glass cleaner or a glass scraper. To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.
Glass	Hot soapy water	Do not use glass cleaner or a glass scraper.
Control element Twist Pad Flex	Hot soapy water	Follow the instructions for cleaning the control element Twist Pad Flex. → "Cleaning the Twist Pad Flex control", Page 24

Appliance door

Range	Suitable cleaning agents	Information
Door panels	Hot soapy water	Do not use a glass scraper.
	Oven cleanerSteel wool	Tip: Remove the door panels in order to clean them thoroughly. → "Appliance door", Page 29
Door cover	Made of stainless steel:	Do not use glass cleaner or a glass scraper. Do not use stainless steel care products.
	Stainless steel cleaner Made from plastic: Hot soapy water	Tip: Remove the door cover for thorough cleaning. → "Appliance door", Page 29
Stainless steel interior door frame	Stainless steel cleaner	Discolouration can be removed using stainless steel cleaner. Do not use stainless steel care products.
Door handle	Hot soapy water	To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.

Cooking compartment

Range	Suitable cleaning agents	Information
Enamel surfaces	Hot soapy waterVinegar solutionOven cleanerSteel wool	Soak any heavily soiled areas and use a brush or steel wool. Leave the appliance door open to dry the cooking compartment after cleaning it.

17.2 Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

The appliance and its parts that can be touched become hot during use.

- Caution should be exercised here in order to avoid touching heating elements.
- Young children under 8 years of age must be kept away from the appliance.

⚠ WARNING – Risk of fire!

Loose food remnants, fat and meat juices may catch fire

► Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Requirement: Read the information on cleaning products.

- → "Cleaning products", Page 22
- Clean the appliance using hot soapy water and a dish cloth.
 - ► For some surfaces, you can use alternative cleaning agents.
 - → "Suitable cleaning agents", Page 23
- 2. Dry with a soft cloth.

Cleaning the Twist Pad Flex control

To thoroughly clean the control element Twist Pad Flex, you can dismantle it into 2 parts.



Caution: Magnetism

Caution for people with pacemakers

Permanent magnets are used in the control panel and in the control elements. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

- Persons with electronic implants must stand at least 10 cm away from the control panel and the magnetic controls.
- Never put the control in your pockets.

⚠ WARNING – Risk of injury!



Children and adults may be injured by the falling control Twist Pad Flex.


- Remove the control element Twist Pad Flex before cleaning.
- ► Only place the control Twist Pad Flex at one of the specified positions on the control panel.

ATTENTION

This may damage the control element Twist Pad Flex.

- ► Do not use abrasive or corrosive products, such as citric acid, vinegar, aggressive cleaning agents or glass ceramic cleaners.
- Do not use stainless steel care products.
- Never clean it in the dishwasher.

- Never immerse it in water.
- Clean the control element Twist Pad Flex using a soft cloth moistened with soapy water.
- 1. Press ① on the edge of the stator ② on the rear of the control element Twist Pad Flex and remove the stator b 2.

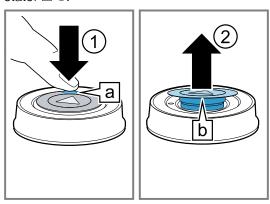

- 2. Clean all of the parts with a cloth moistened with soapy water.
- **3.** Dry all of the parts with a soft cloth.
- 4. Before assembling, leave all of the parts to dry com-
- 5. Reassemble the control element Twist Pad Flex.

18 "Pyrolytic self-cleaning" cleaning function

With the "Pyrolytic self-cleaning" **** cleaning function, the cooking compartment is cleaned virtually automatically. The cleaning function requires approx. 3.9 - 4.8 kilowatt hours.

18.1 Preparing the appliance for the cleaning **function**

To achieve a good cleaning result and prevent damage, prepare the appliance carefully.

⚠ WARNING – Risk of fire!

Combustible objects that are left in the cooking compartment may catch fire.

- ► Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire when the cleaning function is in progress.

- ► Before you start the cleaning function, always remove coarse dirt from the cooking compartment.
- Never clean accessories at the same time.

The outside of the appliance gets very hot when the cleaning function is in progress.

- ► Never hang combustible objects, e.g. tea towels, on the door handle.
- ► Leave the front of the appliance clear.
- Keep children at a safe distance.

If the door seal is damaged, a large amount of heat is generated around the door.

- ► Do not scrub or remove the seal.
- Never operate the appliance if the seal is damaged or missing.
- 1. Remove accessories and cookware from the cooking compartment.

You can also clean the shelf supports along with the pull-out rails.

Tip: Also remove the shelf supports to save energy and achieve a better cleaning result in the cooking compartment.

- → "Rails", Page 27
- 2. Remove coarse dirt from the cooking compartment and from the shelf supports.

Coarse dirt may burn on, making it difficult to remove.

- 3. Use a detergent solution and a soft cloth to clean the surfaces at the edges of the cooking compartment around the door seal.
 - Do not remove or scrub the door seal.
 - Use oven cleaner to remove stubborn dirt from the inner door pane.
- **4.** Remove any objects from the cooking compartment. The cooking compartment must be empty except for the shelf supports.

18.2 Setting the "Pyrolytic self-cleaning" cleaning function

⚠ WARNING – Risk of harm to health!

The cleaning function heats up the cooking compartment to a very high temperature so that food left over from roasting, grilling and baking will burn off. This process releases vapours, which can irritate mucous mem-

- ► Keep the kitchen well ventilated while the cleaning function is running.
- ▶ Do not remain in the room for long periods.
- Keep children and pets away.

The cooking compartment gets very hot when the cleaning function is in progress.

- Never open the appliance door.
- Allow the appliance to cool down.
- Keep children at a safe distance.

The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ► Allow the appliance to cool down.

► Keep children at a safe distance.

Note: The oven light does not light up while the cleaning function is running.

Requirement:

- → "Preparing the appliance for the cleaning function", Page 25
- 1. Press "Cleaning".
- 2. Press "Pyrolytic self-cleaning" ***.
- 3. Press "Level" to set the cleaning setting.

Cleaning set- ting	Cleaning level	Duration in hours
1	Low	Approx. 2:15
2	High	Approx. 2:30

Select the higher cleaning setting if the cooking compartment is particularly dirty or has not been cleaned for a while.

You cannot change the duration of the cleaning function.

Once the cleaning function is in progress, you cannot change the cleaning setting.

- ▼ The duration of the cleaning setting will appear on the display.
- **4.** Press III to start the cleaning function.
- A notification stating that you should carry out the necessary preparatory work for the cleaning function appears on the display.
- **5.** Press "OK" to confirm the notification.
- ▼ The cleaning function starts. The duration counts down on the display.
- Once the cleaning function has run through to the end, an audible signal sounds.

- **6.** After using the cleaning function, prepare the appliance for operation.
 - → "Preparing the appliance after the cleaning function", Page 26

The appliance door will remain locked until the appliance has cooled down sufficiently and \hat{a} has gone out.

18.3 Cancelling the cleaning function

Note: You can no longer stop or change the cleaning function once it has started.

► To cancel the cleaning function, press ① to switch the appliance off.

18.4 Preparing the appliance after the cleaning function

- 1. Allow the appliance to cool down.
- 2. Wipe off any ash that has been left behind in the cooking compartment, on the shelf supports and around the appliance door.
 - → "Cleaning and servicing", Page 22
- 3. Slide the pull-out rails out and in several times. While the cleaning function is running, the rails may become discoloured. This discolouration does not compromise the functionality of the appliance.
- 4. Remove white residues with lemon juice. Note: White residues on the enamel surfaces may be caused by heavy soiling. These food residues are harmless. The deposits do not compromise the functionality of the appliance.

Note: While the cleaning function is running, the frame on the inside of the appliance door or other parts of the door that are made of stainless steel become discoloured. This discolouration does not compromise the functionality of the appliance. The discolouration can be removed using a stainless steel cleaner.

19 "Easy Clean" cleaning aid

Use the "Easy Clean" cleaning aid for intermediate cleaning of the cooking compartment. The "Easy Clean" cleaning aid softens dirt by vaporising the soapy water. It is then easier to remove the dirt.

19.1 Setting the "Easy Clean" cleaning aid

⚠ WARNING – Risk of scalding!

If there is water in the cooking compartment when it is hot, this may create hot steam.

Never pour water into the cooking compartment when the cooking compartment is hot.

Motos

- The oven light does not light up while the cleaning aid is running.
- Do not open the appliance door while the appliance is in operation.

Requirements

 You can only start the cleaning aid once the cooking compartment is cold (room temperature) and the appliance door is closed.

- To remove particularly stubborn dirt, rub washing-up liquid onto dirty areas on the smooth surfaces before starting the cleaning aid.
- **1.** Remove any accessories from the cooking compartment.
- 2. **ATTENTION** Distilled water in the cooking compartment leads to corrosion.
 - ► Do not use distilled water.

Mix 0.4 litres water with a drop of washing-up liquid and pour into the centre of the cooking compartment floor.

- 3. Press "Cleaning".
- 4. Press "Easy Clean".
- 5. Press III to start the cleaning aid.
- A notification stating that you should carry out the necessary preparatory work for the cleaning aid appears on the display.
- 6. Press "OK" to confirm the notification.
- ▼ The cleaning aid starts. The duration counts down on the display.
- Once the cleaning aid has run through to the end, an audible signal sounds.

- 7. Press any button to end the audible signal.
- **8.** After using the cleaning aid, finish cleaning the cooking compartment.
 - → "Wiping down the cooking compartment", Page 27

19.2 Wiping down the cooking compartment ATTENTION

The prolonged presence of moisture in the cooking compartment leads to corrosion.

► After using the cleaning aid, wipe the cooking compartment clean and allow it to dry fully.

Requirement: The cooking compartment must have cooled down.

- **1.** Open the appliance door and remove the remaining water with an absorbent sponge cloth.
- 2. Clean the smooth surfaces in the cooking compartment with a dish cloth or a soft brush. Remove stubborn food remnants using a stainless steel scouring pad.
- **3.** Remove limescale with a cloth soaked in vinegar. Then wipe with clean water and rub dry with a soft cloth (including under the door seal).
- **4.** If there is any stubborn dirt that you are unable to remove, run the cleaning aid again once the cooking compartment has cooled down.
- 5. In order to dry the cooking compartment, leave the appliance door open for around 1 hour or use the drying function.
 - → "Drying", Page 27

20 Drying

20.1 Drying the cooking compartment

⚠ WARNING – Risk of burns!

The appliance becomes hot during operation.

► Allow the appliance to cool down before cleaning.

ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 $^{\circ}$ C, this will damage the enamel.

- ► Do not use the appliance if there is water on the cooking compartment floor.
- Wipe away any water on the cooking compartment floor before operation.

Requirement: The cooking compartment has cooled down.

- Remove any food remnants from the cooking compartment.
- 2. Dry the cooking compartment with a sponge.
- **3.** Remove limescale marks with a cloth soaked in vinegar, then wipe with clean water and dry with a soft cloth.

- **4.** Leave the cooking compartment to dry with the appliance door open for 1 hour or use "Drying function".
 - → "Setting Drying function", Page 27

20.2 Setting "Drying function"

Requirement:

- → "Drying the cooking compartment", Page 27
- 1. Press "Cleaning".
- 2. Press "Drying function".
- ▼ The duration appears on the display. You cannot change the duration of the drying function.
- 3. Start the drying function using III.
- A notification stating that you should carry out the necessary preparatory work for the drying function appears on the display.
- 4. Press "OK" to confirm the notification.
- ▼ The drying function starts. The duration counts down on the display.
- Once the drying function has run through to the end, an audible signal sounds.
- **5.** Leave the appliance door open for 1-2 minutes so that the cooking compartment dries completely.

21 Rails


To thoroughly clean the rails and the cooking compartment, or to replace the rails, you can remove the rails.

21.1 Detaching the rails

The shelf supports get very hot

- ► Never touch the shelf supports when hot.
- ► Always allow the appliance to cool down.
- ► Keep children at a safe distance.
- 1. Lift the rail forwards slightly ① and detach it ②.

2. Pull the whole rail to the front 3 and remove it.

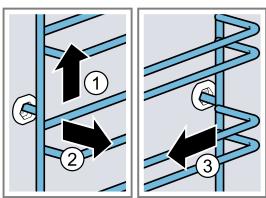


- 3. Clean the rail.
 - → "Cleaning products", Page 22

21.2 Attaching the rails

Notes

- The rails only fit on the right or left.
- For both rails, ensure that the curved rods are at the front
- 1. First, push the rail into the middle of the rear socket ① until the rail rests against the cooking compartment wall, and then push this back ②.
- 2. Push the rail into the front socket ③ until the rail also rests against the cooking compartment wall, and then press this downwards ④.

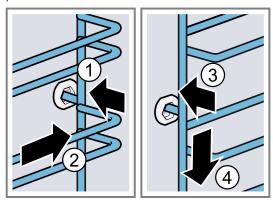

21.3 Removing the pull-out rail


⚠ WARNING – Risk of burns!

The shelf supports get very hot


- ▶ Never touch the shelf supports when hot.
- ► Always allow the appliance to cool down.
- Keep children at a safe distance.

Notes


- Depending on the appliance type, you must change the basic settings for the telescopic rails for appliances with rails and pull-out rails.
 - → "Basic settings", Page 19
- The pull-out rails can be installed at any level as required.
- If necessary, you can equip all levels with a pull-out rail.
- **1.** Push on the side of the tab marked **PUSH** behind the rail, and push the rail to the rear.

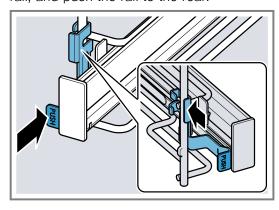


2. Press and hold **PUSH** ① and swing the rail outwards ② until the front retainer ⓐ is detached.

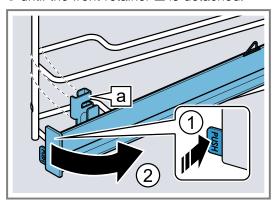

3. Pull the rail out towards the front.

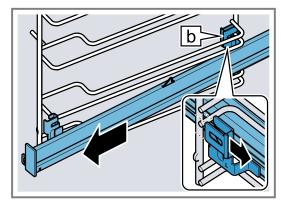

4. Remove the pull-out rail.

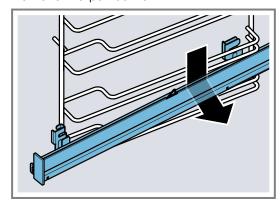

5. Clean the pull-out rail.

→ "Cleaning products", Page 22


Note: Further information:




21.4 Attaching the pull-out rail

Note: The pull-out rails only fit on the right or left. Make sure when you fit them that you can pull them out towards the front.


1. Guide the pull-out rail with the rear retainer b from below behind the two guide rods for the required shelf position and keep it horizontal.

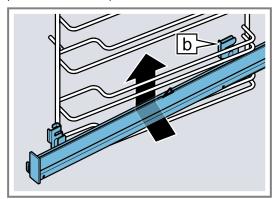


2. Guide the rail lengthways to the rear to the guide rods, and slide both retainers onto each lower rod. In doing so, use the rear retainer b to grip the vertical

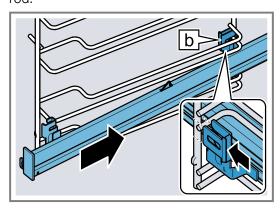

3. Press and hold **PUSH** ① and swing the pull-out rail inwards 2 until the retainer a is attached in the lower rod.

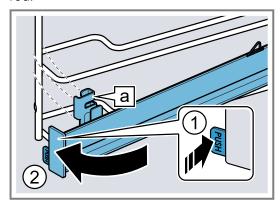

4. Release the PUSH tab.

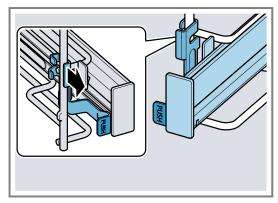

- ▼ The retainer clicks into place.
- 5. Pull the pull-out rail out as far as it will go and slide it back in.

Note: Further information:



22 Appliance door

To clean the appliance door thoroughly, you can disassemble the appliance door.

If the hinges are not secured due to an incomplete lock, they can snap shut with great force.

- ► To detach or attach the appliance door, always turn the two locks as far as they will go.
- ► If the hinge snaps closed when detaching or attaching the appliance door, do not reach into the hinge call the after-sales service.

Note: Further information:





22.1 Detaching the appliance door

Requirements


- Have a torch ready.
- Have a screwdriver ready.
- Have a coin ready.
- 1. To make it easier to see the door lock, shine the torch into the gap beside the appliance door.

2. Hold the screwdriver horizontally ① and use it to push the door lock (black component) on each side of the door upwards as far as it will go ②.

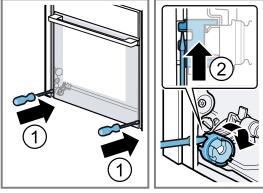

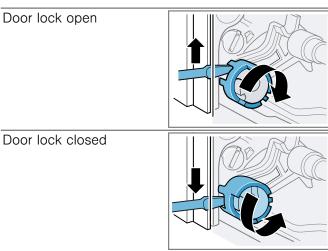


3. Open the appliance door approx. 45° wide.

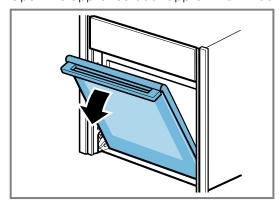


- **4.** Insert the coin in the gap in the lock ① and rotate as far as it will go ②.
 - ► Turn the lock on the left-hand side in a clockwise direction.

 Turn the lock on the right-hand side in an anticlockwise direction.

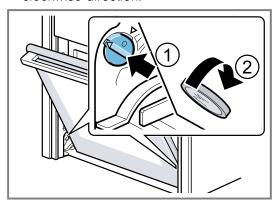

Left-hand lock not secured


The arrows do not point to each other

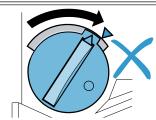

Left-hand lock secured The arrows point to each other





Left-hand lock released

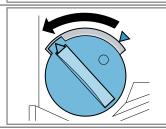

- ✓ The lock audibly engages.
- ATTENTION Opening and closing the appliance door when it is in the lock position damages the door hinges.
 - ► Never force the appliance door open or closed.
 - If the door hinge has been damaged, call the aftersales service.

Carefully move the appliance door back and forth in the direction of both arrows until you hear a quiet click. You can still only move the appliance door slightly.

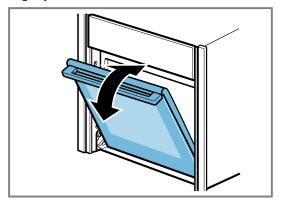

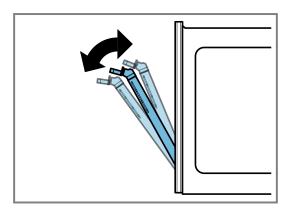


- ▼ The appliance door is in the lock position.
- 6. MARNING Risk of injury!

The appliance door has a weight of 7-10 kg and may fall if it is not handled carefully.

► Handle the appliance door carefully.


Take hold of the appliance door with both hands, one on the left and one on the right, and at the same time slightly rotate the door handle upwards 10 until you are able to pull up the appliance door and remove it ②.

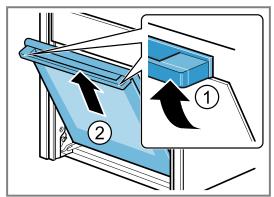


7. Set the appliance door down on a flat, soft, clean surface.

22.2 Attaching the appliance door


- 1. Tip: Ensure that the appliance door is not wedged at an angle and that it is properly fitted in place.
- 2. Attach the appliance door via the left- and right-hand quide rollers simultaneously a.

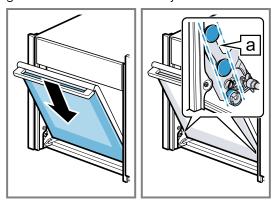

3. Rotate the door handle upwards slightly ①.

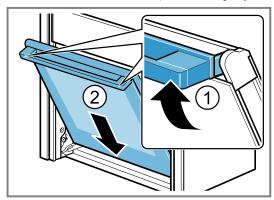

- The appliance door will slide the short distance remaining to the bottom 2.
- 4. Use a coin to release both locks on the appliance door. Insert the coin in the gap in the lock 10 and rotate as far as it will go 2.
 - ► Turn the lock on the left-hand side in an anti-clockwise direction.
 - Turn the lock on the right-hand side in a clockwise direction.

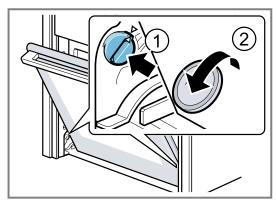


5. Open the appliance door slightly until you hear a quiet click, and then close the appliance door.

6. MARNING – Risk of injury!

If the door locks are unsecured, the appliance door may become detached.

► After attaching the appliance door, close the leftand right-hand door locks.

Hold the screwdriver horizontally ① and use it to push the door lock (black component) on each side of the door downwards as far as it will go 2.

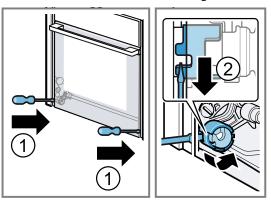

✓ The door lock is closed.

22.3 Removing the door panes

To facilitate cleaning, you can remove the door pane.


⚠ WARNING – Risk of injury!

Components inside the appliance door may have sharp edges.


Wear protective gloves.

Requirements

- Have a screwdriver ready.
- The appliance door is detached.
 - → "Detaching the appliance door", Page 29
- 1. Lay the appliance door with the front side facing down on a flat surface that is soft and clean.
- 2. Undo and remove the left- and right-hand screws on the appliance door.

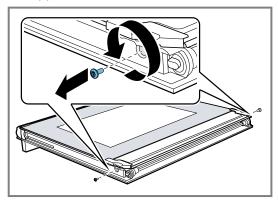


 - 3. Carefully lift the inner pane upwards at an angle ① and remove the holder a 2.
- 4. Carefully lift the inner pane upwards at an angle and remove it in the direction of the arrow 3.







5. Push down on the intermediate pane in the area of a, and carefully lift the retainer b until you are able to pull it out.

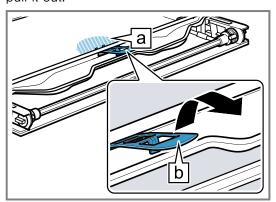

6. Lift the first and second intermediate panes from below 1) and remove them in the direction of the arrow

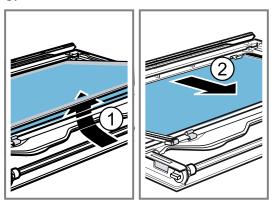

7. Remove the spacers a and seals for cleaning, if re-

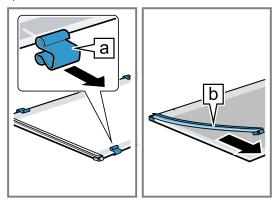

8. MARNING – Risk of injury!

Scratched glass in the appliance door may develop into a crack.

► Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

Clean the door panes on both sides with glass cleaner and a soft cloth.

9. Dry the door panes and refit them. → "Fitting the door panes", Page 32

22.4 Fitting the door panes

⚠ WARNING – Risk of injury!

If a door pane or appliance door has not been installed correctly, this is dangerous.

▶ Make sure that all of the door panes and the appliance door have been correctly fitted before you switch the appliance back on again.

Tip


The appliance has two different intermediate panels depending on the appliance type.

1. The intermediate panels are marked with a triangle symbol.


Install the intermediate panel with a filled triangle A first, then the intermediate panel with an unfilled triangle \triangle .

When fitting the door panes, make sure that they are in the original order.


2. Insert the intermediate pane so that the a arrow on the right-hand side is pointing upwards.

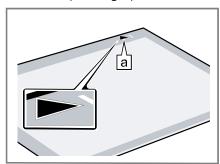

- 3. Check the fit of the four spacers and two seals.
 - ▶ Place the spacers on the centre of the lines ⓐ ①.
 - ▶ Secure the seals at the corners ②.

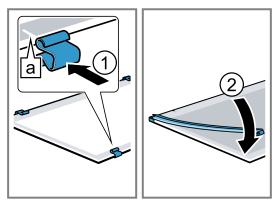


- 4. Insert the intermediate pane with spacers and seals in the direction of the arrow 1.
 - The arrow on the intermediate pane must line up with the arrow on the frame a.
- 5. Insert the second intermediate pane without the spacers and seals, and slide it in the direction of the arrow until it is inserted in the frame 2.

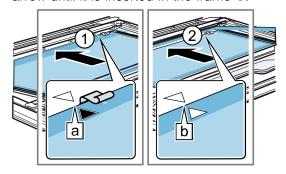


The arrow on the intermediate pane must line up with the arrow on the frame **b**.


6. Push down on the intermediate pane around a, slide the retainer b in at an angle and push down until it clicks into place.

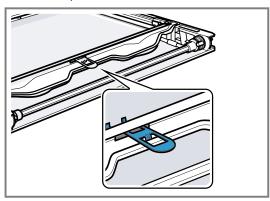


The retainer has been inserted.

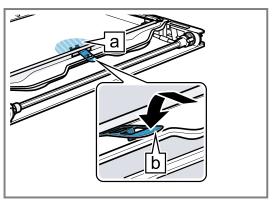


7. Place the inner pane onto the appliance door so that the number @ is legible at the bottom right. Insert the inner pane into the fixing rail b at an angle towards the back.

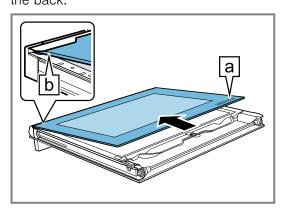


8. Carefully lift the inner pane upwards at an angle and attach the holder a.

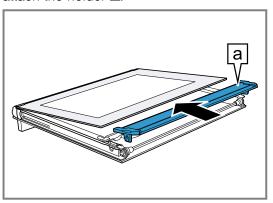

9. Insert the inner pane with the holder a into the opening.

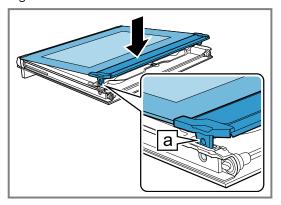

10.Screw both screws back in on the left and right of the appliance door.

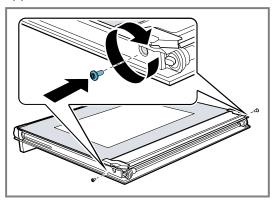

23 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting aftersales service. This will avoid unnecessary costs.

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► If the appliance is defective, call Customer Service.
 - → "Customer Service", Page 36

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ► If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

23.1 Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	The circuit breaker in the fuse box has tripped. • Check the circuit breaker in the fuse box.
	There has been a power cut. ► Check whether the lighting in your room or other appliances are working.
	 Electronics fault 1. Disconnect the appliance from the power supply for at least 30 seconds by switching off the fuse. 2. Reset the basic settings to the factory settings. → "Basic settings", Page 19
Function does not appear in the display.	Classic Mode is activated and hides the function. • Remove 1 or 2 Twist Pad Flex control elements.
"Sprache Deutsch" appears in the display.	There has been a power cut. ► Configure the initial configuration settings. → "Initial use", Page 12
The operation does not start or is interrupted.	Different causes are possible. ► Check the notifications that appear on the display. → "Displaying information", Page 13
	Malfunction ► Call . → "Customer Service", Page 36

Fault	Cause and troubleshooting
Appliance does not heat up.	 Demo mode is switched on. 1. Disconnect the appliance from the power supply for at least 30 seconds by switching off the fuse. 2. Switch off demo mode in the basic settings within approx. 5 minutes. → "Changing basic settings", Page 20
	There has been a power cut. ➤ Open and close the appliance door once after a power failure. ✓ The appliance is checked and is ready to use.
The time is not displayed when the appliance is switched off.	Display switches itself off after a short time. No action required.
Appliance door cannot be opened.	The cleaning function locks the appliance door; ⊕ lights up in the display. ► Allow the appliance to cool down until ⊕ goes out in the display. → "Pyrolytic self-cleaning cleaning function", Page 25
	The childproof lock locks the appliance door. ► Deactivate the childproof lock using "Unlock". → "Childproof lock", Page 19 You can switch off the lock in the basic settings. → "Basic settings", Page 19
Home Connect is not working properly.	Different causes are possible. • Go to www.home-connect.com.
The interior lighting does not work.	Basic setting has been changed. ► Change the basic setting for the lighting. → "Basic settings", Page 19
	The LED light is defective. ► Call . → "Customer Service", Page 36
	 The maximum operating time has been reached. The appliance stops heating. 1. Press "OK" to confirm the notification about the maximum operating time. 2. Check whether you still need the appliance. ▶ Set a cooking time so that the operation does not stop. → "Time-setting options", Page 14
The operation stops.	 The maximum operating time has been reached. The appliance stops heating. 1. Press ⊕ to switch off the appliance. 2. If necessary, press ⊕ to switch the appliance back on and then restart the operation. ► Set a cooking time so that the operation does not stop. → "Time-setting options", Page 14
Error code made up of letters and numbers appears on the display, e.g. E0111.	 The electronics have detected a fault. 1. Switch the appliance off and on again. ✓ If the fault was a one-off, the message disappears. 2. If the message appears again, call the after-sales service. Please specify the exact error message when calling. → "Customer Service", Page 36
The cooking result is not satisfactory.	Settings were unsuitable. Adjustment values, e.g. temperature or cooking time, depend on the recipe, quantity and food. Next time, set lower or higher values. Tip: A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website www.neff-home.com.

- The result of the cleaning function is not satisfactory.

 The cooking compartment was too dirty.

 Remove coarse dirt from the cooking compartment before using the cleaning
 - ► Take the shelf supports out of the cooking compartment to save energy and achieve a better cleaning result in the cooking compartment.

Fault

Cause and troubleshooting

The result of the cleaning function ► Pay attention to the cleaning and care of your appliance.

⇒ "Cleaning and servicing", Page 22

24 Disposal

24.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- Dispose of the appliance in an environmentally friendly manner.
 Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the FU.

25 Customer Service

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website. This product contains light sources from energy efficiency class G. These light sources are available as a spare part and should only be replaced by trained specialist staff.

You can find the information required as per Regulations (EU) 65/2014, (EU) 66/2014 and (EU) 2023/826 online at *www.neff-home.com* on the product and service pages for your appliance, in the area of user manuals and additional documents.

25.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

The rating plate bearing these numbers can be found on the base of the appliance when you open the appliance door.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

You can also display the appliance information in the basic settings.

→ "Basic settings", Page 19

26 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information". ¹ You can download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from ossrequest@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The source code will be made available to you on request.

Please send your request to ossrequest@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: "OSSREQUEST"

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

¹ Depending on the appliance specifications

27 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.neff-home.com among the additional documents on the product page for your appliance.



Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.

A detailed Declaration of Conformity can be found online at www.neff-home.com/uk among the additional documents on the product page for your appliance. 1

2.4 GHz band (2400-2483.5 MHz): Max. 100 mW

5 GHz band (5150-5350 MHz + 5470-5725 MHz): max. 200 mW

	BE	BG	CZ	DK	DE	EE	ΙΕ	EL	ES	
	FR	HR	IT	CY	LI	LV	LT	LU	HU	
	MT	NL	AT	PL	PT	RO	SI	SK	FI	
	SE	NO	CH	TR	IS	UK (NI)				
5 GHz WLAN (Wi-Fi): For indoor use only.										
AL	ВА		MD	ME	MK	RS	UK		UA	
5 GHz WLAN (Wi-Fi): For indoor use only.										

27.1 Statement of Compliance for Great

The full Statement of Compliance according to the Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023 can be found online at www.neff-home.com/uk/ among the additional documents on the product page for your device.

Product type

This statement of compliance covers the products described in this information for use whose model identifier group is seen on the title page. The full model identifier is made up of the characters before the slash in the product number (E no.) which can be found on the rating plate. Alternatively, you can also find the model identifier in the first line of the UK Energy Label.

Name and address of manufacturer

BSH Hausgeräte GmbH. Carl-Werv-Strasse 34, 81739 München, Germany

This statement of compliance is prepared by the manufacturer.

The manufacturer, BSH Hausgeräte GmbH deems that it has complied with

- provision 5.1-1 of ETSI EN 303 645 v2.1.1 and, where relevant, provision 5.1-2 of ETSI EN 303 645
- provision 5.2-1 of ETSI EN 303 645 v2.1.1;
- provision 5.3-13 of ETSI EN 303 645 v2.1.1.

Support period

BSH Hausgeräte GmbH will provide security updates that are necessary to maintain the main functions free of charge until at least 28/02/2034.

28 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We have perfectly tailored these recommendations to your appliance.

Tip: A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website www.neff-home.com.

28.1 General cooking tips

Take note of the following information when cooking all types of food.

- The temperature and cooking time depend on the amount of food and the recipe. Settings ranges are specified for this reason. Try using the lower values to start with.
- The setting values apply to food placed in the cooking compartment while the cooking compartment is still cold. If you want to preheat anyway, do not place accessories into the cooking compartment until it has finished preheating.

¹ Only applies to Great Britain

 Remove any accessories that are not being used from the cooking compartment.

ATTENTION

Acidic food may damage the wire rack

► Do not place acidic food, such as fruit or food with an acidic marinade directly on the wire rack.

Information for those allergic to nickel

In rare cases, small amounts of nickel may pass into the food.

You can buy suitable accessories from customer service, from specialist retailers or online.

→ "Other accessories", Page 12

28.2 Baking tips

- Dark-coloured metal baking tins are most suitable for baking cakes, bread and other baked goods.
- Use wide, shallow cookware for bakes and gratins.
 Food takes longer to cook in deep, narrow cookware and it browns more on top.
- Silicone moulds are not suitable.
- If you are cooking bakes directly in the universal pan, place the universal pan into the cooking compartment at level 2.
- The setting values for bread dough apply to both dough placed on a baking tray and dough placed in a loaf tin.

ATTENTION

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- Never pour water into the cooking compartment when it is still hot.
- Never place cookware containing water on the cooking compartment floor.

Shelf positions

Baking on one level	Height
Tall baked items and tins/dishes on the wire rack	2
Shallow baked items/baking tray	3

Onanow bared items/ barring tray	
Baking on two or more levels	Height
2 levels	
Universal pan	3
Baking tray	1
2 levels	
Baking tins/dishes on 2 wire racks	3
	1
3 levels	
Baking tray	4
Universal pan	3
Baking tray	1
4 levels	
4 wire racks with greaseproof pa-	4
per	3
	2

Use the CircoTherm hot air heating function.

Note: Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.

28.3 Roasting, braising and grilling tips

- The recommended settings are for fridge-temperature food and unstuffed, oven-ready poultry.
- Place the poultry onto the cookware breast-side or skin-side down.
- Turn roasting joints, grilled items or whole fish after approx. ½ to ¾ of the specified time.

Roasting on the wire rack

Food roasted on the wire rack will become very crispy on all sides. You can roast large poultry, for example, or multiple individual pieces at the same time.

- Roast pieces of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be roasted directly on the wire rack.
- To catch any liquids that drip down, place the universal pan, with the wire rack inside it, into the cooking compartment at the specified shelf height.
- Add up to ½ litre of water to the universal pan, depending on the size and type of food that you want to roast.

You can make a sauce from the juices that are collected. This also means that less smoke is produced and the cooking compartment does not become as dirty.

Roasting in cookware

If you cover the cookware when you cook your food, this will keep the cooking compartment cleaner.

General information about roasting in cookware

- Use heat-resistant, ovenproof cookware.
- Place the cookware on the wire rack.
- Glass cookware is best.
- Follow the manufacturer's instructions for your roasting dishes.

Roasting in uncovered cookware

- Use a deep roasting dish.
- If you do not have any suitable cookware, you can use the universal pan.

Roasting in covered cookware

- Use a suitable lid that seals well.
- When roasting meat, there should be at least 3 cm between the food and the lid. The meat may expand.

Very hot steam may escape when the lid is opened after cooking. Steam may not be visible, depending on the temperature.

- ► Lift the lid in such a way that the hot steam can escape away from you.
- ► Keep children away from the appliance.

Grilling

Grill food if you want it to be crispy.

The "Grill" type of heating is good for cooking thinner pieces of poultry, meat and fish such as steaks, drum-

Circo-roasting is very well suited to cooking whole poultry and fish, as well as meat, e.g. roast pork with crackling.

- When grilling several food items, choose pieces that are of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be grilled directly onto the wire rack.
- To catch any liquids that drip down, place the universal pan into the cooking compartment at least one level below the wire rack.

Notes

- The grill element switches on and off continuously.
 This is normal. The temperature that you set determines how frequently this occurs.
- Smoke may be produced when grilling.

28.4 Cooking instructions for ready meals

- The cooking result greatly depends on the quality of the food. Pre-browning and irregularities may already be present in the food before cooking.
- Do not use frozen products that are covered with a thick layer of ice. Remove any ice on the food.
- Take ready meals out of the packaging.
- If you are warming or cooking the ready meal in cookware, make sure that the cookware is heat-resistant.
- Distribute foods that are in the form of separate pieces, such as bread rolls and potato products, so that they are spread out flat and evenly on the accessory. Leave a little space between the individual pieces.
- Follow the manufacturer's instructions on the packaging.

28.5 List of foods

Recommended settings for a variety of foods, sorted into food categories.

Recommended settings for various types of food

Food	Accessory/cookware	Height	Type of heating	Temperature in °C	Cooking time in mins
Sponge cake, delicate	Ring-shaped tin or Loaf tin	2	= =	150-170	60-80
Sponge cake, 2 levels	Ring-shaped tin or Loaf tin	3+1	L	140-160	60-80
Fruit tart or cheesecake with shortcrust pastry base	Springform cake tin, diameter 26 cm	2	= =	170-190	55-80
Sponge flan, 6 eggs	Springform cake tin Ø 28 cm	2	L	150-170 ¹	30-50
Sponge flan, 6 eggs	Springform cake tin Ø 28 cm	2	0	150-160	50-60
Shortcrust tart with moist topping	Universal pan	3	=	160-180	55-75
Yeast cake with moist topping	Universal pan	3	= =	180-190	30-40
Swiss roll	Baking tray	3	L	180-190 ¹	10-15
Muffins	Muffin tray	3	=	170-190	15-20
Small yeast cakes	Baking tray	3	=	160-180	25-35
Biscuits	Baking tray	3	L	140-160	15-30
Biscuits, 2 levels	Universal pan + Baking tray	3+1	L	140-160	15-30
Biscuits, 3 levels	x 2 Baking tray + Universal pan	4+3+1	L	140-160	15-30
Bread, 750 g	Universal pan or Loaf tin	2	L	1. 210-220 2. 180-190 ¹	1. 10-15 2. 25-35
Bread, 1500 g	Universal pan or Loaf tin	2		200-210	35-45

¹ Preheat the appliance.

Food	Accessory/cookware	Height	Type of heating	Temperature in °C	Cooking time in mins
Bread, 1500 g	Universal pan or Loaf tin	2	S	1. 210-220 2. 180-190 ¹	1. 10-15 2. 40-50
Flatbread	Universal pan	3	Ξ	250-270	20-25
Bread rolls, fresh	Baking tray	3	=	180-190	20-30
Pizza, fresh, on a baking tray	Baking tray	3	<u>&</u>	180-200	20-30
Pizza, fresh, on a baking tray, 2 levels	Universal pan + Baking tray	3+1	L	180-190	35-45
Pizza, fresh, thin-crust, on a pizza tray	Pizza tray	2	<u>&</u>	220-230	20-30
Börek	Universal pan	1		200-220 ¹	20-30
Börek	Universal pan	1		200-220 ¹	20-30
Quiche	Dark coated quiche tin	3	<u>&</u>	190-210	30-40
Tarte flambée	Universal pan	3	=	260-270 ¹	10-15
Bake, savoury, cooked ingredients	Ovenproof dish	2	=	200-220	30-60
Potato gratin, raw ingredients, 4 cm deep	Ovenproof dish	2	<u>&</u>	160-190	50-70
Chicken, 1.3 kg, unstuffed	Wire rack	2	Ĩ.	200-220	60-70
Small chicken portions, 250 g each	Wire rack	3	Ä	220-230	30-35
Goose, unstuffed, 3 kg	Wire rack	2	Ĭ.	160-180	120-150
Joint of pork without rind, e.g. neck, 1.5 kg	Uncovered cookware	2	Ä	180-190	110-130
Joint of pork without rind, e.g. neck, 1.5 kg	Uncovered cookware	2		190-200	120-140
Fillet of beef, medium, 1 kg	Wire rack	2	Ĭ.	210-220	40-50
Pot-roasted beef, 1.5 kg	Covered cookware	2	Ĭ.	200-220	130-160
Pot-roasted beef, 1.5 kg	Covered cookware	2		200-220	140-160
Sirloin, medium, 1.5 kg	Wire rack	2	Ĭ.	220-230	60-70
Burger, 3-4 cm thick	Wire rack	4	L	290	25-30 ²
Leg of lamb, boned, medium, 1.5 kg	Uncovered cookware	2	Ä	170-190	50-80
Fish, grilled, whole, 300 g, e.g. trout ³	Wire rack	2	Ä	170-180	20-30

Yoghurt

Use your appliance to make yoghurt.

Making yoghurt

- **1.** Remove the accessories and shelves from the cooking compartment.
- 2. Heat 1 litre of whole milk (3.5% fat) to 90 °C on the hob and then leave it to cool down to 40 °C. It is sufficient to heat UHT milk to 40 °C.
- 3. Mix 150 g of chilled yoghurt into the milk.
- **4.** Pour the mixture into small containers, e.g. cups or small jars.
- **5.** Cover the containers with film, e.g. cling film.
- **6.** Place the containers on the cooking compartment floor.
- **7.** Use the recommended settings when configuring the appliance settings.
- **8.** After making the yoghurt, leave it to cool in the refrigerator for at least 12 hours.

¹ Preheat the appliance.

 $^{^{2}}$ Turn the dish 2/3 of the way through the cooking time.

³ Slide the universal pan underneath the wire rack.

Recommended settings for desserts and compote

Food	Accessory/cookware	Height	Type of heating	Temperature in °C	Cooking time in mins
Yoghurt	Individual moulds	Cooking compart- ment floor		35-40	8-9

ing.

28.6 Special cooking methods and other applications

Information and recommended settings for special cooking methods and other applications, e.g. low-temperature cooking.

Low-temperature cooking

For all prime cuts which are to be cooked rare or "à point". When slow cooking at low temperatures, meat and poultry remain juicy and tender.

Low-temperature cooking poultry or meat

Note: When using the low-temperature cooking type of heating, you cannot delay the start of the programme by setting an end time.

Requirement: The cooking compartment is cold.

- Use fresh, hygienically perfect meat. Pieces without bones and without a lot of connective tissue are most suitable.
- **2.** Place the cookware onto the wire rack at level 2 in the cooking compartment.
- **3.** Preheat the cooking compartment and cookware for approx. 15 minutes.
- **4.** Sear the meat on all sides on the hob at a very high heat.

5. Immediately place the meat into the pre-warmed cookware in the cooking compartment.
To ensure that the temperature in the cooking compartment remains constant, keep the cooking compartment.

partment door closed during low-temperature cook-

Tips for low-temperature cooking

Here you will find tips for achieving good results when low-temperature cooking food.

Issue	Tip
You want to cook a duck breast at a low temperature.	 Place the cold duck breast into a pan. Sear the skin side first. Cook the duck breast at low temperature. After low-temperature cooking, grill the duck breast for 3 to 5 minutes until crispy.
You want to serve your low-temperature cooked meat as hot as possible.	 Preheat the serving plate. Make sure that the accompanying sauces are very hot when you serve them.

Recommended settings for low-temperature cooking

Food	Accessory/cook- ware	Height	Searing time in mins	Type of heating	Temperature in °C	Cooking time in mins
Duck breast, medium rare, 300 g each	Uncovered cook- ware	2	6-8	<u> </u>	90 1	45-60
Fillet of pork, whole	Uncovered cook- ware	2	4-6	<u></u>	80 1	45-70
Fillet of beef, 1 kg	Uncovered cook- ware	2	4-6	<u>8</u>	80 1	90-120
Veal medallions, 4 cm thick	Uncovered cook- ware	2	4	<u> </u>	80 1	30-50
Saddle of lamb, boned, 200 g each	Uncovered cook- ware	2	4	<u>8</u>	80 1	30-45

28.7 Test dishes

The information in this section is provided for test institutes to facilitate testing of the appliance in accordance with EN 60350-1.

Baking

- The setting values apply to food that is placed into a cold cooking compartment.
- Take note of the information on preheating in the recommended settings tables. These setting values apply without rapid heat-up.
- For baking, use the lower of the temperatures indicated first.
- Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.
- Shelf positions when baking on 2 levels:
 - Universal pan: Shelf position 3

¹ Preheat the appliance.

- Baking tray: Shelf position 1
- Baking tins on the wire rack:
 First wire rack: Shelf position 3
 Second wire rack: Shelf position 1
- Shelf positions when baking on 3 levels:
 - Baking tray: Shelf position 4Universal pan: Shelf position 3

- Baking tray: Shelf position 1
- Hot water sponge cake
 - When baking on 2 levels, place the springform tins at diagonally opposite corners of the wire racks.
 - As an alternative to a pan support, you can also use the Air Fry baking tray offered by us.

Recommended settings for baking

Food	Accessory/cookware	Height	Type of heating	Temperature in °C	Cooking time in mins
Shortbread	Baking tray	3	=	140-150 ¹	25-40
Shortbread	Baking tray	3	L	140-150 ¹	25-40
Shortbread, 2 levels	Universal pan + Baking tray	3+1	L	140-150 ¹	30-40
Shortbread, 3 levels	x 2 Baking tray + Universal pan	4+3+1	L	130-140 ¹	35-55
Small cakes	Baking tray	3	= =	160 ¹	20-30
Small cakes	Baking tray	3	L	150 ¹	25-35
Small cakes	Baking tray	3	00	160 ²	20-30
Small cakes, 2 levels	Universal pan + Baking tray	3+1	L	150 ¹	25-35
Small cakes, 3 levels	x 2 Baking tray + Universal pan	4+3+1	J.	140 1	35-45
Hot water sponge cake	Springform cake tin, diameter 26 cm	2	=	160-170 ³	25-35
Hot water sponge cake	Springform cake tin, diameter 26 cm	2	L	150-160 ³	30-40
Hot water sponge cake, 2 levels	x 2 Springform cake tin, diameter 26 cm	3+1	L	150-170 ³	30-50
Apple pie, x 2	x 2 Springform cake tin, diameter 20 cm	2	°,	180-190²	75-90

Grilling

Recommended settings for grilling

Food	Accessory/cookware	Height	Type of heating	Temperature in °C	Cooking time in mins
Toasting bread	Wire rack	4	***	290 ²	4-6

¹ Preheat the appliance for five minutes. Do not use the rapid heating function.

² Do not preheat the appliance.

³ Preheat the appliance. Do not use the rapid heating function.


29 Installation instructions

Observe this information when installing the appliance.



29.1 Scope of delivery

After unpacking all parts, check for any damage in transit and completeness of the delivery.

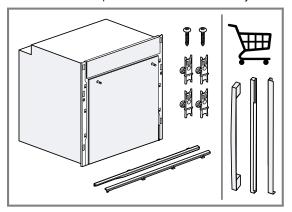

Depending on the appliance configuration, different handles and panels can be used. An example is shown in the picture.


29.2 General installation instructions

Follow these instructions before you start installing the appliance.

- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for damages incurred as a result of incorrect installation.
- Do not use the door handle for the transport or installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Proceed in accordance with the installation sheets for installing accessories.
- Fitted units must be heat-resistant up to 95 °C, and adjacent unit fronts up to 70 °C.
- Do not install the appliance behind a decorative door or the door of a kitchen unit. There is a risk of overheating.
- Cut-out work on the units should be carried out before installing the appliance. Remove any shavings. Otherwise, the correct opera-

tion of electrical components may be adversely affected.

- Position the appliance on a horizontal sur-
- The mains socket for the appliance must either be located in the hatched area @ or outside of the area where the appliance is installed.
- 1 Any unsecured units must be secured to the 1.wall using a standard bracket **b**.

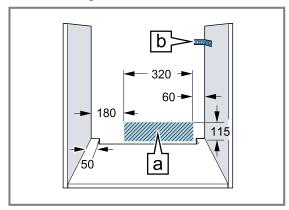

- Wear protective gloves so that you do not cut yourself. Parts that are accessible during installation may have sharp edges.
- Dimensions of the figures in mm.

⚠ WARNING – Risk of electric shock!

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children, not even through the drawers and kitchen cabinets underneath. This must be ensured through the installation. In the case of an island unit, a closed back panel is required.



Caution: Magnetism

Caution for people with pacemakers Permanent magnets are used in the control panel and in the control elements. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

- ▶ Persons with electronic implants must stand at least 10 cm away from the control panel and the magnetic controls.
- ▶ Never put the control in your pockets.

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ► Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.


ATTENTION

Carrying the appliance by the door handle could break it. The door handle cannot support the weight of the appliance.

► Do not carry or hold the appliance by the door handle.


29.3 Appliance dimensions

You will find the dimensions of the appliance here

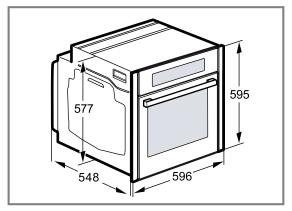

29.4 Installation below a worktop


Observe the installation dimensions and the installation instructions when installing below a worktop.

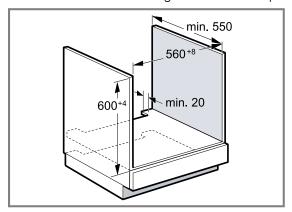

- To ventilate the appliance, the intermediate floor must have a ventilation cut-out.
- The worktop must be secured to the fitted unit.
- Observe any available installation instructions for the
- Observe different national installation instructions for the hob.

29.5 Installation underneath a hob

If the appliance is installed under a hob, the following minimum dimensions must be adhered to (including substructure, if applicable).

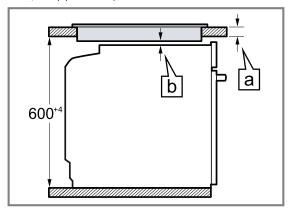


The minimum worktop thickness b a is based on the required minimum clearance a.

Hob type	a raised in mm	a flush in mm	b in mm
Induction hob	37	38	5
Full-surface induction hob	47	48	5

Hob type	a raised in mm	a flush in mm	b in mm
Gas hob	27	38	5 ¹
Electric hob	27	30	2

29.6 Installation in a tall unit


Observe the installation dimensions and the installation instructions when installing in a tall unit.

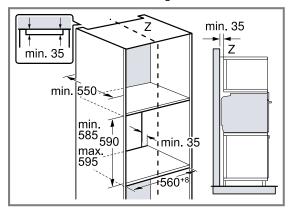

- To ventilate the appliance, the intermediate floors must have a ventilation cut-out.
- Only fit the appliance up to a height which allows accessories to be easily removed.


29.7 Installing two appliances on top of each other

Your appliance can also be installed above or below another appliance. Observe the installation dimensions and the installation instructions when installing appliances on top of each other.

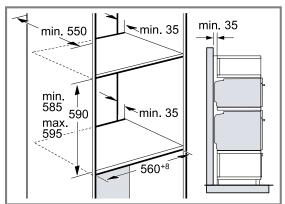

- To ventilate the appliances, the intermediate floor must have a ventilation cut-out.
- To ensure sufficient ventilation of the two appliances, there must be a ventilation opening of at least 200 cm² in the base area. To do this, trim the base panel or fit a ventilation grille.


• Ensure that air exchange is guaranteed in accordance with the diagram.

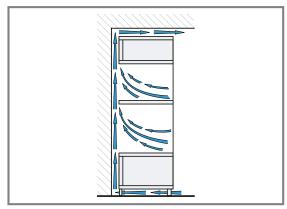

 Only fit appliances up to a height that allows accessories to be easily removed.

29.8 Corner installation

Observe the installation dimensions and the installation instructions when installing in a corner.

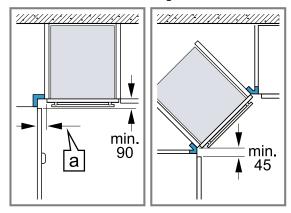

 To ensure that the appliance door can be opened, you must take the minimum dimensions into consideration when installing in a corner. The dimension a is dependent on the thickness of the unit front and the handle.


29.9 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- The appliance corresponds to protection class I and must only be operated with a protective earth connection
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to the local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.
- The appliance must only be connected using the power cable provided.

¹ Observe different national installation instructions for the hob.

 The power cable must be plugged in at the rear of the appliance until you hear a clicking sound. A 3 m power cable can be obtained from customer service.

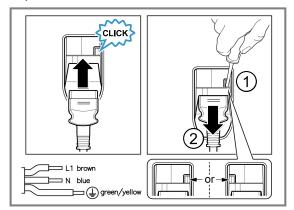

- The power cable must only be replaced with a cable from the original manufacturer. This is available from after-sales service.
- Contact protection must be guaranteed by the installation.
- If the display on the appliance remains dark, it has not been connected correctly. Disconnect the appliance from the mains and check the connection.

Electrically connect the appliance with the protective contact plug

Note: The appliance must only be connected to a protective contact socket that has been correctly installed.

► Insert the plug into the protective contact socket. When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

Electrically connecting an appliance without a protective contact plug

Note: Only licensed specialists may connect the appliance. Damage caused by incorrect connection is not covered under the warranty.

An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

- 1. Identify the phase and neutral conductors in the socket.
 - The appliance may be damaged if it is not connected correctly.
- 2. Connect the hob in accordance with the connection diagram.
 - See the rating plate for the voltage.
- **3.** Connect the wires of the mains power cable according to the colour coding:
 - ► Green/yellow = Protective conductor ⊕
 - ► Blue = Neutral conductor
 - ► Brown = Phase (external conductor)

29.10 Installing the appliance

⚠ WARNING – Risk of injury!

Opening the appliance door without installing the door handle and panels may result in injury.

 Operate the appliance only with the door handle and the panels fitted.

Notes


- Do not use a cordless screwdriver to secure the door handle. This may become damaged.
- Further information:

The transit bolts must be kept in case the appliance is transported at a later time.


Video tutorial for installing the door handle and panels:




- **1.** Open the appliance door slightly and pull the red triangular transport locks to the outside.
- 2. Removing the two transport locks
 - ► Press on the sloped surface on the rear of the transport lock ①.
 - Press and hold the sloped surface and pull the transport lock upwards and out ②.

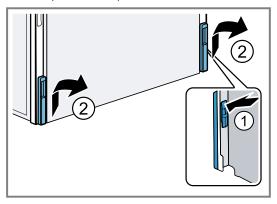


- **3.** Unscrew the screws on the door handle a little ①.
- 4. Attach the door handle 2.
 - The larger hole must be be directed inwards.
 - ► Check whether the silicone base is between the panel and the door handle.

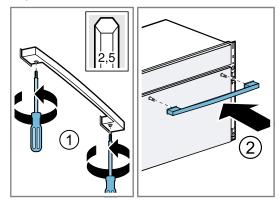

5. Tighten the screws until the door handle is secured.

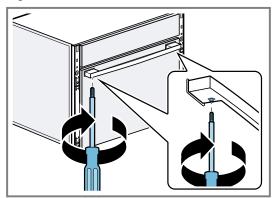


- **6.** Push the appliance in fully. Do not kink or trap the connection cable, or route it over sharp edges.
- 7. Centre the appliance.

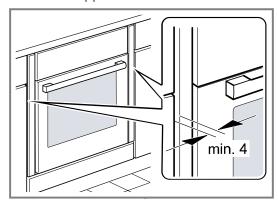


There must be an air gap of at least 4 mm between the appliance and adjacent unit fronts.


8. Attach the four fastening elements. \rightarrow *Page 48*

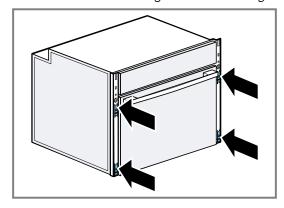


9. Screw the appliance into place.

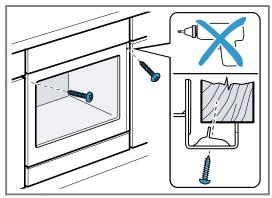


10.Insert the left- and right-hand intermediate strips into the notches provided for this purpose ① and slide them downwards 2.

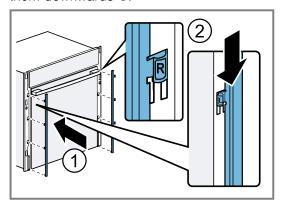

- 11. Push on the left- and right-hand panels at the height of the fastening elements until a clicking sound is heard.
 - ► The panel with the sticker is intended for the lefthand side of the inside.

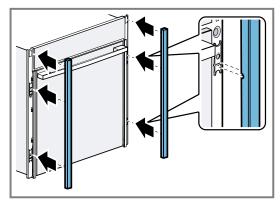

- ✓ The panels are engaged.
- 12. Check whether the left- and right-hand panels are vertically aligned.
- **13.**If necessary, align the panels. → Page 48
- **14.** If required, you can adjust the height of the appliance door using the adjustment screws on the left and right ②. To do this, push the intermediate strips upwards ①.

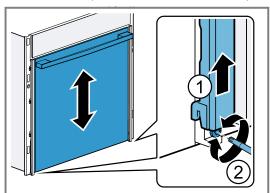


Note: The gap between the worktop and the appliance must not be closed by additional battens.


Thermal insulation strips must not be fitted to the side panels of the surround unit.

29.11 For handleless kitchens with vertical bar handle strips:


1. Attach a suitable filling piece on both sides in order to cover any sharp edges and to guarantee safe installation.

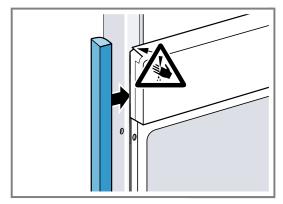

- 2. Secure the filling piece to the unit.
- 3. Pre-drill the filling piece and the unit to establish a screw connection.

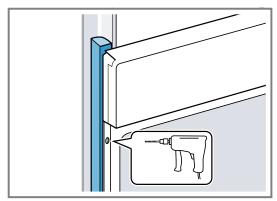

4. Secure the appliance using a suitable screw.

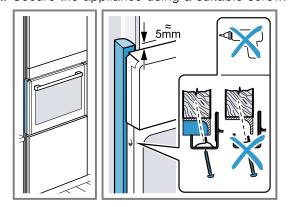


29.12 Attaching the fastening elements

In order to attach the panels, the four fastening elements must be fitted beforehand.


- 1. Push the eccentric forwards from the fastening element ①.
- 2. Push the eccentric backwards from the fastening element 2.
- The eccentric breaks off.

3. Push the eccentric backwards into the fastening element 3.

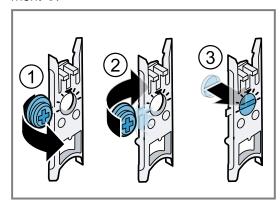

Attach the red fastening elements at the top. Attach the green fastening elements at the bottom.

4. Slide in the fastening element at the bottom ① and press down at the top 2 until it clicks into place.

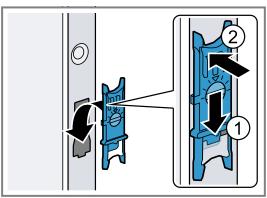


29.13 Aligning the panels


ATTENTION

Unsuitable tools may damage the surface of the appli-

- Only use plastic tools.
- ▶ Do not use pointed or sharp tools.
- 1. Slide a plastic tool, e.g. one of the other fastening elements, into the gap between the appliance and the panel.
- 2. Pull the tool from the appliance with panel; a clicking noise can be heard when this is loosened.

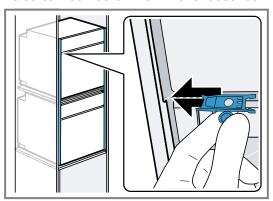

3. Turn the fastening element to the left or right to adjust the alignment of the panels.

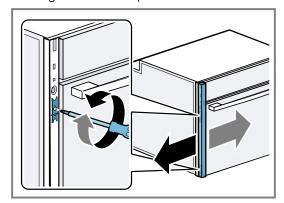

4. Refit the panels.

29.14 Removing the door handle and side panels

ATTENTION

Unsuitable tools may damage the surface of the appliance.

- Only use plastic tools.
- ▶ Do not use pointed or sharp tools.
- 1. Loosen the screws on the door handle and remove the door handle.
- 2. Remove the left- and right-hand panels using a plastic

29.15 Removing the appliance

- 1. Disconnect the appliance from the power supply.
- 2. Remove the left- and right-hand panels.
- **3.** Undo the fastening screws.
- 4. Lift the appliance slightly and pull it out completely.





Valid within Great Britain: Imported to Great Britain by BSH Home Appliances Ltd. Grand Union House Old Wolverton Road Wolverton, Milton Keynes MK12 5PT United Kingdom



Register your product online **neff-home.com**

BSH Hausgeräte GmbH Carl-Wery-Straße 34 81739 München, GERMANY



9001841090 (050414) REG25 en