

N 70, ELECTRIC HOB, 80 CM, BLACK, SURFACE MOUNT WITHOUT FRAME T18FD36X0





Optional accessories

Z9381X0 Intermediate bottom Z9428FE0 Iron pan Ø 18 / 28 cm Z943SE0 Set of 2 pots and 1 pan

Standalone electric hob with TouchControl

- $\sqrt{}$ Touch Control Control your hob with a simple touch.
- $\sqrt{\mbox{ Power Boost}}$ An extra surge of heat when you need fast results.
- $\sqrt{\,}$ Roasting Zone automatically switches on when using a roaster.

Features

T	
Technical Data	
Product name/family:	. Cooking zone ceramic
Built-in / Free-standing:	Built-in
Energy input:	Electric
Number of cooking zones:	
Required niche size for installation (HxWxD) 500-500 mm	:45 x 780-780 x
Width of the appliance:	802 mm
Dimensions:	
Dimensions of the packed product (HxWxD)	
mm	
Net weight:	9.8 kg
Gross weight:	11.5 kg
Residual heat indicator:	Separate
Location of control panel:	Front
Basic surface material:	Ceramic
Color of surface:	Black
EAN code:	4242004211822
Voltage:	220-240 V
Frequency:	50; 60 Hz





N 70, ELECTRIC HOB, 80 CM, BLACK, SURFACE MOUNT WITHOUT FRAME T18FD36X0

Features

Design

- · Bevelled front edge
- 80 cm: space for 4 pots or pans.

Flexibility of cooking zones

- Ring zone roaster: use roasters on the extendable cooking zone.
- Ring zone double: use regular or larger cookware on the extendable cooking zone.
- Cooking zone front left: 120 mm, 210 mm, 2.1 KW (max. power 2.6 KW)
- Cooking zone rear left: 145 mm, 1.2 KW
- Cooking zone middle: 230 mm, 180 mm, 2.4 KW (max. power 3.4 KW)
- Cooking zone front right: 170 mm, 265 mm, 1.8 KW

Usage convenience

- Touch control: control the power with imprinted +/- touch buttons.
- Variable 17-stage power settings for each zone: precisely adapt the heat with 17 power levels (9 main levels and 8 intermediate levels).
- Keep warm function: keep dishes warm at preset low power level.
- Timer with automatic shut off for all zones
- : switches off the cooking zone at the end of the time set (e.g. for boiled eggs).
- LED timer for each zone with switch off function and acoustic signal
- $\bullet\,$: an alarm sounds at the end of the time set (e.g. for pasta).

Time saving & efficiency

- Front left, Rear center: boil water more quickly thanks to 20% more energy than at the highest standard level.
- ReStart function: in case of unintentional switch-off, this feature restores all previous settings by switching on the hob again within 4 seconds.
- Quick-Off: quickly switch off a cooking zone with one longer touch.

Safety

- 2 stage residual heat indicators: indicates which cooking zones are still hot or warm.
- Control panel lock: prevent unintended activation of the hob.
- Control panel suspension: wipe overboiled liquids without unintentionally changing settings (blocking all touch buttons for 30 seconds)
- \bullet Main switch: switch off all cooking zones at the touch of a button.
- Power on indicator light: indicates if the hob is heating.
- Safety cut out facility: for safety reasons, heating stops after a preset time if not used (possible to customise).
- Energy consumption display: shows the electricity consumption of the last cooking process.


Installation

- Dimensions of the product (HxWxD mm): 45 x 802 x 522
- Required niche size for installation (HxWxD mm): 45 x 780 x (500 -500)
- Min. worktop thickness: 16 mm
- Connected load: 9.3 KW



N 70, ELECTRIC HOB, 80 CM, BLACK, SURFACE MOUNT WITHOUT FRAME T18FD36X0



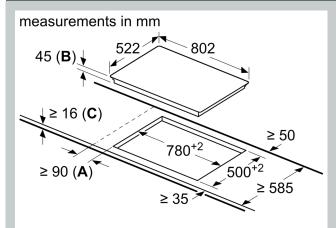

- **A**: Minimum distance from the hob cut-out to the wall.
- **B**: Recessed depth
- C: With fitted oven underneath min. 20, possibly more; see space requirements for the oven.